 
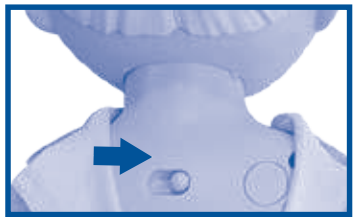 


baby alive Princess Ellie GROWS UP!

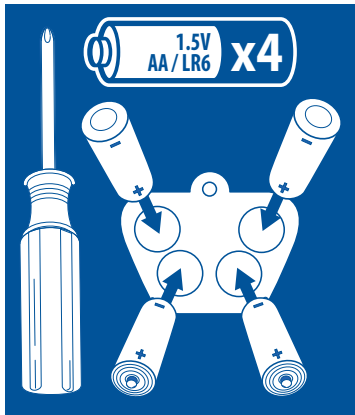

OFF – ON

Insert batteries then switch to ON position


3+

Adult Assembly Required



STEP 3: MAKE HER A PRINCESS

- Use her princess accessories to dress her up.
- Place tiara hair extension on doll's head and style her hair.
- Complete her look by placing her princess skirt over her existing outfit.

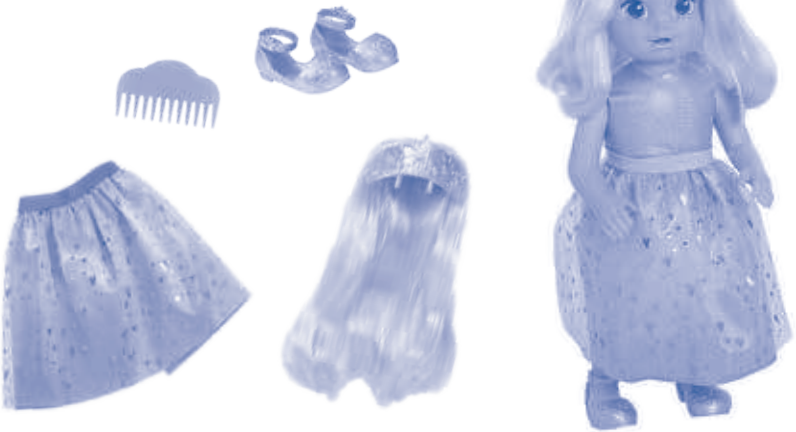

HELPING BABY GROW

- Movement (rocking or bouncing)
- Giving her a drink or feeding her (sippy cup & spoon/bowl)
- Inserting pacifier
- As baby grows, hold her hands to help her stand.

TIPS:

- Doll grows little by little with care. To help baby grow up quicker, repeat the activations described. In addition to activations, a period of time will need to pass between stages.
- Pressing the Growth button on her back for 3 seconds will make her grow up faster.

SLEEP MODE

- If no interactions for a little over a minute, doll falls asleep. Doll will only fall asleep with her eyes closed at her smallest Baby stage and tallest Princess stage.
- To wake doll, feed her, give her a drink or insert pacifier.
- Doll will wake up in the same growth stage that she went to sleep in.

STEP 2: CHECK HER GROWTH

- You'll hear a chime sound each time she grows. Your baby will continue to grow little by little as you nurture and play with her, increasing in height several times until she's fully grown.
- As she grows, measure her height using the included growth chart.
- When fully grown, doll will say, "Wow! I'm becoming a princess!"



SWITCH LANGUAGE

- Press Growth button on doll's back for more than 10 seconds to switch language.
- Note: Doll will remember the selected language when turned OFF and then back ON again.



PLAY AGAIN

- Baby-Princess play cycle can be repeated over and over.
- In Princess Mode, reset and return to Baby by pressing the Growth button on her back for 3 seconds.
- In Baby Mode, press the Growth button on her back for 3 seconds to make her grow into a Princess.
- Doll can also be reset by turning her back switch ON/OFF.



- Do not submerge doll in water.
- Do not wet doll's hair. Surface clean only.
- Use only included BABY ALIVE accessories.
- Do not use styling tools or products of any kind.

IMPORTANT: BATTERY INFORMATION

Retain this information for future reference. Batteries should be replaced by an adult.

CAUTION:

TO AVOID BATTERY LEAKAGE

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and – polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short-circuit the supply terminals.
6. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.

Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAN ICES-3 (B) / NMB-3 (B)

F5209 PN00075094

BABY ALIVE and HASBRO and all related trademarks and logos are trademarks of Hasbro, Inc. © 2022 Hasbro.

 
 
Hasbro, Pawtucket, RI 02861-1059 USA. HASBRO CANADA, LONGUEUIL, QC, CANADA J4G 1G2. US/CANADA TEL. 1-800-255-5516. Importado por: HASBRO DE MÉXICO, S. DE R.L. DE C.V. Boulevard Manuel Ávila Camacho #32, piso 3, Colonia Lomas de Chapultepec I Sección, Alcaldía Miguel Hidalgo, C.P. 11000, Ciudad de México, México. Centro de Servicio para México: TEL. 5876-2998 y para el interior de la República TEL. 01-800-7-12-62-25. Manufactured by: Hasbro SA, Rue Emile-Boéchat 31, 2800 Delémont, CH. Represented by: Hasbro, De Entree 240, 1101 EE Amsterdam, NL.

© Hasbro UK Ltd., P.O. Box 43, Newport, NP19 4YH, UK.



baby alive

Princess Ellie GROWS UP!

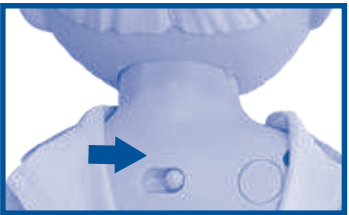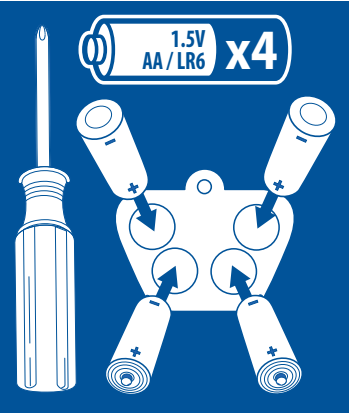

APAGAR – ENCENDER

Introduce las pilas, luego mueve el interruptor a ENCENDER

3+

Se necesita el montaje por parte de un adulto.



PASO 3: ¡HAZ DE ELLA UNA PRINCESA!

- Utiliza sus accesorios de princesa para vestirla.
- Coloca la tiara-extensión de cabello en la cabeza de la muñeca y péinala.
- Completa su atuendo poniéndole la falda de princesa sobre la ropa que ya tiene puesta.



PARA AYUDAR A CRECER A TU BEBÉ

- Muévela (meciéndola o con movimientos de rebote).
- Dale de beber o aliméntala (con la tacita, la cuchara y el bol).
- Dale el chupete.
- Mientras tu bebé crece, tómale las manos para ayudarla a ponerse de pie.

CONSEJOS:

- La muñeca crecerá poco a poco gracias a tus cuidados. Para que tu bebé crezca más rápido, repite las activaciones descritas. Además de las activaciones, deberá transcurrir un periodo de tiempo entre las etapas.
- Crecerá más rápido al presionar el botón Growth en su espalda por 3 segundos.

MODO SUEÑO

- Si no hay interacciones durante algo más de un minuto, la muñeca se quedará dormida. La muñeca solo se quedará dormida con los ojos cerrados en su etapa de bebé más pequeña y en su etapa de princesa más alta.
- Para despertar a la muñeca, aliméntala, dale de beber o dale el chupete.
- La muñeca se despertará en la misma etapa de crecimiento en la que se encontraba al quedarse dormida.


PASO 2: COMPROBAR SU CRECIMIENTO

- Escucharás un sonido cada vez que crezca. Tu bebé seguirá creciendo poco a poco mientras cuidas de ella y juegas con ella. Su estatura aumentará varias veces hasta que haya crecido por completo.
- A medida que crezca, mide su estatura utilizando la tabla de crecimiento incluida.
- Cuando crezca por completo, la muñeca dirá: "¡Guau! ¡Me estoy convirtiendo en una princesa!".



CAMBIAR DE IDIOMA

- Presiona el botón Growth en la espalda de la muñeca por más de 10 segundos para cambiar de idioma.
- Nota: La muñeca recordará el idioma seleccionado incluso después de apagarla y encenderla de nuevo.

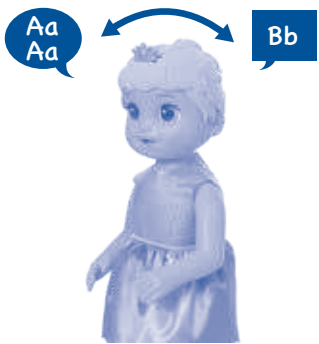

JUGAR OTRA VEZ

- El ciclo de juego bebé-princesa puede repetirse una y otra vez.
- En Modo Princesa, reinicia y vuelve a la etapa de bebé presionando el botón Growth en su espalda por 3 segundos.
- En Modo Bebé, presiona el botón Growth en su espalda por 3 segundos para que crezca hasta convertirse en una princesa.
- La muñeca también puede reiniciarse moviendo el interruptor de ENCENDER/APAGAR que está en su espalda.



- No sumerjas a la muñeca en agua.
- No mojes el cabello de la muñeca. Lava solo la superficie.
- Utiliza solo los accesorios BABY ALIVE incluidos.
- No utilices otros productos o aparatos para el cabello.