

2003-06

Chevrolet Suburban/GMC Yukon XL

About the Vehicle

Make: Chevrolet / GMC
Model: Suburban / Yukon XL
Year: 2003-06

OPTIONS

ONSTAR
6 DISK IN DASH RADIO
BOSE SYSTEM
SUBWOOFER

In Dash Application

Dash Type: Double DIN
Aftermarket Type: Single/Double DIN
Kits: GM1583B/GM1590AB
Harness: GM09SR
Antenna Adapter: MDA-1

Interface Adapter(s): (ONSTAR RETENTION)
W/ BOSE SYSTEM - DCGM02S2B11B
W/O BOSE SYSTEM - DCGMOS210B

AMPLIFIER LOCATIONS:
Under Center console

Wire Color Codes

+12V Constant = ORANGE

+12v Acc. Switched = DATA Driven

-12V Chassis Ground = BLACK/ WHITE

+12V Illumination = DATA Driven

+12V Dimmer = DATA Driven

Amp Remote = PINK

LF+ = TAN

LF- = GRAY

RF+ = LT GREEN

RF- = DRK GREEN

LR+ = DRK BROWN

LR- = YELLOW

RR+ = DRK BLUE

RR- = LT BLUE



SCOSCHE®

Speaker Notes

Front

Speaker Sizes

Front Pillar : 1.5" Tweeter
Lower Door: 6 3/4"
Speaker Adapter: SAGMT95
Factory Assembly: Tabs/Screws

NOTES

Optional 8" Subwoofer Mounted in center console with Premium BOSE.

Rear

Speaker Sizes

Lower Door : 6 3/4"
Speaker Adapter: SAGMT95
Factory Assembly: Tabs/Screws

NOTES

Optional 8" Subwoofer Mounted in left rear quarter panel with Standard BOSE.

2003-06

Chevrolet Suburban/GMC Yukon XL

SCOSCHE®

Radio removal

1. Turn Ignition on and shift vehicle into first.
2. Trim bezel unsnaps by pulling firmly.
3. Using a 7mm socket remove 3 bolt from radio disconnect and remove.



Front speaker

1. Use panel removal tool to remove plastic triangle.
2. Use panel removal tool to remove plastic trim bezel around door opener handle.
3. Use panel removal tool and remove window control panel, Disconnect and remove. Extract (1) 9/32" screw from behind.
4. Extract (1) 9/32" from behind door handle.
5. Use panel removal tool and remove door lock and unlock indicator.
6. Pull upwards on door panel, Disconnect and remove all connectors.
7. Push down on top finger tad of speaker and remove.

Rear speaker

1. Extract (1) 9/32" screw from bottom corner of door panel.
2. Extract (1) 9/32" from upper door handle.
3. Using a small flat screw driver, remove plastic bezel from door opener handle.
4. Pull upwards on door panel, Disconnect and remove.
5. Extract (4) T-15 torx screws from speaker, Disconnect and remove.

Images

Front speaker



Rear speaker



Front



1. Unsnap and remove A-Pillar panel.

Front Pillar

Rear



1. Remove top center panel with panel removal tool.
2. Remove plastic side panel with panel removal tool.
3. Cut wire tie and extract speaker, disconnect and remove.

Rear Pillar