


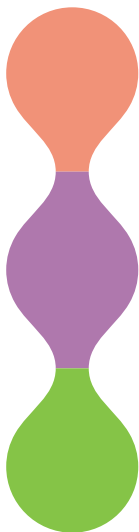

User Guide

Line interactive UPS
with **SUPER FAST**
charging speed

INSPIRE 703SFC, INSPIRE 853SFCU,
INSPIRE 1203SFCU, INSPIRE 1253SFCU,
INSPIRE 1503SFCU, INSPIRE 2003SFCU,
INSPIRE 3003SFCU



1 Important Safety Warning

CAUTION:

1. To prevent the risk of fire or electric shock, install in a temperature and humidity controlled indoor area free of conductive contaminants. (See the specifications for the acceptable temperature and humidity range.)
2. To reduce the risk of overheating the UPS, **DO NOT** cover the UPS' cooling vents and avoid exposing the unit to direct sunlight or installing the unit near heat emitting appliances such as space heaters or furnaces.
3. **DO NOT** attach non-computer-related items, such as medical equipment, life-support equipment, microwave ovens, or vacuum cleaners to UPS.
4. **DO NOT** plug the UPS input into its own output.
5. **DO NOT** allow liquids or any foreign object to enter the UPS. **DO NOT** place beverages or any other liquid-containing vessels on or near the unit.
6. In the event of an emergency, press the OFF button and disconnect the power cord from the AC power supply to properly disable the UPS.
7. **DO NOT** attach a power strip or surge suppressor to the UPS.
8. **Attention** hazardous through electric shock. Also with disconnection of this unit from the mains, hazardous voltage still may be accessible through supply from battery. The battery supply should be therefore disconnected in the plus and minus pole at the quick connectors of the battery when maintenance or service work inside the UPS is necessary.
9. Servicing of batteries should be performed or supervised by personnel knowledgeable of batteries and the required precautions. Keep unauthorized personnel away from batteries.
10. When replacing the batteries, use the same number and type of batteries.
11. Internal battery voltage is 12VDC. Sealed, lead-acid, 6-cell battery.
12. **DO NOT** dispose of batteries in a fire. The battery may explode. **DO NOT** open or mutilate the battery or batteries. Released electrolyte is harmful to the skin and eyes.
13. Unplug the UPS prior to cleaning and **DO NOT** use liquid or spray detergent.
14. A battery can present a risk of electric shock and high short circuit current. The following precaution should be observed before replacing batteries:
 - i. Remove watches, rings, or other metal objects.
 - ii. Use tools with insulated handles.
 - iii. Wear rubber gloves and boots.
 - iv. Do not lay tools or metal parts on top of batteries.
 - v. Disconnect charging source prior to connecting or disconnecting batteries terminal.

WARNING:

1. **DO NOT** modify the UPS input cable.
2. Consult your dealer if the UPS input cable connector does not match the utility receptacle.
3. The UPS must be grounded while in use. Operate the UPS only from a properly grounded AC outlet (2 wire plus ground).
4. Turn off the UPS before unplugging it from the AC outlet.

2 Package Contents



x 1




x 1

Note:


1. The illustrations in this document may appear different from your model.
2. If any of above item is not packed in your package when open, please consult your seller immediately.

3 Overview

INSPIRE 703SFC

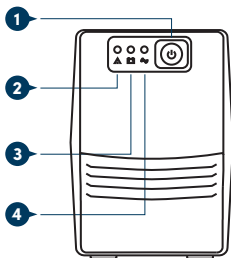

Front View

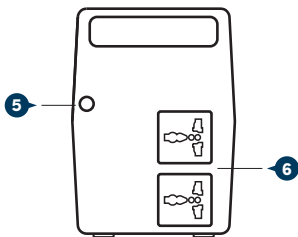

Rear View

Legend:

1 Power Switch

2 Fault Indicator:
Red LED Lighting

3 Battery Mode Indicator:
Yellow LED Flashing


4 AC Mode Indicator:
Green LED Lighting

5 Power AC Input

6 Backup Outlets

3 Overview


INSPIRE 853SFCU

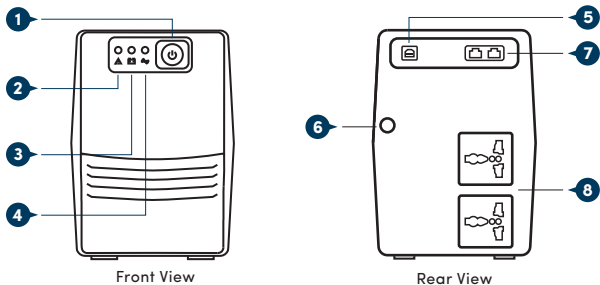

Legend:

- | | | |
|---|---|-------------------------|
| 1 Power Switch | 4 AC Mode Indicator: Green LED Lighting | 7 RJ11 Ports (In & Out) |
| 2 Fault Indicator: Red LED Lighting | 5 USB Port | 8 Backup Outlets |
| 3 Battery Mode Indicator: Yellow LED Flashing | 6 Power AC Input | |

INSPIRE 1203SFCU

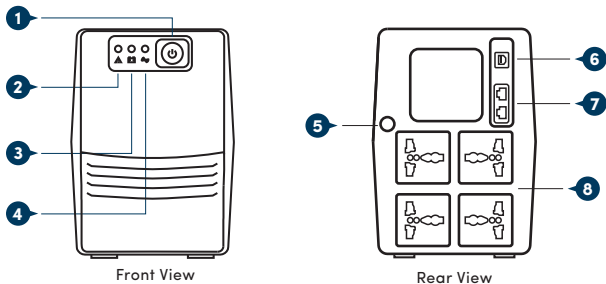


Legend:

- | | | |
|---|---|-------------------------|
| 1 Power Switch | 4 AC Mode Indicator: Green LED Lighting | 7 RJ45 Ports (In & Out) |
| 2 Fault Indicator: Red LED Lighting | 5 Power AC Input | 8 Backup Outlets |
| 3 Battery Mode Indicator: Yellow LED Flashing | 6 USB Port | |

3 Overview


INSPIRE 1253SFCU

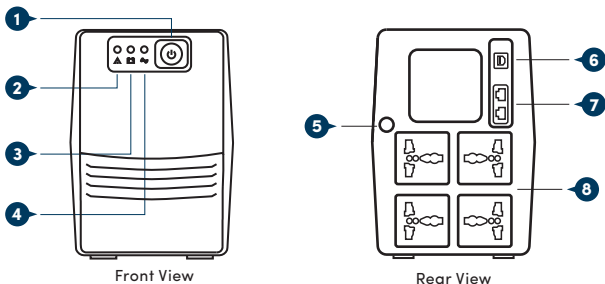

Legend:

- | | | |
|--|--|-------------------------|
| 1 Power Switch | 4 AC Mode Indicator:
Green LED Lighting | 7 RJ45 Ports (In & Out) |
| 2 Fault Indicator:
Red LED Lighting | 5 Power AC Input | 8 Backup Outlets |
| 3 Battery Mode Indicator:
Yellow LED Flashing | 6 USB Port | |

INSPIRE 1503SFCU

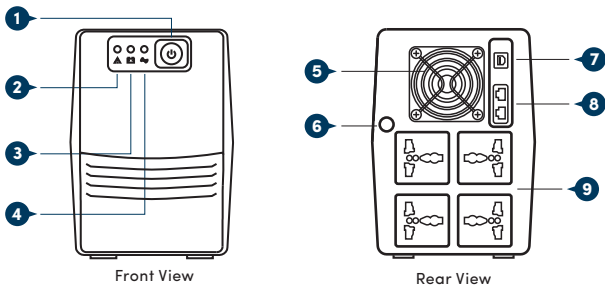


Legend:


- | | | |
|--|--|-------------------------|
| 1 Power Switch | 4 AC Mode Indicator:
Green LED Lighting | 7 USB Port |
| 2 Fault Indicator:
Red LED Lighting | 5 Fan | 8 RJ45 Ports (In & Out) |
| 3 Battery Mode Indicator:
Yellow LED Flashing | 6 Power AC Input | 9 Backup Outlets |

3 Overview

INSPIRE 2003SFCU

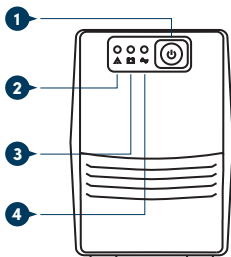

Front View

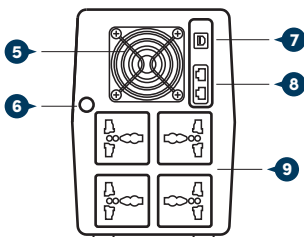


Rear View


Legend:

- | | | |
|--|--|-------------------------|
| 1 Power Switch | 4 AC Mode Indicator:
Green LED Lighting | 7 USB Port |
| 2 Fault Indicator:
Red LED Lighting | 5 Fan | 8 RJ45 Ports (In & Out) |
| 3 Battery Mode Indicator:
Yellow LED Flashing | 6 Power AC Input | 9 Backup Outlets |

INSPIRE 3003SFCU

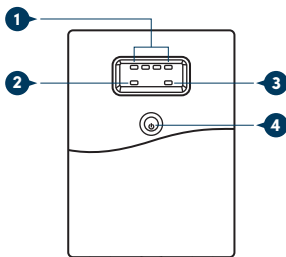

Front View

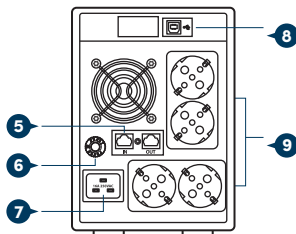

Rear View

Legend:

- | | | |
|---|--|-------------------|
| 1 AC Mode:
Indicating load level
Battery Mode: Indicating
battery capacity | 3 AC Mode Indicator:
Green LED Lighting
Battery Mode Indicator:
Green LED Flasing | 6 Circuit breaker |
| 2 Fault Indicator:
Red LED Lighting | 4 Power switch | 7 AC input |
| | 5 Modem/Phone/
Network surge protection | 8 USB port |
| | | 9 Backup Outlets |

4 Installation & Initial Startup



Note:

Before installation, please inspect the unit. Be sure that nothing inside the package is damaged.

 
Connect to Utility and Charging

Connect the AC Input Cord from the wall outlet to the UPS. For the best result, suggest to charge the battery at least 6 hours before initial use. The unit charges its battery while connecting to the utility.



Placement & Storage Conditions

Install the UPS in a protected area that is free of excessive dust and has adequate air flow. Please place the UPS away from other units at least 20cm to avoid interference. **DO NOT** operate the UPS where the temperature and humidity is outside the specific limits. (Please check the specs for the limitations).



Connect the Loads

Plug in the loads to output receptacles on the rear panel of the UPS. Simply turn on the power switch of UPS unit, and then devices connected to the UPS will be protected by UPS unit.



CAUTION:

NEVER connect a laser printer or scanner to the UPS unit. This may cause the damage of the unit.

Data Line Surge Protection *(Only for the model with RJ11/RJ45)*

Connect a single network/telephone/fax line into surge-protected "IN" outlet on the back panel of the UPS unit. Connect from "OUT" outlet with another network/telephone/fax line cable.

Connect Communication Cable *(Only for the model with USB port)*

To allow for unattended UPS shutdown/start-up and status monitoring, connect the communication cable one end to the USB port and the other to the communication port of your PC. With the monitoring software installed, you can schedule UPS shutdown/start-up and monitor UPS status through PC.

Turn On/Off the Unit

Turn on the UPS unit by pressing the power switch. Turn off the UPS unit by pressing again the power switch.

5 Software Download & Installation

Note:

Only for model with USB port.

Please follow steps below to download and install monitoring software:

1. Go to the website <http://www.power-software-download.com>
2. Click ViewPower software icon and then choose your required OS to download the software.
3. Follow the on-screen instruction to install the software.
4. When your computer restarts, the monitoring software will appear as orange plug icon located in the system tray, near the clock.
5. For UPS with HID-compliant USB Port (optional), you may safely shutdown the UPS during power failure simply by connecting to a computer with pre-installed Windows/ Linux/ Mac OS through the USB port even without monitoring software.

6 Storage and Maintenance

Storage

Before storing, charge the UPS at least 6~8 hours. Store the UPS covered and upright in a cool, dry location. During storage, recharge the battery in accordance with the following table:

STORAGE TEMPERATURE	RECHARGE FREQUENCY	CHARGING DURATION
-25°C - 40°C	Every 3 months	1-2 hours
40°C - 40°C	Every 2 months	1-2 hours

Maintenance



The UPS system operates with hazardous voltages. Repairs may be carried out only by qualified maintenance personnel.



Even after the unit is disconnected from the mains, components inside the UPS system are still connected to the battery packs which are potentially dangerous.



Only persons are adequately familiar with batteries and with the required precautionary measures may replace batteries and supervise operations. Unauthorized persons must be kept well away from the batteries.



Batteries may cause electric shock and have a high short-circuit current. Please remove all wristwatches, rings and other metal personal objects before maintenance or repair, and only use tools with insulated grips and handles for maintaining or repairing.

6 Storage and Maintenance



When replace the batteries, install the same number and same type of batteries.



Do not attempt to dispose of batteries by burning them. This could cause battery explosion. The batteries must be rightly disposed according to local regulation.



Do not open or destroy batteries. Escaping electrolyte can cause injury to the skin and eyes. It may be toxic.



Do not disassemble the UPS system.

7 Troubleshooting

Use the table below to solve minor problems.

PROBLEM	POSSIBLE CAUSE	SOLUTIONS
No LED display on the front panel	Low battery	Charge the UPS at least 6 hours
	Battery fault	Replace the battery with the same type of battery
	The UPS is not turned on	Press the power switch again to turn on the UPS
Alarm continuously sounds when the main is normal	The UPS is overload	Remove some loads first. Before reconnecting equipment, please verify that the load matches the UPS capability specified in the specs.
When power fails, back-up time is shortening	The UPS is overload	Remove some critical load
	Battery voltage is too low	Charge the UPS at least 6 hours
	Battery defect. It might be due to high temperature operation environment or improper operation to battery	Replace the battery with the same type of battery
The main is normal but LED is flashing	Power cord is loose	Reconnect the power cord properly

8 Specifications

MODEL	INSPIRE 703SFC		INSPIRE 853SFCU	
Capacity	650 VA		850 VA	
INPUT				
Voltage Range	140 - 300VAC ±5% for 230VAC mode 140 - 290VAC ±5% for 220VAC mode			
Frequency	50Hz/60Hz (Auto-sensing)			
Phase	Single + GND			
OUTPUT				
Voltage Range	220VAC/230VAC + 12%-14%			
Battery Mode	220VAC/230VAC ±10%			
Frequency	50Hz ± 1% (Battery Mode); 60Hz ± 1% (Battery Mode)			
Waveform	Simulated Sine Wave (Battery Mode), Sine Wave (AC Mode)			
Transfer Time	2ms typical			
BATTERY				
Type & Number	12 V/ 7 AH x 1		12 V/ 9 AH x 1	
Backup Time	8 - 30 mins depending on the load			
Charging Time	2 - 4 hours recover to 90% capacity			
PROTECTION/MONITORING				
Short Circuit Protection	Yes (Line Mode and Battery Mode)			
Surge Protection	Yes			
Alarm	Audible & Visual			
UPS Protection	Load Auto Sensing and Abnormal Protection			
Overload Protection	Line Mode - 100 - 120% 5mins change to fault mode >120% change to fault mode immediately Battery Mode - 100 - 120% 5 secs shutdown >120% shutdown immediately			
Intelligent Battery Management	Prevent overcharging of battery			
	Protect battery and prolong battery life			
Data Line Surge Protection	-		RJ11	
SOFTWARE MONITORING				
USB Connector #1	AC Fault, Battery Low, Shutdown UPS			
Software #1	Support Windows® 7/ 8/ 10, Linux and Mac			
GENERAL				
Noise Level	< 40dB			
Temperature	0°C - 40°C			
Humidity	0 - 90%			
Built in AVR	TRUE Full AVR (3steps)			
Dimension D x W x H	279 x 101 x 142mm			
Weight (kg)	4.2		4.9	

Note: #1: Only applicable for INSPIRE 853SFCU.

8 Specifications

MODEL	INSPIRE 1203SFCU		INSPIRE 1253SFCU	
Capacity	1200 VA		1250 VA	
INPUT				
Voltage Range	140 - 300VAC ±5% for 230VAC mode 140 - 290VAC ±5% for 220VAC mode			
Frequency	50Hz/60Hz (Auto-sensing)			
Phase	Single + GND			
OUTPUT				
Voltage Range	220VAC/230VAC + 12%-14%		230VAC + 12%-14%	
Battery Mode	220VAC/230VAC ±10%		230VAC ±10%	
Frequency	50Hz ± 1% (Battery Mode); 60Hz ± 1% (Battery Mode)			
Waveform	Simulated Sine Wave (Battery Mode), Sine Wave (AC Mode)			
Transfer Time	2ms typical			
BATTERY				
Type & Number	12 V/ 7 AH x 2			
Backup Time	8 - 30 mins depending on the load			
Charging Time	2 - 4 hours recover to 90% capacity			
PROTECTION/MONITORING				
Short Circuit Protection	Yes (Line Mode and Battery Mode)			
Surge Protection	Yes			
Alarm	Audible & Visual			
UPS Protection	Load Auto Sensing and Abnormal Protection			
Overload Protection	Line Mode - 100 - 120% 5mins change to fault mode >120% change to fault mode immediately Battery Mode - 100 - 120% 5 secs shutdown >120% shutdown immediately			
Intelligent Battery Management	Prevent overcharging of battery			
Data Line Surge Protection	Protect battery and prolong battery life			
	RJ45			
SOFTWARE MONITORING				
USB Connector	AC Fault, Battery Low, Shutdown UPS			
Software	Support Windows® 7/ 8/ 10, Linux and Mac			
GENERAL				
Noise Level	< 40dB			
Temperature	0°C - 40°C			
Humidity	0 - 90%			
Built in AVR	TRUE Full AVR (3steps)			
Dimension D x W x H	320 x 130 x 182mm			
Weight (kg)	8.2		9.2	

8 Specifications

MODEL	INSPIRE 1503SFCU	INSPIRE 2003SFCU	INSPIRE 3003SFCU
Capacity	1500 VA	2000 VA	3000 VA
INPUT			
Voltage Range	140 – 300VAC ±5% for 230VAC mode 140 – 290VAC ±5% for 220VAC mode		162 – 300VAC ±5% for 220/230/240VAC mode
Frequency	50Hz/60Hz (Auto-sensing)		60Hz/50Hz (Auto-sensing)
Phase	Single + GND		Single + GND
OUTPUT			
Voltage Range	220VAC/230VAC + 12%-14%		220VAC/230/240VAC ±15%
Battery Mode	220VAC/230VAC ±10%		220VAC/230/240VAC ±10%
Frequency	50Hz ± 1% (Battery Mode); 60Hz ± 1% (Battery Mode)		
Waveform	Simulated Sine Wave (Battery Mode), Sine Wave (AC Mode)		
Transfer Time	2ms typical		2 – 6ms typical
BATTERY			
Type & Number	12 V/ 9 AH x 2		
Backup Time	Up to 40 mins depending on the load		
Charging Time	2 – 4 hours recover to 90% capacity		4 – 6 hours recover to 90% capacity
PROTECTION/MONITORING			
Short Circuit Protection	Yes (Line Mode and Battery Mode)		
Surge Protection	Yes		
Alarm	Audible & Visual		
UPS Protection	Load Auto Sensing and Abnormal Protection		
Overload Protection	Line Mode – 100 – 120% 5mins change to fault mode >120% change to fault mode immediately Battery Mode – 100 – 120% 5 secs shutdown >120% shutdown immediately		
Intelligent Battery Management	Prevent overcharging of battery		
Data Line Surge Protection	Protect battery and prolong battery life		
	RJ45		
SOFTWARE MONITORING			
USB Connector	AC Fault, Battery Low, Shutdown UPS		
Software	Support Windows® 7/ 8/ 10, Linux and Mac		
GENERAL			
Noise Level	< 40dB		< 45dB
Temperature	0°C – 40°C		
Humidity	0 – 90%		
Built in AVR	TRUE Full AVR (3steps)		
Dimension D x W x H	320 x 130 x 182		397 x 146 x 205
Weight (kg)	10.4	10.6	14

1 Peringatan Penting Keselamatan

PERHATIAN:

1. Untuk mencegah resiko kebakaran atau sengatan listrik, pasang pada daerah yang suhu dan kelembabannya terkontrol (Lihat spesifikasi untuk rentang suhu dan kelembaban yang ditentukan.)
2. Untuk mengurangi resiko overheating dari UPS, JANGAN menutup ventilasi UPS dan menempatkan pada daerah yang terkena sinar matahari langsung atau menempatkan dekat dengan peralatan yang memancarkan panas.
3. JANGAN menghubungkan perangkat yang tidak berhubungan dengan computer, seperti peralatan medis, oven microwave, atau vacuum pembersih pada UPS.
4. JANGAN menyambung input UPS ke output UPS itu sendiri.
5. JANGAN biarkan cairan atau benda asing masuk kedalam UPS. JANGAN menempatkan minuman atau cairan dekat dengan unit.
6. Dalam keadaan darurat, tekan tombol OFF dan cabut kabel power dari sumber listrik untuk memastikan UPS benar benar dalam kondisi tidak aktif.
7. JANGAN menambatkan power strip/surge pada UPS.
8. Perhatian tersengat listrik sangat berbahaya. Juga dengan melepaskan unit ini dari sumber listrik, tegangan berbahaya masih tersimpan pada baterai. Kabel baterai juga harus dilepas disaat melakukan perawatan atau perbaikan UPS jika diperlukan.
9. Perbaikan pada baterai harus dilakukan oleh personil yang memiliki pengetahuan tentang baterai dan tindakan pencegahan jika diperlukan. Jauhkan dari personil yang tidak mengerti.
10. Ketika mengganti baterai, gunakan jumlah dan jenis baterai yang sama.
11. Tegangan baterai internal adalah 12VDC. Sealed, lead-acid, baterai 6-cell.
12. JANGAN membuang baterai kedalam api. Baterai dapat meledak. JANGAN membuka atau merusa baterai. Elektrolit yang terlepas berbahaya bagi kulit dan mata.
13. Cabut UPS sebelum melakukan pembersihan dan JANGAN gunakan deterjen cair atau spray.
14. Baterai dapat menimbulkan resiko sengatan listrik dan hubungan singkat. Perhatikan beberapa pencegahan berikut sebelum mengganti baterai:
 - i. Lepaskan jam tangan, cincin, atau benda logam lainnya.
 - ii. Gunakan alat yang terisolasi.
 - iii. Pakailah sarung tangan dan sepatu bot dari bahan karet.
 - iv. Jangan meletakkan peralatan atau logam diatas baterai.
 - v. Cabut kabel yang terhubung langsung ke sumber listrik sebelum menyambung/mencabut kabel terminal pada baterai.

PERINGATAN:

1. JANGAN memodifikasi kabel listrik yang masuk ke UPS
2. Hubungi dealer Anda jika konektor kabel tidak sesuai dengan konektor pada UPS
3. UPS harus terhubung pada ground saat sedang digunakan. UPS harus di hubungkan pada stopkontak AC yang memiliki ground yang benar (2 kawat di tambah ground).
4. Matikan UPS sebelum mencabut dari stopkontak AC.

2 Isi Perangkat



x 1




x 1

Catatan:


1. Ilustrasi dalam dokumen dokumen ini mungkin tampak berbeda dari model anda.
2. Jika salah satu item di atas tidak dikemas dalam paket anda ketika terbuka, silakan berkonsultasi dengan reseller anda segera.

3 Keterangan

INSPIRE 703SFC

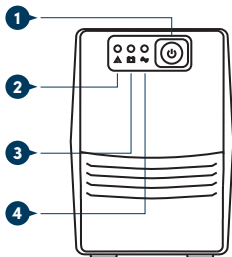

Tampak Depan

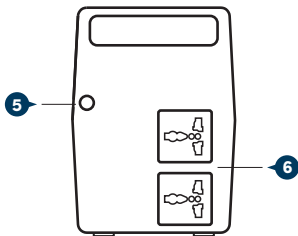


Tampak Belakang

Keterangan:

- | | | |
|--|--|-------------------------|
| 1 Switch Daya | 3 Indikator Modus Baterai: LED Kuning berkedip | 5 Daya AC input |
| 2 Indikator Fault: Lampu penerangan Merah LED | 4 Indikator AC Mode: Lampu penerangan Hijau LED | 6 Backup Outlets |

3 Keterangan

INSPIRE 853SFCU

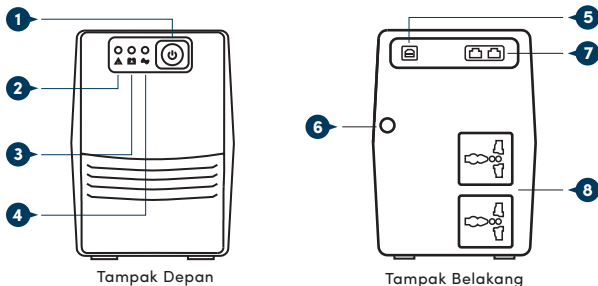


Tampak Depan

Tampak Belakang

Keterangan:

- | | | |
|--|---|------------------------|
| 1 Switch Daya | 4 Indikator AC Mode: Lampu penerangan Hijau LED | 7 Port RJ11 (In & Out) |
| 2 Indikator Fault: Lampu penerangan Merah LED | 5 Port USB | 8 Backup Outlets |
| 3 Indikator Modus Baterai: LED Kuning berkedip | 6 Daya AC input | |

INSPIRE 1203SFCU

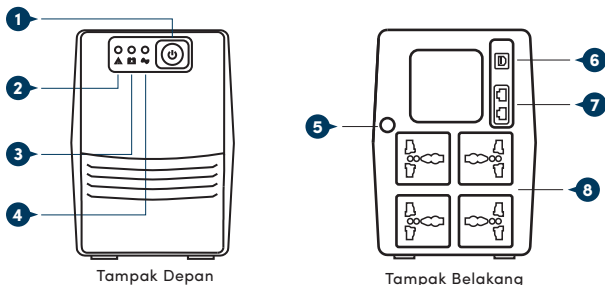

Tampak Depan


Tampak Belakang

Keterangan:


- | | | |
|--|---|------------------------|
| 1 Switch Daya | 4 Indikator AC Mode: Lampu penerangan Hijau LED | 7 Port RJ45 (In & Out) |
| 2 Indikator Fault: Lampu penerangan Merah LED | 5 Daya AC Input | 8 Backup Outlets |
| 3 Indikator Modus Baterai: LED Kuning berkedip | 6 Port USB | |

3 Keterangan

INSPIRE 1253SFCU

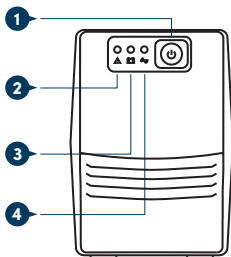

Tampak Depan

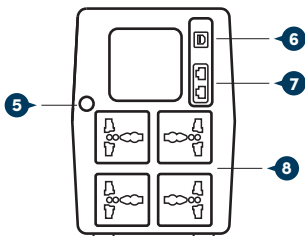


Tampak Belakang


Keterangan:

- | | | |
|--|---|------------------------|
| 1 Switch Daya | 4 Indikator AC Mode: Lampu penerangan Hijau LED | 7 Port RJ45 (In & Out) |
| 2 Indikator Fault: Lampu penerangan Merah LED | 5 Daya AC Input | 8 Backup Outlets |
| 3 Indikator Modus Baterai: LED Kuning berkedip | 6 Port USB | |

INSPIRE 1503SFCU

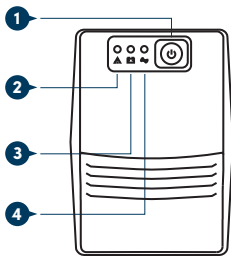

Tampak Depan

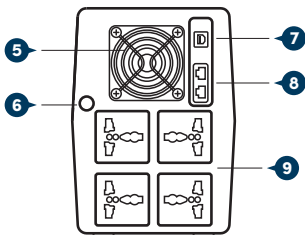


Tampak Belakang

Keterangan:


- | | | |
|--|---|------------------------|
| 1 Switch Daya | 4 Indikator AC Mode: Lampu penerangan Hijau LED | 7 Port USB |
| 2 Indikator Fault: Lampu penerangan Merah LED | 5 Kipas | 8 Port RJ45 (In & Out) |
| 3 Indikator Modus Baterai: LED Kuning berkedip | 6 Daya AC input | 9 Backup Outlets |

3 Keterangan

INSPIRE 2003SFCU

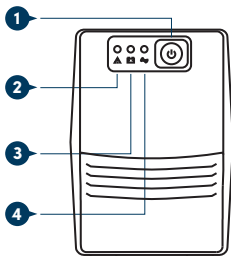

Tampak Hadapan

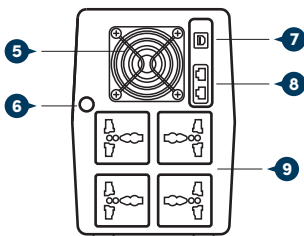


Tampak Belakang


Keterangan:

- | | | |
|--|---|------------------------|
| 1 Switch Daya | 4 Indikator AC Mode: Lampu penerangan Hijau LED | 7 Port USB |
| 2 Indikator Fault: Lampu penerangan Merah LED | 5 Kipas | 8 Port RJ45 (In & Out) |
| 3 Indikator Modus Baterai: LED Kuning berkedip | 6 Daya AC input | 9 Backup Outlets |

INSPIRE 3003SFCU

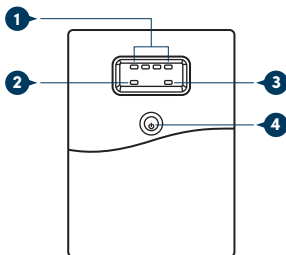

Tampak Hadapan

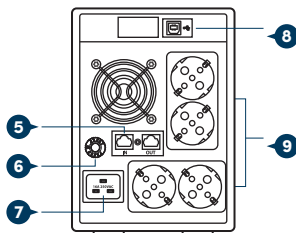

Tampak Belakang

Keterangan:

- | | | |
|---|--|-------------------|
| 1 Mode AC: Menunjukkan tingkat beban Modus Baterai: Menunjukkan kapasitas baterai | 3 Indikator Mode AC: Pencahaya LED Hijau Indikator Mode Baterai: Ledakan LED Hijau | 6 Pemutus arus |
| 2 Indikator Kesalahan: Pencahaya LED Merah | 4 Saklar daya | 7 masukan AC |
| 5 Modem/Phone/ Network surge protection | 8 Port USB | 9 Outlet Cadangan |

4 Instalasi Dan Sebelum Memulai



Catatan:

Sebelum melakukan instalasi, mohon unit diperiksa. Pastikan tidak ada yang rusak didalam kemasan.


Sambungkan ke Listrik dan Charging

Sambungkan Kabel Input AC dari soket sumber listrik ke UPS Anda. Untuk hasil yang terbaik, disarankan untuk mencharge baterai minimal 6 jam sebelum digunakan. Unit akan tercharge ketika terhubung ke sumber listrik.



Penempatan & Penyimpanan

Penempatan UPS sebaiknya berada pada daerah yang bebas debu dan memiliki sirkulasi udara yang baik. Harap menempatkan UPS minimal 20cm dari unit yang lain untuk menghindari interferensi. **JANGAN** menjalankan UPS disaat suhu dan kelembaban berada diluar batas yang telah ditentukan. (Silahkan periksa spesifikasi untuk mengetahui batasan)

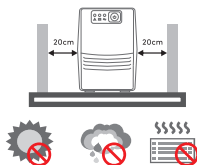

Menghubungkan ke Beban

Sambungkan beban pada konektor output yang berada pada panel belakang UPS. Hidupkan tombol power UPS dan kemudian perangkat yang terhubung ke UPS akan terlindung oleh UPS.



PERHATIAN:

JANGAN menghubungkan printer lase atau scanner ke UPS. Hal ini akan menyebabkan kerusakan unit.

Perlindungan Lonjakan Jalur Data *(Hanya untuk model dengan RJ11/RJ45)*

Hubungkan satu saluran jaringan/telepon/faks ke stopkontak "IN" yang dilindungi lonjakan arus di bagian belakang panel unit UPS. Terhubung dari outlet "OUT" dengan jaringan/telepon/faks lain kabel.

Hubungkan Kabel Komunikasi *(Hanya untuk model dengan port USB)*

Untuk memungkinkan untuk auto shutdown/startup pada UPS dan monitoring status, sambungkan kabel komunikasi pada port USB lalu ke port komunikasi pada PC anda. Dengan software monitoring yang terinstal, anda dapat membuat jadwal untuk menshutdown/start-up dan memonitor UPS anda melalui PC.

Menghidupkan/Mematikan Unit

Menghidupkan UPS dengan menekan tombol power. Mematikan UPS dengan menekan kembali tombol power.

5 Unduh Perangkat Lunak dan Instalasi

Catatan:

Hanya untuk model dengan port USB.

Silakan ikuti langkah-langkah di bawah ini untuk mengunduh dan menginstal perangkat lunak monitoring:

1. Pergi ke situs <http://www.power-software-download.com>
2. Klik ikon perangkat lunak ViewPower dan kemudian memilih OS yang dibutuhkan untuk men-download perangkat lunak.
3. Ikuti petunjuk pada layar untuk menginstal perangkat lunak.
4. Ketika restart komputer anda, software monitoring akan muncul sebagai ikon plug jeruk yang terletak di baki sistem, dekat jam.
5. Untuk UPS dengan Port USB yang sesuai dengan HID (opsional), Anda dapat mematikan UPS dengan aman selama kegagalan daya hanya dengan menghubungkan ke komputer dengan OS Windows/ Linux/ Mac yang sudah diinstal sebelumnya port USB bahkan tanpa software monitoring.

6 Penyimpanan dan Pemeliharaan

Penyimpanan

Sebelum menyimpan, isi daya UPS setidaknya 6~8 jam. Simpan UPS dalam keadaan tertutup dan tegak di lokasi sejuk dan kering. Selama penyimpanan, isi ulang baterai sesuai dengan tabel berikut:

SUHU PENYIMPANAN	ISI ULANG FREKUENSI	PENGISIAN DURASI
-25°C - 40°C	Setiap 3 bulan sekali	1-2 jam
40°C - 40°C	Setiap 2 bulan sekali	1-2 jam

Pemeliharaan



Sistem UPS beroperasi dengan voltase berbahaya. Perbaikan hanya dapat dilakukan oleh personel pemeliharaan yang berkualifikasi.



Bahkan setelah unit terputus dari listrik, komponen di dalam sistem UPS masih terhubung ke paket baterai yang berpotensi berbahaya.



Hanya orang yang cukup akrab dengan baterai dan dengan yang diperlukan tindakan pencegahan dapat mengganti baterai dan mengawasi operasi. Orang yang tidak berwenang harus dijauhkan dari baterai.



Baterai dapat menyebabkan sengatan listrik dan memiliki arus hubung singkat yang tinggi. Silahkan lepaskan semua jam tangan, cincin, dan benda pribadi logam lainnya sebelum perawatan atau perbaiki, dan hanya gunakan alat dengan pegangan dan pegangan berinsulasi untuk memelihara atau memperbaiki.

6 Penyimpanan dan Pemeliharaan



Saat mengganti baterai, pasang nomor dan jenis baterai yang sama.



Jangan mencoba membuang baterai dengan membakarnya. Ini dapat menyebabkan baterai ledakan. Baterai harus dibuang dengan benar sesuai dengan peraturan setempat.



Jangan membuka atau merusak baterai. Keluarnya elektrolit dapat menyebabkan cedera pada kulit dan mata. Ini mungkin beracun.



Jangan membongkar sistem UPS.

7 Permasalahan

Gunakan tabel di bawah ini untuk menyelesaikan masalah kecil.

MASALAH	KEMUNGKINAN	SOLUSI
Tidak ada LED yang menyala pada panel depan	Baterai lemah	Charge UPS minimal 6 jam
	Baterai rusak	Ganti baterai dengan jenis yang sama
	UPS belum dihidupkan	Tekan saklar daya dengan jenis yang sama
Alarm secara terus menerus berbunyi ketika sumber listrik normal	UPS overload	Lepaskan beberapa beban yang terhubung ke UPS. Sebelum dipasang kembali, harap pastikan beban masih dapat diterima oleh UPS yang sesuai pada spesifikasi
Ketika sumber listrik terputus, waktu back-up sangat pendek	UPS overload	Lepaskan beberapa beban critical
	Tegangan baterai sangat rendah	Charge UPS minimal 6 jam
	Baterai rusak. Mungkin disebabkan karena suhu ruangan yang tinggi, atau operasi yang tidak layak pada baterai	Ganti baterai dengan jenis yang sama
Listrik normal tetapi LED berkedip	Kabel power longgar	Hubungkan kembali kabel power dengan benar

8 Spesifikasi

MODEL	INSPIRE 703SFC		INSPIRE 853SFCU	
Capacity	650 VA		850 VA	
INPUT				
Voltage Range	140 - 300VAC ±5% for 230VAC mode 140 - 290VAC ±5% for 220VAC mode			
Frequency	50Hz/60Hz (Auto-sensing)			
Phase	Single + GND			
OUTPUT				
Voltage Range	220VAC/230VAC + 12%-14%			
Battery Mode	220VAC/230VAC ±10%			
Frequency	50Hz ± 1% (Battery Mode); 60Hz ± 1% (Battery Mode)			
Waveform	Simulated Sine Wave (Battery Mode), Sine Wave (AC Mode)			
Transfer Time	2ms typical			
BATTERY				
Type & Number	12 V/ 7 AH x 1		12 V/ 9 AH x 1	
Backup Time	8 - 30 mins depending on the load			
Charging Time	2 - 4 hours recover to 90% capacity			
PROTECTION/MONITORING				
Short Circuit Protection	Yes (Line Mode and Battery Mode)			
Surge Protection	Yes			
Alarm	Audible & Visual			
UPS Protection	Load Auto Sensing and Abnormal Protection			
Overload Protection	Line Mode - 100 - 120% 5mins change to fault mode >120% change to fault mode immediately Battery Mode - 100 - 120% 5 secs shutdown >120% shutdown immediately			
Intelligent Battery Management	Prevent overcharging of battery			
Data Line Surge Protection	-		RJ11	
SOFTWARE MONITORING				
USB Connector #1	AC Fault, Battery Low, Shutdown UPS			
Software #1	Support Windows® 7/ 8/ 10, Linux and Mac			
GENERAL				
Noise Level	< 40dB			
Temperature	0°C - 40°C			
Humidity	0 - 90%			
Built in AVR	TRUE Full AVR (3steps)			
Dimension D x W x H	279 x 101 x 142mm			
Weight (kg)	4.2		4.9	

Note: #1: Hanya berlaku untuk INSPIRE 853SFCU.

8 Spesifikasi

MODEL	INSPIRE 1203SFCU	INSPIRE 1253SFCU
Capacity	1200 VA	1250 VA

INPUT

Voltage Range	140 - 300VAC $\pm 5\%$ for 230VAC mode 140 - 290VAC $\pm 5\%$ for 220VAC mode
Frequency	50Hz/60Hz (Auto-sensing)
Phase	Single + GND

OUTPUT

Voltage Range	220VAC/230VAC + 12%-14%	230VAC + 12%-14%
Battery Mode	220VAC/230VAC $\pm 10\%$	230VAC $\pm 10\%$
Frequency	50Hz $\pm 1\%$ (Battery Mode); 60Hz $\pm 1\%$ (Battery Mode)	
Waveform	Simulated Sine Wave (Battery Mode), Sine Wave (AC Mode)	
Transfer Time	2ms typical	

BATTERY

Type & Number	12 V/ 7 AH x 2
Backup Time	8 - 30 mins depending on the load
Charging Time	2 - 4 hours recover to 90% capacity

PROTECTION/MONITORING

Short Circuit Protection	Yes (Line Mode and Battery Mode)
Surge Protection	Yes
Alarm	Audible & Visual
UPS Protection	Load Auto Sensing and Abnormal Protection
Overload Protection	Line Mode - 100 - 120% 5mins change to fault mode >120% change to fault mode immediately Battery Mode - 100 - 120% 5 secs shutdown >120% shutdown immediately
Intelligent Battery Management	Prevent overcharging of battery Protect battery and prolong battery life
Data Line Surge Protection	RJ45

SOFTWARE MONITORING

USB Connector	AC Fault, Battery Low, Shutdown UPS
Software	Support Windows® 7/ 8/ 10, Linux and Mac

GENERAL

Noise Level	< 40dB	
Temperature	0°C - 40°C	
Humidity	0 - 90%	
Built in AVR	TRUE Full AVR (3steps)	
Dimension D x W x H	320 x 130 x 182mm	
Weight (kg)	8.2	9.2

8 Spesifikasi

MODEL	INSPIRE 1503SFCU	INSPIRE 2003SFCU	INSPIRE 3003SFCU
Capacity	1500 VA	2000 VA	3000 VA
INPUT			
Voltage Range	140 – 300VAC ±5% for 230VAC mode 140 – 290VAC ±5% for 220VAC mode		162 – 300VAC ±5% for 220/230/240VAC mode
Frequency	50Hz/60Hz (Auto-sensing)		60Hz/50Hz (Auto-sensing)
Phase	Single + GND		Single + GND
OUTPUT			
Voltage Range	220VAC/230VAC + 12%-14%		220VAC/230/240VAC ±15%
Battery Mode	220VAC/230VAC ±10%		220VAC/230/240VAC ±10%
Frequency	50Hz ± 1% (Battery Mode); 60Hz ± 1% (Battery Mode)		
Waveform	Simulated Sine Wave (Battery Mode), Sine Wave (AC Mode)		
Transfer Time	2ms typical		2 – 6ms typical
BATTERY			
Type & Number	12 V/ 9 AH x 2		
Backup Time	Up to 40 mins depending on the load		
Charging Time	2 – 4 hours recover to 90% capacity		4 – 6 hours recover to 90% capacity
PROTECTION/MONITORING			
Short Circuit Protection	Yes (Line Mode and Battery Mode)		
Surge Protection	Yes		
Alarm	Audible & Visual		
UPS Protection	Load Auto Sensing and Abnormal Protection		
Overload Protection	Line Mode - 100 – 120% 5mins change to fault mode >120% change to fault mode immediately Battery Mode - 100 – 120% 5 secs shutdown >120% shutdown immediately		
Intelligent Battery Management	Prevent overcharging of battery		
Data Line Surge Protection	Protect battery and prolong battery life		
	RJ45		
SOFTWARE MONITORING			
USB Connector	AC Fault, Battery Low, Shutdown UPS		
Software	Support Windows® 7/ 8/ 10, Linux and Mac		
GENERAL			
Noise Level	< 40dB		< 45dB
Temperature	0°C – 40°C		
Humidity	0 – 90%		
Built in AVR	TRUE Full AVR (3steps)		
Dimension D x W x H	320 x 130 x 182		397 x 146 x 205
Weight (kg)	10.4	10.6	14

Worldwide Customer Care Centers

INDONESIA Office

PT PROLINK INTIDATA NUSANTARA

Walk-In : Jl. Cideng Barat No. 79, Jakarta Pusat 10150, Indonesia.
Telephone : +62 21 3483 1777
Sale Enquiries : sales.id@prolink2u.com
Technical Support : support.id@prolink2u.com

MALAYSIA Office

FIDA SYSTEMS (M) SDN BHD

Walk-In : 29 Jalan USJ 1/31, 47600 Subang Jaya, Selangor Darul Ehsan, Malaysia.
Telephone : +60 3 8024 9151
Sale Enquiries : sales.my@prolink2u.com
Technical Support : support.my@prolink2u.com

SINGAPORE Office

FIDA INTERNATIONAL (S) PTE LTD

Walk-In : Block 16 Kallang Place #06-02, Kallang Basin Industrial Estate, Singapore 339156.
Telephone : +65 6357 0668
Sale Enquiries : sales@prolink2u.com
Technical Support : support@prolink2u.com

Technical Support Hotline

INDONESIA : +62 21 3483 1717
MALAYSIA : +60 3 8023 9151
SINGAPORE : +65 6357 0666

Note: Closed on Saturdays, Sundays and local/regional Public Holidays.

Register online for your Product Warranty at www.prolink2u.com

Prolink is a registered trademark of Fida International (S) Pte Ltd. Other brands and product names are trademarks or registered trademarks of their respective holders. Product images are purely for illustrative purposes and may defer from the actual product. Specifications are subjected to changes without prior notice. Copyright © 2023 Fida International (S) Pte Ltd.

Kami mengucapkan terima kasih atas kepercayaan Anda memilih produk kami dan selaku Distributor di Indonesia, kami memberikan garansi Jasa Perbaikan dan Penggantian Suku Cadang UPS dan Baterai dengan ketentuan sebagai berikut:

1. Jasa Perbaikan diberikan selama 24 (dua puluh empat) bulan terhitung dari tanggal pembelian terhadap kerusakan-kerusakan berikut penggantian suku cadang, kecuali baterai hanya 12 (dua belas) bulan.
2. Ongkos kirim dan kerusakan yang mungkin terjadi di dalam perjalanan menjadi tanggungan pemilik barang.
3. Garansi TIDAK BERLAKU atau menjadi BATAL:
 - Barang tersebut telah dibuka segelnya atau diperbaiki oleh pemilik / pihak ketiga.
 - Barang tersebut rusak akibat pengangkutan, jatuh atau kesalahan yang diakibatkan oleh pemakai.
 - Barang tersebut rusak akibat kebakaran, disambar petir atau bencana alam.
 - Nomor serinya telah berubah atau dihapus dan tidak sesuai dengan barang yang akan diperbaiki.
 - Kartu Garansi tidak ada tanda tangan dan cap penjual.
 - Kartu Garansi tidak sesuai dengan barang yang sebenarnya atau terdapat coretan-coretan dan hapusan pada Kartu Garansi.
4. Tunjukkan kartu Garansi ini saat barang hendak di service.
5. Untuk informasi mengenai penyimpanan dan pemeliharaan, silahkan lihat petunjuk pada buku manual.

Daftarkan secara online untuk jaminan produk Anda di www.prolink2u.com

*Biaya pengiriman ditanggung pembeli


DAFTAR LAYANAN PURNA JUAL :

1. PT. PROLINK INTIDATA NUSANTARA | J.L. CIDENG BARAT NO. 79, JAKARTA PUSAT 10150 | Tel: 021-34831777
2. AT COMPUTER | RUKO KOMP SULTAN ADAM PERMAI, NO.13 BANJARMASIN | Tel: 0511-7404486
3. PT. PROSHOP TIMUR RAYA | J.L. RAYA MANYAR 69E SURABAYA RT.004 RW.010, MENUR PUMPUNGAN SOKOLOLO SURABAYA JAWA TIMUR 60286 | Tel: 031-59173511
4. PT. ANDARU PRIMA HARSA | J.L. BRIGJEN KATAMSO NO 75-77 RT 044 RW 013, PRAWIRODIRJAN GONDOMANAN YOGYAKARTA 55655 | Tel: 0274-420277
5. DELTACOM | J.L. MESJID RAYA NO.90K MAKASSAR | Tel: 0411-442806
6. PT. ARTHANAYA TEKNOLOGI | J.L. TEUKU UMAR NO 200 KOMPLEKS PERTOKOAN AGUNG RAYA NO 12, DAU PURI KAUH - DENPASAR BARAT-DENPASAR-BALI 80113 | Tel: 0361-2096382
7. METRO KOMPUTER | J.L. GAJAH MADA NO.87 | Tel: 0561-741610
8. PT. DWIWIIRA PUTRADINAMIKA | J.L. SETIA BUDHI NO. 107A, PEKAN BARU | Tel: 0761-36486
9. PT. SQUARE GORONTALO | J.L. S. PARMAN NO.38 BIAWAO, KOTA SELATAN KOTA GORONTALO | Tel: 082188007111
10. PT. INTI SANHO UTAMA TEKNOLOGI | J.L. MEGGALA NO. 48 MEDAN | Tel: 061-7330800

**prolink**

Tempelkan
perangko
disini.

**Kepada Yth.
Customer Service
PT. PROLINK INTIDATA NUSANTARA
Jl. Cideng Barat No. 79
Jakarta Pusat 10150 - Indonesia**

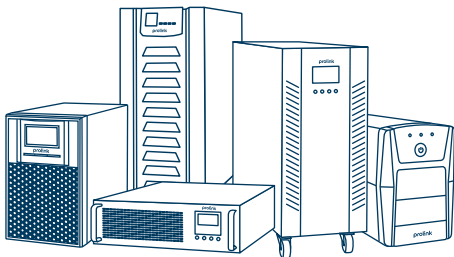

KARTU GARANSI
INDONESIA

KARTU GARANSI

Nama :
Name

Kapasitas: _____

Alamat :
Address

Nomor Seri: _____

Tgl. Pembelian: _____

Berlaku sampai: _____

Kota: _____ Kode Pos: _____

Tel / Fax: _____

Toko :
Kota : _____

Pelanggan

PT. Prolink Intidata Nusantara

Cap Toko

Kartu Garansi harus diisi lengkap, kiriman paling lambat 14 hari setelah Tgl. Pembelian

Tanda pendaftaran
No:Alamat Pengiriman
AddressPT. PROLINK INTIDATA NUSANTARA
Jl. Cideng Barat No. 79 Jakarta Pusat 10150 - IndonesiaTelp. : (62-21) 34831777
Fax : (62-21) 34830788
Email : support.id@prolink2u.com

KARTU GARANSI

Nama :
Name

Kapasitas: _____

Alamat :
Address

Nomor Seri: _____

Tgl. Pembelian: _____

Berlaku sampai: _____

Kota: _____ Kode Pos: _____

Tel / Fax: _____

Toko :
Kota : _____

Pelanggan

PT. Prolink Intidata Nusantara

Cap Toko

Kartu Garansi harus diisi lengkap, kiriman paling lambat 14 hari setelah Tgl. Pembelian

Tanda pendaftaran
No:Alamat Pengiriman
AddressPT. PROLINK INTIDATA NUSANTARA
Jl. Cideng Barat No. 79 Jakarta Pusat 10150 - IndonesiaTelp. : (62-21) 34831777
Fax : (62-21) 34830788
Email : support.id@prolink2u.com