 



URC 7980

ENGLISH SIMPLE SET UP GUIDE


**WELCOME, PREPARE YOUR
REMOTE FOR INSTALLATION**

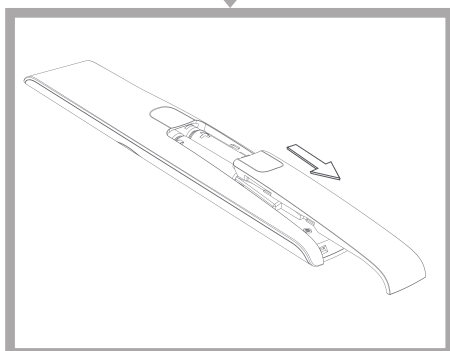

 Open the battery door.

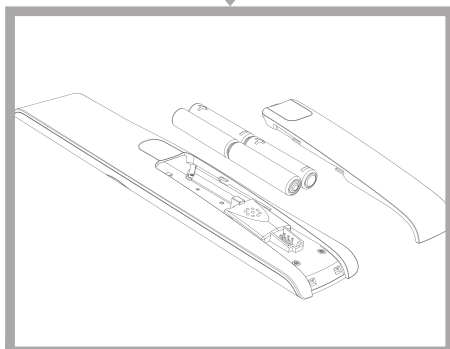

Insert 4 AAA batteries.

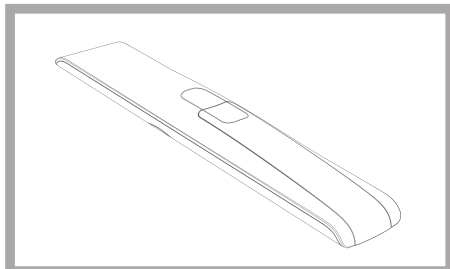 

PRODUCT DISPOSAL

(EUROPEAN DIRECTIVE 2002/96/EC)

The crossed out wheeled bin symbol on this product ensures that this product is manufactured using high quality components that can be recycled and reused according to European Directive 2002/96/EC. Please do not dispose this product with your normal household waste but inform yourself about the local separate collection for electrical and electronic products to dispose this product correctly. This will help preventing potential negative effects on the environment and/or human health.

BATTERY DISPOSAL

(EUROPEAN DIRECTIVE 2006/66/EC)

Please do not dispose your batteries with your normal household waste but inform yourself about the local separate collection for empty batteries to dispose them correctly. This will help preventing potential negative effects on the environment and/or human health.

UNIVERSAL ELECTRONICS INC/ONE FOR ALL warrants to the original purchaser that this product will be free from defects in materials and workmanship under normal and correct use for a period of one (1) year from the date of original purchase. This product will be replaced free of charge if it has been proven to be defective within the one (1) year warranty period. This warranty does not cover cartons, carrying cases, batteries, broken or marred cabinets or any other item used in connection with the product. Any further obligation than listed above is excluded. Please notice that we need your purchase receipt so that we may establish your eligibility for service. If you have bought this product for purposes which are not related to your trade, business or profession, please remember that you may have legal rights under your national legislation governing the sale of consumer goods. This guarantee does not affect those rights.

UK
www.oneforall.com

Ireland
www.oneforall.com

South Africa
0861 100551
support@oneforall.co.za
www.connoisseur.co.za
www.oneforall.com

New Zealand
0800 1425569
sales@amber.co.nz
www.amber.co.nz
www.oneforall.com

Australia
1 300 888 298
ofa.support@ambertech.com.au
www.ambertech.com.au
www.oneforall.com



www.ofa.com/urc7980

Universal Electronics BV –
Europe & International
P.O. Box 3332, 7300 DH Enschede
The Netherlands



KEY TABLE

DEVICES – Scroll through the devices your remote is set up to control

AV – Select the input on the current device

INFO – Displays info of current playback

VOL – Volume Up, Down and Mute

MENU – Shows the menu of the current device

GUIDE – TV Guide, EPG

SMART – Access internet and Smart features of your TV or internet-connected device

Red, Green, Yellow, Blue – Fasttext/Quick access keys

LIST – Displays a list of recorded programmes

MAGIC – Used to set up your remote

POWER – Power on/off

FAV – Favourite Channels

BACK – Back one step in the Menu of the current device

ACTIVITY – Scrolls through up to 5 Activity Modes – Watch TV, Watch Movie, Listen to Music, Play Game and Custom. See Activities for details.

 
EXIT – Exit from the Menu of the current device

PP – Previous Program, Last Channel

+/- – Channel Up and Down

A, B, C – Spare keys to program with any extra function

PLAYBACK – Playback keys for the current device

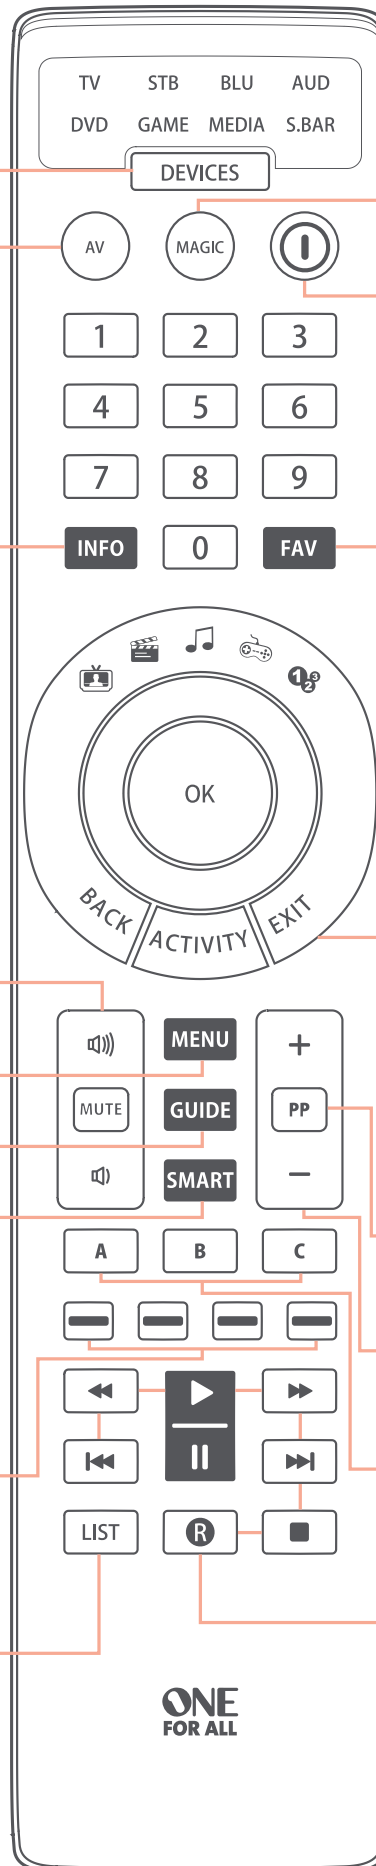

Thank you for purchasing the One For All Smart Control.

Now you can control all of your Audio/Video devices with a single remote, while enjoying extra features such as the ability to combine devices in a single Activity Mode, sending multiple commands on a single key press (macros) and being able to customise the remote control to your exact requirements.

There is also a handy companion app for iPhone and Android phones which will allow you to keep your remote up to date with the latest devices and codes. It also offers you an alternative way to set up your remote and store the settings.

To get started with your new remote, the first step is to set it up to control all of your Home Cinema devices.

HOW TO SET UP YOUR REMOTE

A – SIMPLESET

SimpleSet is a quick and easy way of setting up the remote to control the most popular brands of each device type with only a few key presses, typically in under a minute per device. The first step is to select which device you are going to set up. The following is a list of Device Modes on the remote control, and the Device types that can be set up on that mode:

Device Mode

Type of device



TV TV, HDTV, LED, LCD, Plasma, Projector



STB Set Top Box, Satellite Receiver, Cable Converter, Freeview, DVB-T, IPTV



 
BLU Blu-ray, DVD, DVD Home Cinema, VCR, Laser Disk



AUD Audio, AV Receiver, Amplifier, Tuner



DVD DVD, DVD Home Cinema, Blu-ray, VCR, Laser Disk



GAME Game Console*, Digital Media Receiver, Streamer



MEDIA Digital Media Receiver, Streamer, Game Console*



S. BAR Sound Bar, Active Speaker System

* The One For All remote can only control games consoles operated by Infra-Red, either directly or via an adapter. Consoles that are controlled by Bluetooth only cannot be operated.

For each Device type, there is a list of the top brands, each with a number assigned to it, for example 6 for a Samsung TV. Locate your device and brand in the list that follows:

HOW TO SET UP YOUR REMOTE

A – SIMPLESET




TV

- | | |
|-------------|-----------------|
| 1 Bush | 6 Samsung |
| 2 Grundig | 7 Sharp |
| 3 LG | 8 Sony |
| 4 Panasonic | 9 TCL / Thomson |
| 5 Philips | 0 Toshiba |



STB – Sat, Cable, DVB-T

- | | |
|---|--|
| 1 BSkyB / Sky Ireland / Orange | 5 freebox / Tricolor TV / Vu+ |
| 2 Canal+ / CanalSat / Digital+ | 6 Humax |
| 3 Dream Multimedia / TechniSat | 7 Samsung |
| 4 DStv / Multichoice / Foxtel / Sky New Zealand | 8 Sky Italia / SFR / Neuf TV |
| | 9 Sky Deutschland / Österreich / T-Home / Deutsche Telekom |
| | 0 UPC / Cablecom / UPC Direct / Virgin Media |

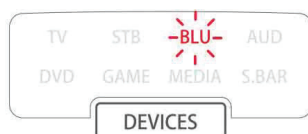 

BLU, DVD – Blu-ray, DVD

- | | |
|------------------------|-----------|
| 1 Denon, Harman/Kardon | 6 Pioneer |
| 2 JVC | 7 Samsung |
| 3 LG | 8 Sony |
| 4 Panasonic | 9 Toshiba |
| 5 Philips | 0 Yamaha |





AUD – AV Receiver, Amp, Tuner

- | | |
|---------------------|------------------------|
| 1 Denon | 6 Onkyo |
| 2 Harman/Kardon | 7 Panasonic / Technics |
| 3 JVC / Kenwood | 8 Pioneer |
| 4 Marantz / Philips | 9 Sony |
| 5 NAD | 0 Yamaha |

HOW TO SET UP YOUR REMOTE

  A – SIMPLESET

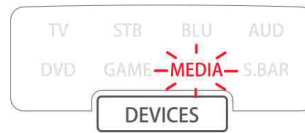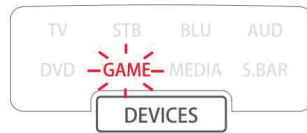

GAME, MEDIA – Games Consoles (5 & 8), Media Players

- | | |
|---|--|
| 1 Apple | 6 Popcorn Hour / Xstreamer |
| 2 Asus | 7 Roku / Mede8er / Sky UK |
| 3 Dune / Iomega | 8 Sony (Logitech / One For All / RE-BL / WB Electronics) |
| 4 Emtec / A.C.Ryan / Fantec / iconBIT / iNext | 9 Sumvision / Cyclone / Poppstar |
| 5 Microsoft | 0 Western Digital / DVICO |



S. BAR – Sound Bar, Speaker Systems

- | | |
|----------------------|-----------------------|
| 1 Bose | 6 Panasonic / Philips |
| 2 Canton / Denon | 7 Samsung |
| 3 Harman/Kardon, JBL | 8 Sony |
| 4 LG | 9 Teufel |
| 5 Maxell / Onkyo | 0 Yamaha |

To set up your device

1. Turn on your device (not on standby) and point the OFA remote towards it.

2.  Hold down MAGIC until the LED under the device blinks twice. The LED under the current mode key will stay lit.

3.  Press the DEVICES key repeatedly until the LED for the device you want to set up is lit.


4.

4	5	6
7	8	9

 Hold down the digit for your brand and device as listed above (e.g. 6 for Samsung TV).

5. The remote will send Power every 3 seconds until your device switches off.

 6. As soon as your device switches off, release the digit.

7.  The LED will blink twice and go out. The remote should now operate your device.

* If you find one or more keys do not work as you expect, start again at step 1 – the remote will start with the next code in the memory.

HOW TO SET UP YOUR REMOTE

B – SET UP BY CODE

If your brand is not listed in section A, you can set up your device by trying codes individually. To do this:

1. Turn your device on (not on standby).

2.  Locate the brand of your device in the code list (pages 130-149). Codes are listed by Device Type and Brand.

3.  Hold down MAGIC until the LED under the device blinks twice. The LED under the current mode key will stay lit.

4.  Press the DEVICES key repeatedly until the LED for the device you want to set up is lit.

5.  Enter the first 4 digit code listed for your brand (e.g. 0556 for a Bennett TV).

6.  The LED will blink twice and go out.

7.  Now aim the remote towards your device and press the POWER key.

8. If the device turns off, your remote is ready to use. If not, repeat steps 3-7 with the next code in the list.

* Some codes are quite similar. If you find that one or more keys do not operate as you expect, try again from step 3 with the next code in the list.

LEARNING

Your One For All remote control can learn any function from any other working remote control. This can be useful if you are missing one or more functions from your original remote control and would like to add them to the Smart Control. You can learn onto any key except Magic, Devices or Activity. There are even 3 blank keys provided (A, B and C) so that you can use these for functions that don't have a corresponding key on the Smart Control.

You can also learn a complete device if you can't find a code.

To learn, firstly make sure you have all your original remote controls to hand, and that they have working batteries in. To learn functions, the original remote should be approximately 3cm from the OFA remote, pointing towards it as shown below:



1.  Hold down MAGIC until the LED under the device blinks twice. The LED under the current mode key will stay lit.
2.  Using the DEVICES key, make sure the LED for the device you want to learn functions on is lit.
3.  Press 975 – the LED will blink twice.
4.  Press and release the key you want to learn a function onto (for example the A key) – The Watch TV, Listen To Music and Custom LEDs will light up.
5.  Press and release the key on the original remote.
6. The LED will blink twice to indicate the key has been learned correctly.
7. Repeat steps 4 and 5 for each key you want to learn – remember you can learn from multiple remotes, but only one function per key.
8.  When you learned all the functions you require, press and hold the MAGIC key until the LED blinks twice and turns off.

Hints

- If the LEDs shows one long blink at step 6, the function was not learned correctly, please try again from step 4.
- If you find one or more keys don't work properly after set up, you can re-enter the learning mode at any time by repeating the procedure from step 1.

LEARNING

TO DELETE A LEARNED FUNCTION, THE PROCEDURE IS:

-  Hold down MAGIC until the LED under the device blinks twice.
The LED under the current mode key will stay lit.
-  Using the DEVICES key, make sure the LED for the device you want to delete functions from is lit.
-  Press 976 – the LED will blink twice.
- Press the key to delete twice – the LED will blink twice.

Repeat the above procedure for each key you want to delete.

ACTIVITIES

An Activity is a grouping of two or more devices into a single mode based upon what you're doing while using your remote - for example TV and Set Top Box can be combined together into a Watch TV mode. In this mode keys will control only the relevant device, so in this example the Volume keys would control the TV, but the channel keys would control the Set Top Box.

The OFA Smart Control features 5 Activity Modes; Watch TV, Watch Movie, Listen To Music, Play Game and Custom. Each of these modes has a choice of devices to combine.

These are:

WATCH TV



- Combination 1: **TV + STB (Default)**
 Combination 2: **TV + STB + AUD**
 Combination 3: **TV + AUD**
 Combination 4: **TV + S.BAR**
 Combination 5: **TV + STB + S.BAR**



WATCH MOVIE



- Combination 1: **TV + BLU (Default)**
 Combination 2: **TV + BLU + AUD**
 Combination 3: **TV + DVD**
 Combination 4: **TV + DVD + AUD**
 Combination 5: **TV + BLU + S.BAR**
 Combination 6: **TV + DVD + S.BAR**



LISTEN TO MUSIC



- Combination 1: **TV + AUD + MEDIA (Default)**
 Combination 2: **TV + S.BAR + MEDIA**
 Combination 3: **TV + AUD + BLU**
 Combination 4: **AUD only**
 Combination 5: **S.BAR only**




ACTIVITIES

PLAY GAME

Combination 1:
Combination 2:
Combination 3:



 TV + GAME (Default)
TV + GAME + AUD
TV + GAME + S.BAR

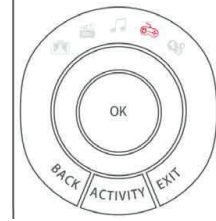

CUSTOM

Combination 1:
Combination 2:
Combination 3:
Combination 4:
Combination 5:
Combination 6:



TV + MEDIA (Default)
TV + MEDIA + AUD
TV + MEDIA + S.BAR
TV + GAME
TV + GAME + AUD
TV + GAME + S.BAR



If you set up the default devices for any Activity on the remote (for example a TV and STB for Watch TV) that Activity will be set up automatically on the remote. If you would like to change to a different combination, the procedure is as follows:

1.  Hold down MAGIC until the LED under the device blinks twice. The LED under the current mode key will stay lit.
2.  Use the ACTIVITY key to scroll through the Activities until the one you want to set is flashing.
3.

1	2	3
4	5	6

 Press the number of the combination you want to set – e.g 2 for TV + STB + AUD in Watch TV.
4. The LED will blink twice and go out.

To access the Activities, simply press the ACTIVITY key to scroll through until the desired one is lit. You can return to controlling by device by using the DEVICES key.

AV Shift

As the AV key is intended to select the input on your TV and most TVs use a menu to select from a list of inputs, when the AV key is pressed in an Activity, the Menu Up, Down, Left, Right and OK keys temporarily control the TV. If the OK key is pressed, or no key is pressed for ten seconds, these keys will revert to controlling the relevant device for the Activity (e.g. STB in Watch TV Mode).

Power Macro

If you hold down the Power key for 2 seconds in any Activity, the remote will send the Power function for each device contained within that Activity. So for example, holding Power in the default setting for Watch TV will turn both the TV and Set Top Box on or off.

MACROS

PROGRAM A MACRO

You can program any key on your OFA remote (except Magic and Devices) to send multiple commands on a single press – a Macro. This can be useful for controlling multiple devices to put them in a certain state – for instance you could put your TV on HDMI 1 and press Play on the Blu-ray player to start watching a movie. A key programmed with a Macro will send the same Macro regardless of the device mode, so it is best to select a key you don't use, or use one of the spare A, B or C keys.

To program a macro, the procedure is as follows:

-  Hold down MAGIC until the LED under the device blinks twice. The LED under the current mode key will stay lit.
-  Press 995 – the LED will blink twice.
- Next select the key you want to program the Macro on.
-  Now use the DEVICES key to select the device you want the first function of the Macro to come from, for example TV.
-  Next, press the key you want to include in the Macro, for example the AV key.
- Repeat steps 4 (if necessary), and 5 to add more keys to the Macro. You can include up to 15 key presses.
-  To store the Macro, hold down the MAGIC key until the LED blinks twice.

* Remember to press the keys in the same order you would using your original remotes – so if you pressed AV on the TV remote and then Play on the Blu-ray remote to watch a movie, do it in the same order on the Smart Control.

* If the LED shows a long blink when you press a key in steps 3 or 4, you have entered too many keys, please try again.

TO DELETE A MACRO

If you want to remove a macro from a key, please perform the following:

-  Hold down MAGIC until the LED under the device blinks twice. The LED under the current mode key will stay lit.
-  Press 995 – the LED will blink twice.
- Press the key the macro is programmed on.
-  Now hold down the MAGIC key until the LED blinks twice – the Macro is deleted.

MACROS

MACROS ON ACTIVITIES

Another handy feature of the Smart Control is to put Macros on Activities; you could for example program the Watch TV Activity to send a Macro to turn on the TV and Set Top Box when selected. To do this, simply use the Activity key to select the Activity in step 3 of the procedure "Program a Macro". Next time you use the Activity, the Macro will be sent 3 seconds after you select it using the Activity key.

If you want to delete a Macro from the Activity, select it during step 3 of "To Delete a Macro".

VOLUME LOCK

If you always use one device to control volume, for example your TV or an AV Receiver, you can set up the Smart Control to always control that device, regardless of which device your remote is controlling.

To do this:

1. Hold down MAGIC until the LED under the device blinks twice. The LED under the current mode key will stay lit.
2. Press 993 – the LED will blink twice.
3. Use the DEVICES key to select the Device you want to lock the Volume to.
4. Press MAGIC once – the LED will blink twice and volume is now locked.

If there is one particular device you would like to exclude from the Volume Lock (and control its own volume), you can do this by the following:

1. Hold down MAGIC until the LED under the device blinks twice. The LED under the current mode key will stay lit.
2. Press 993 – the LED will blink twice.
3. Use the DEVICES key to select the Device you remove from Volume Lock.
4. Press VOLUME DOWN – the LED will blink four times and device is now removed.

To unlock the volume and set every device back to controlling its own volume, the procedure is:

 
1. Hold down MAGIC until the LED under the device blinks twice.
The LED under the current mode key will stay lit.
2. Press 993 – the LED will blink twice.
3. Press VOLUME UP – the LED will blink four times and Volume is now unlocked.

Please note that Volume Lock only applies in Device Mode – Activities are unaffected.

THE OFA APP

Your One For All Smart Control contains codes for all popular devices and brands, but new codes are added to our online database every day. Using the One For All App on your iPhone or Android phone will allow you to upgrade any new codes into your remote using Bluetooth Smart, also known as Bluetooth Low Energy*. This will ensure that the remote will never become obsolete. The App also gives you access to some extra features, such as setting up Activities.

If you would like to download the app, follow the links below:

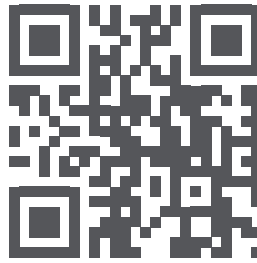


www.ofa.com/smartcontrol

* Please ensure your phone is compatible with Bluetooth Smart.
A list can be found by scanning the QR code above.

Universal Electronics, declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

A copy of the EC declaration of Conformity is available at
http://www.oneforall.com/DOC_URC7980

 The Part number of your Remote can be found inside the Battery door
(please see below Image)

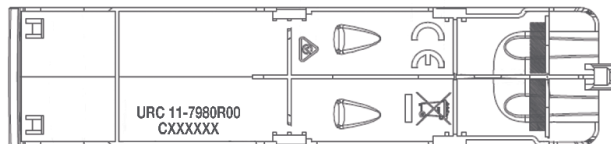

One For All is a registered trademark of Universal Electronics B.V.
P.O. Box 3332, 7500 DH, Enschede, The Netherlands

**ONE
FOR ALL**

URC7880

CODELIST




CODELIST TV

TV		JVC
3M	0724	KDS
Accurian	1803	Kon
Advent	1570	LeE
Affinity	3870, 3717	LG
Aikai	0702, 0812, 1675, 2232, 1385, 1688	
AOC	2014	
Apex Digital	2397, 4350	Ll
Audiovox	1865, 2413, 1766, 1769, 1868, 3410	M
Aumark	0060	M
Aventura	0171	
Axess	3593	
Blu:sens	2735	
Broksonic	1892	
Casio	1205	
Champion	1362	
Coby	3627, 2344, 2315, 3478, 3629, 1538, 2314	
Commercial Solutions	1447	
Curtis	2855, 3895, 2466, 4035, 1326, 2559, 3595, 3636	
Curtis Mathes	0702	
Daewoo	3115, 3183, 0661	
Daytek	3651	
Dukane	0724, 1430	
Dumont	0017	
Durabrand	0171, 1665, 0178	
Dynex	2049, 2184, 1463	
Eiki	1649, 1647, 4649	
Electrohome	1670, 1570	
Elektra	0017	
Element	4635, 4910, 2964	
Elite	1457	
Emerson	1963, 1864, 1886, 1944, 1394, 017	
Emprex	1665	
Epson	1422, 1822	
ESA	4250, 1122	
Faroudja	1944, 1963, 0171	
Favi	1297	
Fujitsu	3382	
Funai	0683	
GE	0171, 2861, 1394, 1963	
General Electric	1447	
GFM	1447	
Gibraltar	1963	
Go Video	0017	
GoldStar	0060	
GPX	0178	
Haier	3980, 3977, 4586	
Hallmark	2309, 1753, 3429, 4398, 4120	
Hannspree	1748	
Hewlett Packard	0178	
Hidear	2786, 1348	
Hightong	1642	
Hisense	3817	
Hitachi	3253	
	3519, 4618, 4740, 4398, 40	
	4149	
	1145, 0724, 1643, 4398, 13	
	4455, 2756, 2207	

B – SET UP BY CODE

If your brand is not listed in section A, you can set up your device by trying codes individually. To do this:

 1. Turn your device on (not on standby).

2.  Locate the brand of your device in the code list. Codes are listed by Device Type and Brand.

3.  Hold down MAGIC until the LED under the device blinks twice. The LED under the current mode key will stay lit.

4.  Press the DEVICES key repeatedly until the LED for the device you want to set up is lit.

5.  Enter the first 4 digit code listed for your brand (e.g. 2049 for a Insignia TV).

6.  The LED will blink twice and go out.

7.  Now aim the remote towards your device and press the POWER key.

8. If the device turns off, your remote is ready to use. If not, repeat steps 3-7 with the next code in the list.

* Some codes are quite similar. If you find that one or more keys do not operate as you expect, try again from step 3 with the next code in the list.

TV			
3M	0724	JVC	1774, 1601, 4107, 3393, 3854, 2321, 2271, 3650, 1670, 3841
Accurian	1803	KDS	1687
Advent	1570	Konka	1385
Affinity	3870, 3717	LeEco	4007, 4137
Akai	0702, 0812, 1675, 2232, 1385, 1688	LG	2731, 1840, 3571, 1423, 1860, 3398, 4397, 3397, 1265, 4398, 2424, 0017, 0178
AOC	2014	Lloyd's	3382
Apex Digital	2397, 4350	MAG	1687
Audiovox	1865, 2413, 1766, 1769, 1868, 3410	Magnavox	3623, 1963, 1944, 1454, 2372, 1866, 4395, 3708, 1990
Aumark	0060	Matsushita	0250, 0650
Aventura	0171	Megatron	0178
Axess	3593	Memorex	1670, 0060, 0877, 1570, 1665
Blu:sens	2735	MGA	0150, 0178
Broksonic	1892	Midland	0017
Casio	1205	Mintek	1990, 1603
Champion	1362	Mitsubishi	0150, 1250, 0178, 1797
Coby	3627, 2344, 2315, 3478, 3629, 1538, 2314	Mitsubishi Electric	0150, 1250, 0178, 1797
Commercial Solutions	1447	Naxa	2104, 2735, 3382
Curtis	2855, 3895, 2466, 4035, 1326, 2559, 3595, 3636	NEC	3257, 3000, 1797, 4693, 4380, 1398
Curtis Mathes	0702	Nikko	0178, 0017
Daewoo	3115, 3183, 0661	Nimbro	2104
Daytek	3651	Norcent	0824
Dukane	0724, 1430	NuVision	2158
Dumont	0017	oCOSMO	4139
Durabrand	0171, 1665, 0178	Ölevia	1610, 1144
Dynex	2049, 2184, 1463	Optimus	0250, 0650
Eiki	1649, 1647, 4649	Optoma	4609, 4658
Electrohome	1670, 1570	Orion	1463
Elektra	0017	Panasonic	1480, 1291, 0250, 0650, 1271, 4743, 0178
Element	4635, 4910, 2964	Peerless	4254
Elite	1457	Peerless-AV	4254
Emerson	1963, 1864, 1886, 1944, 1394, 0171, 1665	Penney	0060, 0178
Emprex	1422, 1822	Philco	1963
Epson	4250, 1122	Philips	3069, 1867, 2800, 3396, 1454, 3623, 3678, 1455, 2372, 1394, 1744, 0017
ESA	1944, 1963, 0171	Pioneer	0679, 1260, 1457
Faroudja	1297	Polaroid	1769, 1523, 1538, 3942, 1766, 2002, 3382, 1286, 1326, 1385, 1687, 4035
Favi	3382	Power Acoustik	1865
Fujitsu	0683	Prima	1753
Funai	0171, 2861, 1394, 1963	Proscan	1447, 2256, 3895, 4035, 3636, 4490, 4491, 4483, 4492, 4495, 2634, 3382, 3717, 4375, 4493, 3429, 4494
GE	1447	Proview	1687
General Electric	1447	Pulsar	0017
GFM	1963	Pyle	2196
Gibralter	0017	QuantumFX	2337, 3593
Go Video	0060	Quasar	0250, 0650, 3382
GoldStar	0178	Qumi	0775, 4649, 1369
GPX	3980, 3977, 4586	RCA	1447, 2634, 4214, 2746, 3895, 2187, 2932, 4079, 2434, 4394, 4623, 4625, 2247, 3382, 4035, 1868, 2002, 3717, 4488, 1670, 3894, 4490, 4492
Haier	2309, 1753, 3429, 4398, 4120, 1749, 1748	Runco	0017
Hallmark	0178	Sampo	1597, 1755
Hannspree	2786, 1348	Samsung	2051, 3993, 3970, 0812, 0702, 1632, 0060
Hewlett Packard	1642	Sansui	1670, 3564, 1463, 1892, 3377, 0171
Hidear	3817	Sanyo	1142, 1649, 3488, 4168, 1647, 4740
Hightong	3253	Sceptre	2337, 3899, 4886, 2528, 4139
Hisense	3519, 4618, 4740, 4398, 4054, 4621, 4149	Sears	0178, 0171
Hitachi	1145, 0724, 1643, 4398, 1345, 3644, 4455, 2756, 2207	Seiki	4635, 3953, 4794
HP	1642	Seiko Epson	4250, 1122
iLo	1990, 1463	Sens	1865
InFocus	4609, 1430, 0736, 0775, 3524	Sharp	2360, 4618, 4740, 4507, 3394, 4892, 3519, 4121, 4398
Initial	1990	SIM2 Multimedia	1297
Insignia	2049, 4487, 1780, 1641, 1963, 2002, 3227, 1326, 1892, 2416, 2751, 0171, 1423, 1517	SkyVue	4135, 2360
Inteq	0017		
iSymphony	3429, 3382, 3094		
JC Penney	0060, 0178		
Jensen	3204		

Skyworth	3253	Bowling Cable TV	1877
Solé	1623	Bright House	1877, 1376
Sony	0810, 4448, 4189, 4151, 0834	Bright House Networks	1877, 1376
Spectroniq	1687	Bristol Tennessee	
Squareview	0171	Essential Services	1877
Superscan	1944	Buckeye Cable	
Supersonic	3593, 2104, 1753, 3595, 3894	System	1376, 2187
Sylvania	1963, 1944, 1886, 1864, 1394, 2861, 0171	Buford Media	
Symphonic	1944, 1963, 0171	Group	1877
Syntax	1144	BWTelecom	1877
Tatung	1286	Cable America	1877
TCL	4398, 3183	Cable Axion Digitel	1376
Technics	0250, 0017, 0650	Cable One	1376, 3560, 1877
Teknika	0060	Cable Vision	
Telefunken	0702	Services	1877
TNCi	0017	Cablevision	3885
Toshiba	2006, 2724, 1524, 1656, 3945, 4885, 1265, 1369, 0060, 0736	Cablevision du Nord	1376
TruTech	3410	Cablevisión	
Venturer	1868, 1865	Mexico	1376
Victor	0150, 0250	Cablovision	
Viewsonic	3791, 4938, 4319, 2014, 2049, 0724, 0864	Warwick	1877
Viore	2352, 3429, 3382, 3094, 2104, 3118, 4829	CCAP	1877
VisionQuest	3380	CDE Lightband	1998
Vivitek	0775, 4649, 1369	Cellcom	1877
VIZIO	3758, 4723, 1758, 4905, 3358	CenturyLink	1998, 0858
Wards	0017	Charter	1877, 1376, 5651, 2187, 3560, 5756, 5757
Westinghouse	4797, 3411, 1300, 1712	Charter Spectrum	1877, 1376, 5651, 2187, 3560, 5756, 5757
Xiahua	1753	Cincinnati Bell	1877, 3068, 1376
Xococo	1753	Cisco	1877, 0858, 3028, 2947, 1982, 2345, 2378, 5484, 2506, 3294, 4514, 5757
Zenith	0017, 1145, 0178, 1265, 1463, 1423	Click Network	1877
STB			
Access		Cogeco	1376, 1982, 3560
Communications	1376	Comcast	1982, 1376, 1877, 3560, 2187
Adams Cable TV	1376	Comporium	1877, 3560, 2187
ADB	3246, 2254, 2586	Consolidated	
Advocate		Communications	1877, 1998, 2187, 0858, 3426
Communications	1877	Consolidated Telecommuni-	
Alta Utilities	1877	cations Company	1998
Americable		CoopTel	1998
International	1877	Corn Belt Telephone	1877
Amino	1615, 1481, 1898, 3605	Cox	1877, 1376, 3774, 1982, 3765
Arledge Electronics	0775	Cox	
Armstrong	1376, 3560	Communications	1877, 1376, 3774, 1982, 3765
Arris	1376, 1998, 2187, 2378, 1982, 3765, 5097, 5537, 5756, 0858, 5131	Crossman Cable	1877
Astound		CTC	1998
Broadband	1877, 3560	Darien	
AT&T	0858	Communications	1877
AT&T U-verse	0858	Delta Cable	1376
ATC		Digeo	2187
Communications	3560	DIRECTV	1377, 3724
Atlantic Broadband	1877, 3560	DISH	0775
ATMC	1376, 3028	Dish Mexico	0775
Axtel	4458	DISH Network	0775
Ballard Rural Telephone		Dishpro	0775
Cooperative	0775	EastLink	1376
Beehive Broadband	1877	Easton Cable	1877
Bell	0775, 1998	Eatel	1877, 3028
Bell Fibe TV	1998, 5097, 5537	Echostar	0775
Bell MTS	1998, 5097, 5537	Entone	3426, 3048, 3068
Bell Satellite TV	0775	Evolution	2479, 2746
Bellaliant	1998	Evolution Digital	2479, 2746
Bend Broadband	2187	FairPoint	
Blue Ridge		Communications	1877
Communications	1877, 3560	Fayetteville	
BlueBridge Media	1877	Electric System	1877
		Foothills	
		Broadband	1877

CODELIST STB

Foothills Rural Telephone Cooperative	1877	NfinityLink Communications	1877
Foresite Wireless	1877	North State Communications	0858
Fort Randall Telephone Company	1877	Northland Cable TV	3560
Frontier	2378, 1998, 3560	Northland Communications	1376
Frontier Communications	2378, 1998, 3560	Northwest Iowa Telephone	1877
GCI	3560, 1376	NorthwestTel	1376
General Communications	3560, 1376	Novus	1376
General Instrument	0869	NuLink	1877
GOI	0775	NuVisions	0775
Google	3666	Oakview Cable	1877
Grande Communications	1877, 3560, 1376	Optimum	3885
Greenlight Community Broadband	1877	Ozona Cable & Broadband	1877
HTS	0775	Pace	1376, 1982, 1877, 0858, 1377, 1998, 3560, 4537, 0887
Huawei	4589	Palmetto Rural Telephone Cooperative	0858
Humax	1377, 5651, 3560	Panasonic	1982
ImOn Communications	1877	PennVideo Network	3560
Innovative Systems	1898	Philips	2378, 3560
Insight	1376, 1877	Pioneer	1877
Inter Mountain Cable	1877	Provincial Cable	1877
Izzi Mexico	1376	Qwest	1377
Izzi Telecom	1376	RadioShack	0869
JVC	0775	Ralls Technologies	1877
K2 Communications	3560	RCN	1376, 3560
Kaon	4458, 2746	Rogers	1877, 5484, 1376
Kaon Media	4458, 2746	Sac County Mutual Telephone	1877
Knology	1877	Samsung	1877, 1377, 1982, 2947
Lafayette Utilities System	1998	SaskTel	1998
Layer3 TV	5370	Schurz Communications	1877
Long Lines	1877	Scientific Atlanta	1877, 0858, 1982, 2345, 3028, 2378
Lucas Valley Cable	3560	Service Electric	1376, 1982
Lumos Networks	1998	Shaw	1376, 1877, 2187
MCV Broadband	1877	Shaw Direct	0869
Media Cast	1877	Sky Mexico	0887, 1377, 0856, 3469
Mediacom	1376, 3560, 1877	Source Cable	1376
Megacable	1376, 4514	Spectrum	1877, 1376, 5651, 2187, 3560, 5756, 5757
megasenal	4682	Star Choice	0869
Megaseñal	4682	Sterling Cable	1877
Merrimac Communications	1376	Stratford Mutual Telephone	1877
MetroCast Cablevision	1376	Suddenlink	1877, 3560, 1376
MetroNet	1877, 1998	SureWest	1877, 1998
Mid-State Community TV	3560	Tbaytel	1998
Midcontinent Communications	1376, 3560, 1982	TDS Telecom	0775
Milford Communications	1877	Technicolor	1377, 5651, 5484
Minerva Networks	3118	TeleCable	1376
MINET	1877	TELUS	3028, 0775
Morristown Utility Systems	1877	TiftNet	1877
Motorola	1376, 0869, 1998, 2378, 0858, 1982, 5097, 5756	Time Warner	1877, 1376, 5651, 2187
Moxi	2187	Time Warner Cable	1877, 1376, 5651, 2187
Nelson County Cablevision	3560	TiVo	3560, 3724
Netgem	4634	Totalplay	4634, 4589, 4591
Next Level	0869	Toxaway Cable	1877
NextGen Communications	1877	Triangle Communication System	0775
		TV Cable of Rensselaer	3560
		TWC	1877, 1376, 5651, 2187
		U-verse	0858
		Verizon	2378
		Vianet TV	3246
		Vidéotron	1877, 2947
		Village Cable	1877

Vision Systems	1877
Vista III Media	1982
Vyve Broadband	1376
Washington Cable	3560
Wave Broadband	1376, 3560
Western Iowa Telephone	1877
Western Montana CommunityTel	1877
Westman Communications	1376, 2187
WideOpenWest	1376, 1877, 2187
Williamstown Cable	3560
Windom Communications	1877
Wistron NeWeb	3118
WOW!	1877, 1376, 2187, 5131
Xfinity	1982, 1376, 3765, 1877, 3560, 2187
Zenith	0856
ZTE	3068

BLU | DVD

Accurian	0675
Akai	0675
Allegro	0869
Apex Digital	0672, 0717
Audio Authority	2555
Audiovox	0717
Blaupunkt	0717
CineVision	0869
Daewoo	0869
Denon	1634, 0059, 3851, 0490
DIRECTV	0739
Disney	3246, 0675
Electrohome	1702
Emerson	0675
Frontier	0739
Frontier Communications	0739
Funai	0675
GE	0717
General Electric	0717
GFM	0675
Go Video	0869, 1075, 1044, 0741, 0717
GoldStar	0741, 0869
Greenhill	0717
Harman/Kardon	3744, 0702
Humax	0739
Initial	0717
Insignia	2095, 2596
Integra	0627, 1769
Irradio	0646
JBL	0702, 3744
JVC	1550, 1602, 0623
Kenwood	0490, 0534
LG	0741, 0869, 1602
Logitech	2639
Magnavox	0675, 0646, 1506, 0539
Marantz	3444, 0539
Memorex	1702, 3031, 2213
Microsoft	2083, 2627, 0522
Mintek	0717
Mitsubishi	0059, 1521
Mitsubishi Electric	0059, 1521
NAD	2572, 0059, 0741
Nesa	0717
New Acoustic Dimension	2572, 0059, 0741
Onkyo	0627, 1769
Oppo	2545

Optimus	0059
Panasonic	1579, 0490, 1641, 3641
Philco	0675
Philips	2056, 0646, 2789, 1506, 2434, 3488, 3274, 0675, 0739, 0539
Pioneer	0059, 0631, 2854, 1571, 2847, 4199, 0142
Polk Audio	0539
Presidian	0675
Proscan	0522
RCA	0522, 0717, 1769, 3464
RCN	0739
RE-BL	2555
Rotel	0623
Samsung	0199, 1075, 2069, 2489, 1044, 2269, 2369, 4108, 0490, 1573, 0573, 2329, 2843
Sanyo	0675
Schneider	0646
Sharp	0630, 0675, 2250
Sony	1633, 1516, 1033, 0864, 1070, 0772, 1533, 4009
SV2000	0675
Sylvania	0675, 0630
Symphonic	0675
Technics	0490
TiVo	0739
Toshiba	0503, 2277, 1769, 2006, 3857, 3157, 3957
TruTech	0675
Urban Concepts	0503
VIZIO	2563
Wards	0059
WB Electronics	2555
Xbox	2083, 2627, 0522
Yamaha	0497, 3320, 0646, 3995, 0490, 0539
Zenith	0741, 0869

AUDIO | S.BAR

Acoustic Audio	4683, 4907
Aiwa	0121, 0158, 0157, 0189
Alco	1390
Altec Lansing	1485
AMC	1077
Anthem	3835, 2220
Anthem Statement	3835, 2220
Apex Digital	4334
Apple	1115
Arcam	4549, 1189, 0189
Audio Control	4475
AudioControl	4475
Audioengine	4311
AudioSource	3721
Audiotronic	1189
Audiovox	1390
Aura	4293
Axess	4095
B & W	3965, 2441, 3943
Bose	4307, 3708, 1841, 3959, 4124, 4024, 1933, 3706, 3832, 1629
Boston Acoustics	3698
Bowers & Wilkins	3965, 2441, 3943
BÖHM	4280
California Audio Labs	0029
Cambridge Audio	4029
Carver	0189, 0121, 1189
Coby	3654
Craig	4465, 4466
Curtis	3942

Definitive Technology	4415, 3645, 4026	Pioneer	1123, 1935, 3057, 2432, 4015, 1023, 1384, 2743, 0823, 0032, 3956
Denon	1360, 2857, 3347, 2516, 2820, 3642, 3380, 3643, 2706, 2502, 4530, 4025, 3947, 0003, 4054, 0034, 2279	Polk Audio	3429, 1289, 2242, 0892, 4431, 0189, 0157
DMX Electronics	0157	Proficient	3661
Durabrand	1561	Proscan	1254
Dynavox	3231	Proton	0157
Dynex	3951	Pyle	4333, 4242
Emotiva	3763, 4059, 4100, 4101, 4102, 4641	QED	0157
Enclave Audio	4800	Quad	0157
Energy	3915	RCA	1254, 2655, 2719, 1123, 3969, 3281, 0420, 2041, 0823, 1023, 2611, 2544, 1390, 2743
Energy Sistem	3915		
Epworth	0121, 0158, 0157, 0189	Rotel	3896, 4260, 4028
Focal	4021	SAE	0157
Gateway	1567	Samsung	2660, 2809, 2948, 3320, 3154, 2137, 4011, 3540, 1868, 1304
GoldStar	1537		
Haier	3516	Sansui	0189
Harman/Kardon	0110, 2241, 1304, 0892, 2443, 4186, 3418, 3756, 4178, 3391, 3779, 0189, 4040, 3045, 3517, 0157	Sanyo	4176
		Sharp	3736, 3097, 3929, 3381
iLive	3175	Sherbourn	3763
Inkel	3770, 4090, 3793	Sherwood	1077, 1567, 3120, 3136, 2169, 3679, 3793, 4022, 4090, 3755, 3770, 4771
Innovative Technology	3848		
Insignia	3951, 2472, 2169, 1893, 2929, 3104, 3770, 4022, 4424, 2175	Sherwood Newcastle	1567, 2169
		Sonos	3919
Integra	1805, 3860, 2730, 4023, 1320, 4581, 2503, 4014, 3992, 0135	Sony	0158, 1441, 1759, 2172, 2475, 2522, 3700, 1758, 0000, 1622, 2860, 4315, 2582, 3487, 4366, 4457, 2610, 4107, 3986, 4285, 1822, 3257
Jamo	3915		
JBL	3756, 3535, 0110, 2241	SpeakerCraft	3661
JVC	1676, 1374, 2040, 3049, 2239, 2331, 3365, 0072, 1871	Stereophonics	1023
		Sunfire	0313
Kenwood	0313, 1570, 1670, 0190, 0028	Sylvania	0157
Klipsch	3915, 4941, 4198, 4200	Tascam	0420
Left Coast	0892	Teac	0420, 1390
Left Coast Products	0892	Technics	0309, 0029, 1633
Lennox	1561	Thorens	1189
LG	2676, 1537, 3509, 3217, 4043, 3996, 4478, 2284, 2197	Toshiba	3627, 1123
Linn	0189, 0157	TruAudio	4940
Logitech	1408	Venturer	1390
Magnavox	0189, 1269, 1189, 0157, 1831	Victor	0072
Marantz	1289, 2114, 0189, 2138, 4121, 3772, 1189, 0892, 1269, 3998, 3347	VIZIO	2454, 3935, 4911
		Wards	0158, 0189
Martin Logan	3526	Yamaha	0176, 1276, 3580, 2061, 2467, 0376, 0036, 3030, 2116, 4008, 2458, 3325, 3917, 2592, 2021, 0187
McIntosh	1289		
Micromega	1189	Zenith	1293
Mint	4286	Zonda	0157
Miro	0000	ZVOX	2332, 3913, 2334
Monoprice	4505		
Myryad	1189		
NAD	1989, 0320, 1767		
New Acoustic Dimension	1989, 0320, 1767		
Nu Force	3968		
Onkyo	1805, 0135, 1320, 2730, 3860, 4023, 2503, 4041, 4581, 4014, 4533, 4574, 3984, 3992		
Optimus	1023, 0823, 0032		
Outlaw	3973		
Panasonic	0309, 3323, 1275, 3055, 2452, 3309, 1633, 2967, 3767, 0029, 2105, 1676, 1763		
Paradigm	4536, 3526, 4846		
Parasound	0420		
Philips	0189, 1269, 2434, 4105, 2459, 3379, 3962, 1189, 2675, 3801, 0157, 3227, 4012, 1831, 2311, 0892, 2289		
Pinnacle Speakers	3774, 3728		

GAME | MEDIA

A.C.Ryan	3350
ABS	1272
ADS Tech	1596
AirTV	5295
Alienware	1272
Amlogic	4899
Apple	2615
Armada	4899
Asus	2987
AVerMedia	5516
Beelink	3518, 5123
Boxee	3693
Buffalo	4947
Ceton	1272
Channel Master	4465
CyberPower	1272
Dell	1272
D-Link	3671, 3693, 1731, 2186
Echostar	5295

CODELIST GAME | MEDIA

Edal	4666	Ortek	3122
Gateway	1272	Panasonic	3760
Geniatech	4339	Pixel Magic	5155
Hewlett Packard	1272	Popcorn Hour	2260
Howard Computers	1272	RCA	3335
HP	1272	Ricavision	1272
Hush	1272	Rikomagic	5425
iBUYPOWER	1272	RKM	5425
iView	2759	Roku	3061, 1486, 2371
KM8	4666	Seagate	2698
LG	3373	Sling Media	5295, 2612
Linksys	1272	Sony	1272, 2713
Logitech	3272	Stack 9	1272
Magic TV	5155	Systemax	1272
Magnavox	3339	Tagar Systems	1272
Matricom	4899	Tibo	4339
Media Center PC	1272	Toshiba	1272
Mediabox	5155	Touch	1272
MediaGate	4525	Uebo	3350
Mediasonic	2095	Vensmile	4899
Mi	3982	Viewsonic	4249, 1272
Microsoft	4000, 1272, 2049	VIZIO	3670
Millet	3982	Voodoo	1272
Mind	1272	Western Digital	2558
Minix	4413, 3884	Xbox	4000, 2049, 1272
MyGica	5057	Xiaomi	3982
Netgear	3324, 2036, 3292	Zappiti	5536, 5538
NiveusMedia	1272	ZT Group	1272
Northgate	1272		

THE OFA APP

Your One For All Smart Control contains codes for all popular devices and brands, but new codes are added to our online database every day. Using the One For All App on your iPhone or Android phone will allow you to upgrade any new codes into your remote using Bluetooth Smart, also known as Bluetooth Low Energy*. This will ensure that the remote will never become obsolete. You can also use the app to set up all devices, giving you the ability to enter the model numbers of your equipment to get the right code first time.

If you would like to download the app, follow the links below:

* Please ensure your phone is compatible with Bluetooth Smart.

LA APLICACIÓN OFA

Su mando a distancia One For All Smart Control contiene códigos de todos los dispositivos y marcas más populares, y a diario se añaden nuevos códigos a nuestra base de datos en línea. Si instala la aplicación One For All en su dispositivo Android o iPhone, podrá actualizar su mando con nuevos códigos a través de Bluetooth Smart, también conocido como Bluetooth Low Energy*.

Hacerlo le garantiza que su mando a distancia nunca se quedará anticuado.

La aplicación también le proporciona acceso a funciones adicionales, como por ejemplo configuración de actividades.

Si desea descargarse la aplicación, siga los enlaces que se incluyen a continuación:

* Asegúrese de que su teléfono es compatible con Bluetooth Smart

APPLICATION ONE FOR ALL

Votre télécommande One For All est compatible avec tous les appareils et marques populaires. Leur nombre augmentant au fil du temps, il est nécessaire d'adapter notre base de données en fonction. En utilisant l'application One For All sur votre iPhone ou téléphone Android, vous êtes sûr de disposer des dernières mises à jour pour votre télécommande, dotée de la technologie Bluetooth Smart (ou Bluetooth Low Energy)*, et cela constamment. Vous pouvez également utiliser l'application pour configurer tous les appareils. Vous pouvez ainsi saisir le numéro de modèle de votre équipement afin d'obtenir le code approprié.

Pour télécharger l'application, utilisez le lien ci-dessous :

* Vérifiez que votre téléphone est compatible avec la technologie Bluetooth Smart.



<https://www.ofa.com/smartcontrol/pos/uk/download>

WARRANTY / GUARANTEE

WARRANTY / GUARANTEE INFORMATION

Terms and Conditions for "100% Guaranteed To Work" policy, and the separate 1 Year Limited Warranty against defects in material and workmanship can be found at www.oneforall.com/remoteguarantee, or you may request hard copies by calling 855-716-2573, or via mail to UEI Technical Support Service, Suite 301, 26250 Euclid Ave., Euclid, OH 44132. Please include your full name, product information, and contact information in your request communication.

LEGAL NOTICES

FCC STATEMENT:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

GARANTÍA | GARANTIE

ESPAÑOL

GARANTÍA / INFORMACIÓN DE GARANTÍA

Los términos y condiciones para la política de "Compatibilidad 100% Garantizada" y separadamente 1 año de Garantía Limitada contra defectos de material y mano de obra pueden encontrarse en www.oneforall.com/remoteguarantee, si lo desea puede solicitar la copia física llamando al 855-716-2573, o por correo a UEI Technical Support Service, Suite 301, 26250 Euclid Ave., Euclid, OH 44132. Por favor incluya su nombre completo, información de su producto y todos sus datos de contacto en su petición. Para productos de venta en México los términos y condiciones a continuación se aplican.

Los términos y condiciones de garantía a continuación solo se aplican a productos de venta en México

GARANTÍA LIMITADA

Garantía: Universal Electronics Inc., garantiza que este producto estará libre de defectos de materiales y mano de obra por un periodo de un año a partir de la fecha de la compra. Esta garantía no se aplica al daño causado por el manejo y envío, o daños causados por accidente, abuso, uso indebido, desgaste natural, mantenimiento inadecuado, incumplimiento de las instrucciones o aquellos daños que resulten de modificaciones o reparaciones no autorizadas. La garantía anterior se aplicará únicamente al comprador original, y es y será en lugar de cualquier otra garantía, ya sea expresa o implícita y de todas las demás obligaciones o responsabilidades por parte de Universal Electronics Inc., siendo así que no asume responsabilidad por, ni tampoco autoriza a cualquier otra persona que pretenda actuar en su nombre para modificar o cambiar esta garantía, ni a asumir ninguna otra garantía u obligación con respecto a este producto. La responsabilidad máxima para Universal Electronics Inc., bajo cualquier circunstancia en relación con cualquier garantía se encontrará limitada al reemplazo del producto defectuoso. Se recomienda que el cliente revise constantemente su equipo para su correcto funcionamiento.

Recursos: Su recurso exclusivo bajo esta Garantía Limitada es que Universal Electronics Inc., a su elección, reparará o reemplazará, sin cargo las partes y/o la mano de obra, del equipo que se encuentre defectuoso.

Procedimiento del Servicio: Para obtener el servicio de garantía, visite la Página de Garantía y complete la forma en www.oneforall.com/warranty con su nombre completo, información de contacto, número de serie del producto, y la descripción del problema junto con una copia/imagen del recibo de compra, en donde se muestre la fecha de compra. Si es necesario, Universal Electronics Inc., le proporcionará instrucciones de envío para el producto. En caso de que haya un defecto, Universal Electronics Inc., reparará su equipo o le enviará un reemplazo. Usted pagará los costos de envío y devolución (con excepción de California y México).

Aviso Legal: LA GARANTÍA ANTERIOR ES LA ÚNICA Y EXCLUSIVA GARANTÍA POR PARTE DE UNIVERSAL ELECTRONICS INC., EN RELACIÓN CON LOS PRODUCTOS. NO HAY DECLARACIONES O GARANTÍAS ADICIONALES, EXPRESAS O IMPLÍCITAS, SALVO LO DISPUESTO POR LA LEY APLICABLE. CUALQUIER GARANTÍA IMPLÍCITA REQUERIDA POR LA LEY ESTÁ LIMITADA EN DURACIÓN AL PERIODO DE GARANTÍA ESTABLECIDO EN LA PRESENTE. ALGUNOS ESTADOS NO PERMITEN LIMITACIONES SOBRE LA DURACIÓN DE UNA GARANTÍA IMPLÍCITA, POR LO QUE LAS LIMITACIONES ANTES MENCIONADAS PUEDEN NO SERLE APLICABLES.

EN NINGÚN CASO UNIVERSAL ELECTRONICS INC., O SUS FILIALES, SERÁN RESPONSABLES DE DAÑOS INCIDENTALES, ESPECIALES, INDIRECTOS, CONSECUENTES O MÚLTIPLES, INCLUYENDO DE MANERA ENUNCIATIVA MÁS NO LIMITATIVA, LAS PÉRDIDAS DE GANANCIAS, PÉRDIDAS O DAÑOS DEL SOFTWARE O LOS DATOS, O DAÑOS AL EQUIPO DERIVADOS DEL USO DE CUALQUIER PRODUCTO, INCLUSO SI SE ADVIERTE LA POSIBILIDAD DE DICHOS DAÑOS. LA GARANTÍA ESTÁNDAR LE DA LOS DERECHOS LEGALES ESPECÍFICOS, Y USTED PUEDE TENER DERECHOS ADICIONALES, QUE PUEDE VARIAR DE UN ESTADO A OTRO. ALGUNOS ESTADOS NO PERMITEN LA EXCLUSIÓN O LIMITACIÓN DE LOS DAÑOS INCIDENTALES O CONSECUENTES, POR LO QUE LAS LIMITACIONES ANTES MENCIONADAS PUEDEN NO APLICARLE.

La Garantía Limitada aplica a los siguientes productos:

URC URC7880

AVISOS LEGALES

DECLARACIÓN DE LA FCC:

Este equipo ha sido sometido a prueba y se ha determinado que satisface los límites establecidos para ser clasificado como dispositivo digital de Clase B, de acuerdo con la Parte 15 del reglamento FCC. Estos límites están diseñados para proporcionar una protección razonable contra interferencias dañinas en un ambiente residencial. Este dispositivo genera, utiliza y puede irradiar energía de radiofrecuencia y, si no es instalado y utilizado de acuerdo a las instrucciones, puede causar interferencias perjudiciales en las comunicaciones de radio. Sin embargo, no se garantiza que no ocurrirá interferencia en una instalación particular. Si el equipo causa interferencias perjudiciales en la recepción de la señal de radio o televisión, lo cual puede comprobarse entendiéndolo y apagándolo alternativamente, se recomienda al usuario corregir la interferencia por uno de los siguientes procedimientos:

- Cambie la orientación o la ubicación de la antena receptora.
- Aumente la distancia entre el equipo y el receptor.
- Conecte el equipo a un tomacorriente de un circuito distinto de aquel al que está conectado el receptor.
- Solicite consejo al distribuidor o a un técnico experto en radio y televisión para obtener ayuda.

Este dispositivo satisface la parte 15 del reglamento FCC. Su utilización está sujeta a las siguientes dos condiciones: (1) este dispositivo no puede causar interferencia dañina, y (2) este dispositivo debe aceptar cualquier interferencia recibida incluyendo interferencias que puedan causar una operación no deseada.

Cuidado: Cualquier cambio o modificación que no esté aprobado expresamente por la parte responsable por el cumplimiento puede anular la autoridad del usuario para operar el equipo.

FRANÇAIS

GARANTIE / INFORMATIONS SUR LA GARANTIE

Les conditions et modalités relatives aux règles "Fonctionnement garanti à 100%" et la garantie limitée de 1 an contre tout défaut de matériaux et de main-d'œuvre peuvent être consultés sur www.oneforall.com/remoteguarantee, ou vous pouvez demander une copie papier en composant le 855-716-2573. Ou par courrier électronique au service d'assistance technique UEI, Suite 301, 26250 Euclid Ave., Euclid, OH 44132. Veuillez inclure votre nom complet, les informations sur votre produit et vos coordonnées dans votre demande de communication.

AVIS JURIDIQUES

DECLARATION DE LA FCC :

Cet équipement a été testé et déclaré conforme aux limitations prévues dans le cadre de la catégorie B des appareils numériques, définies par l'article 15 du règlement de la FCC. Ces limites ont été établies pour fournir une protection raisonnable contre les interférences préjudiciables lors d'une installation résidentielle. Cet équipement génère, utilise et diffuse des ondes radio et s'il n'est pas installé et utilisé conformément aux

instructions en vigueur, il peut provoquer des interférences préjudiciables aux communications radio. Cependant, il n'est pas possible de garantir qu'aucune interférence ne se produira pour une installation particulière. Si cet équipement produit des interférences préjudiciables lors de réceptions radio ou télévisées, qui peuvent être détectées en éteignant puis en rallumant l'appareil, essayer de corriger l'interférence au moyen de l'une ou de plusieurs des mesures suivantes :

- réorienter ou déplacer l'antenne réceptrice;
- augmenter la distance entre l'équipement et le récepteur;
- brancher l'équipement sur la prise électrique d'un circuit différent de celui auquel le récepteur est relié;
- contacter le revendeur ou un technicien radio/télévision qualifié pour toute assistance.

Cet appareil est conforme à l'article 15 du règlement de la FCC. Son fonctionnement est soumis aux deux conditions suivantes : (1) Ce dispositif ne doit pas causer d'interférence nuisible et (2) il doit accepter toute interférence reçue, y compris une interférence qui pourrait causer un fonctionnement indésirable.

Attention : Tous changements ou modifications qui ne seraient pas expressément approuvés par les responsables des normes pourraient rendre nul le droit de l'utilisateur d'utiliser cet équipement.

Customer Support: 855-716-2573 (toll free)
OFA warranty/terms & conditions: 855-569-6595 (toll free)
www.oneforall.com
Imported into the US by:

Universal Electronics Inc.
UEI Technical Support Services,
Suite 301
26250 Euclid Ave.
Euclid, OH 44132