



Table of Contents

Installation Overview.....	1
Operating Systems	1
Prerequisites	1
Microsoft .NET Framework 4.8 or higher	1
FTDI D2XX Direct Drivers 2.12.36.4 or higher	1
Prerequisite Setup Wizard	2
Prerequisites	3
Installing Microsoft .NET Framework.....	4
Installing FTDI D2XX Direct Drivers	5
Extracting FTDI CDM Drivers.....	6
Device Driver Installation Wizard	7
License Agreement.....	8
Completing the Device Driver Installation Wizard.....	9
SENSIT Test and Measurement Setup Wizard	10
End-User License Agreement.....	11
Select Installation Folder	12
Ready to Install	13
Installing SENSIT.....	14
Completing the SENSIT Setup Wizard	15
Release Information	16
Copyright	16
Disclaimer	16
Contact Information	16

Installation Overview

This installation guide outlines all the necessary steps to install SENSIT Test and Measurement.

Operating Systems

SENSIT Test and Measurement is intended for use with one of the following Windows operating systems.

- Windows 10 x64
- Windows 10 x86
- Windows 8.1 x64
- Windows 8.1 x86
- Windows 7 x64
- Windows 7 x86

Prerequisites

SENSIT Test and Measurement requires the following prerequisites to be installed. The installation wizard will automatically prompt the user to install the prerequisites if they are not already installed.

Microsoft .NET Framework 4.8 or higher

Microsoft .NET Framework 4.8 can be downloaded from the manufacturer's website.

<https://dotnet.microsoft.com/download/dotnet-framework/net48>


FTDI D2XX Direct Drivers 2.12.36.4 or higher

FTDI D2XX Direct Drivers 2.12.36.4 can be downloaded from the manufacturer's website.

<https://ftdichip.com/drivers/d2xx-drivers/>


Prerequisite Setup Wizard

Click **Next** to continue.

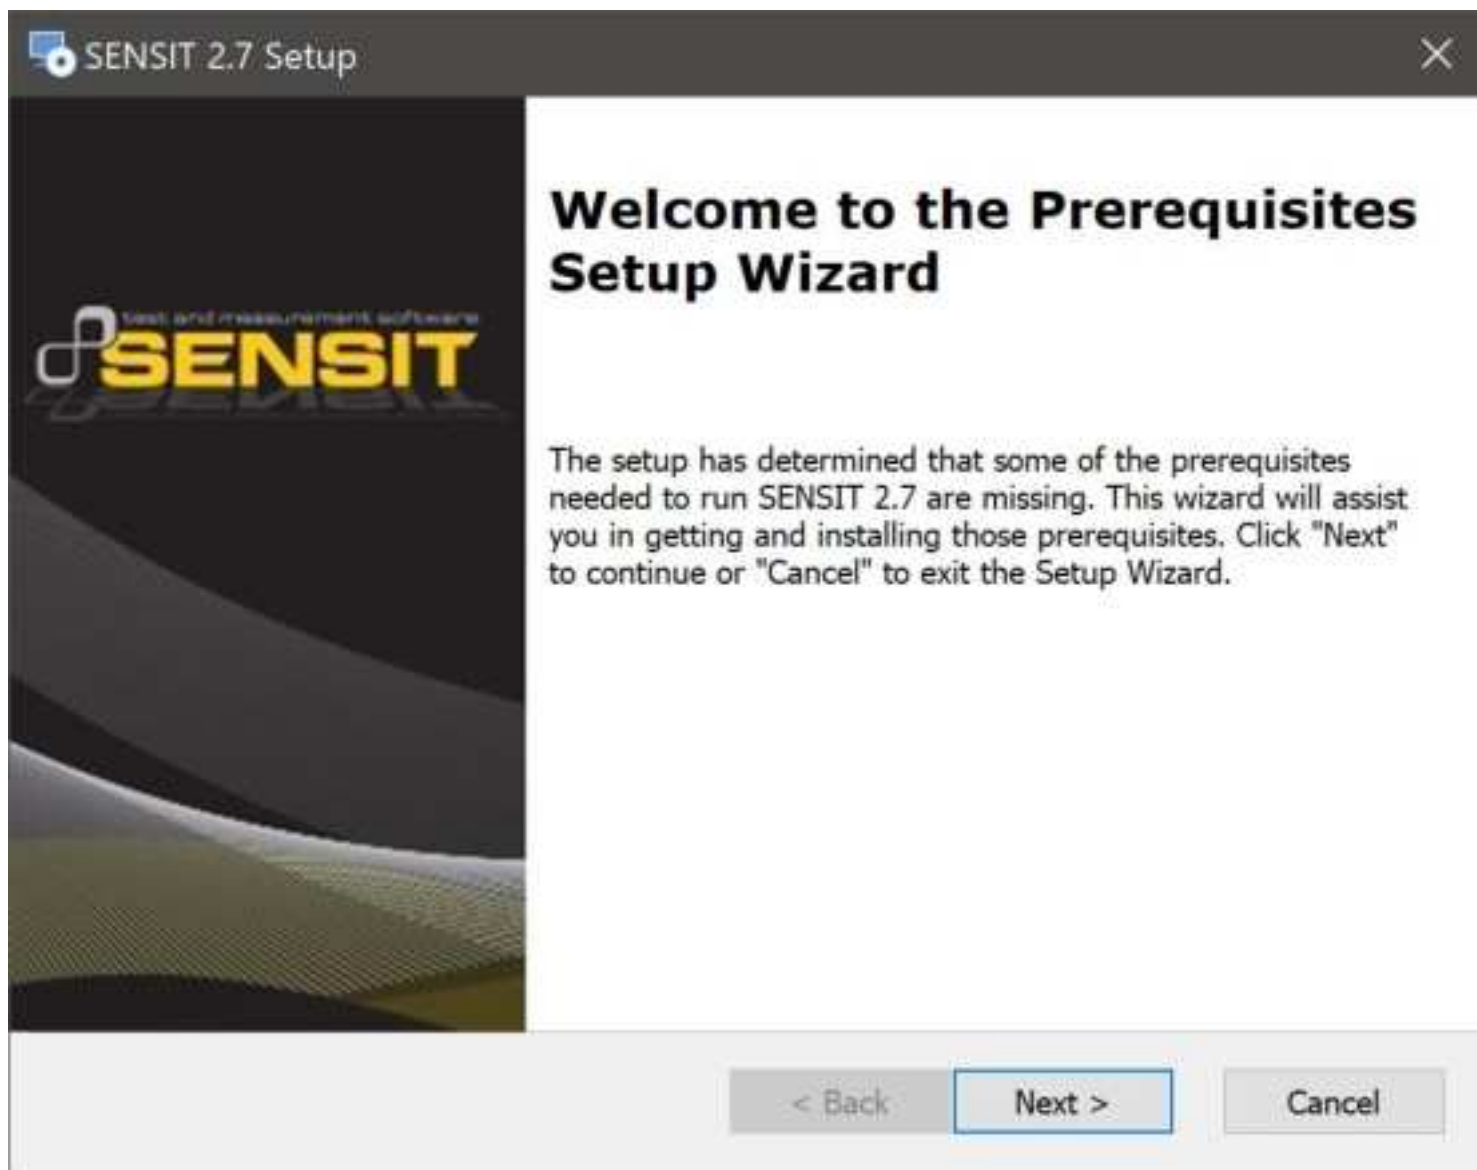

Prerequisites

Select all the prerequisites.
Click **Next** to continue.

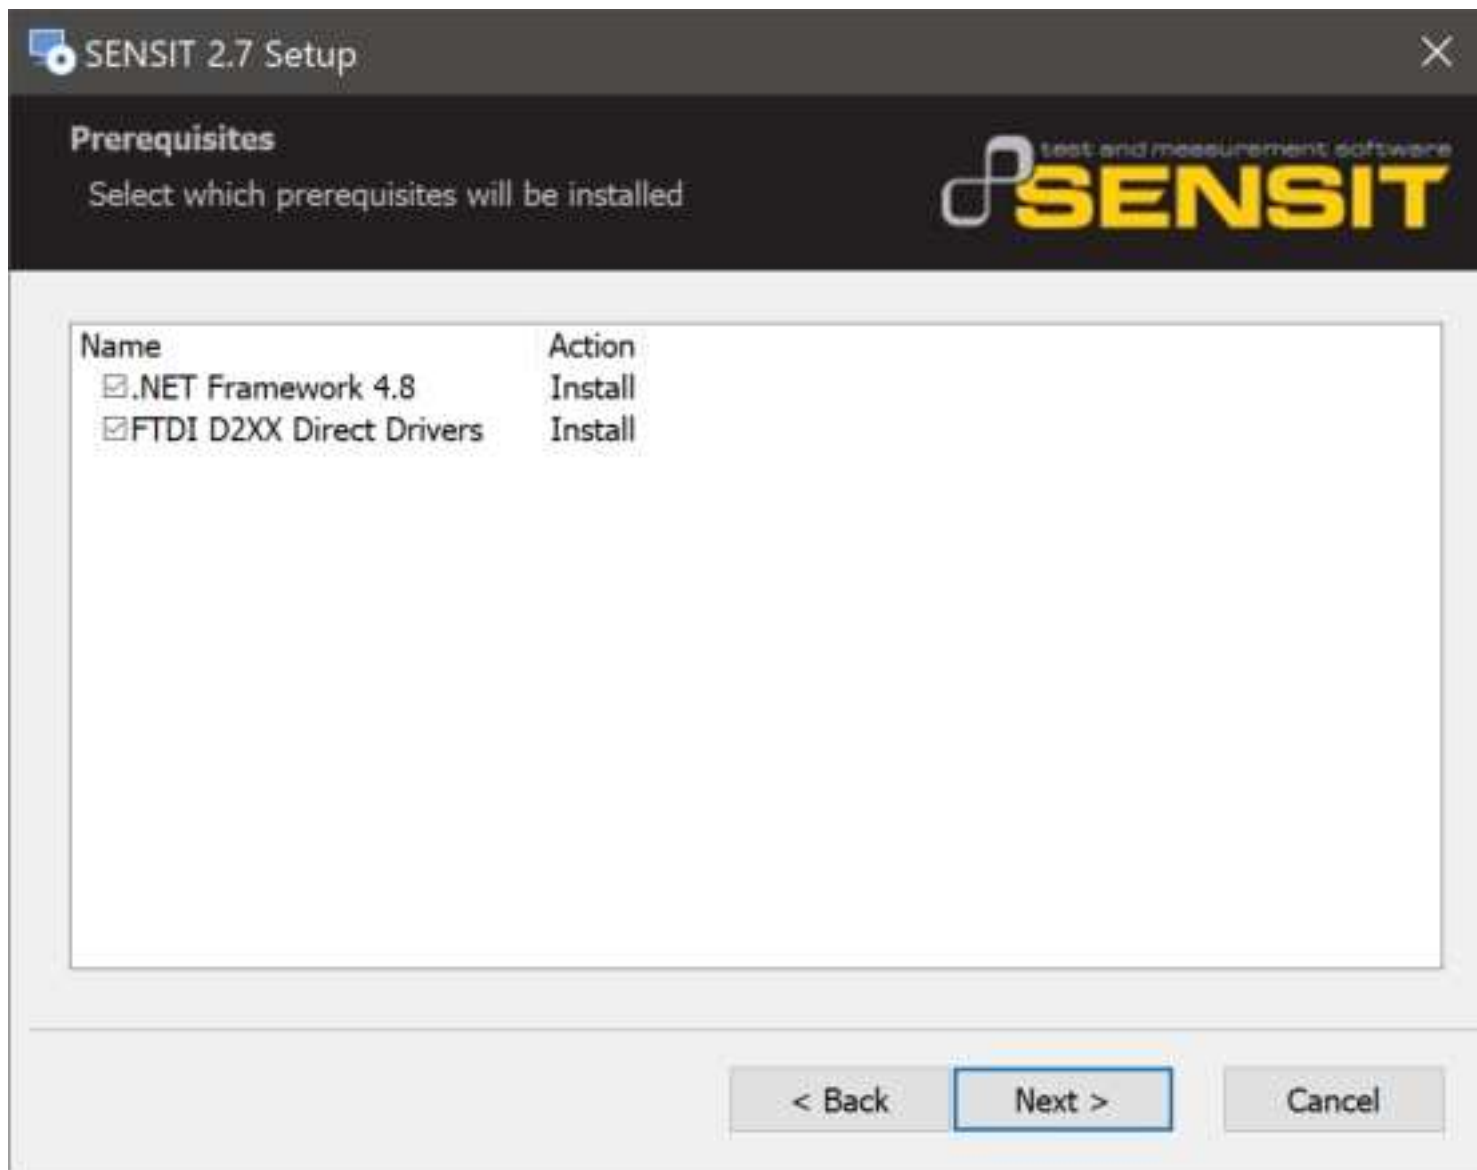

SENSIT 2.7 Setup

Prerequisites
Select which prerequisites will be installed


test and measurement software
SENSIT

Name	Action
☒ .NET Framework 4.8	Install
☒ FTDI D2XX Direct Drivers	Install

< Back **Next >** Cancel


Installing Microsoft .NET Framework

Microsoft .NET Framework will be installed.

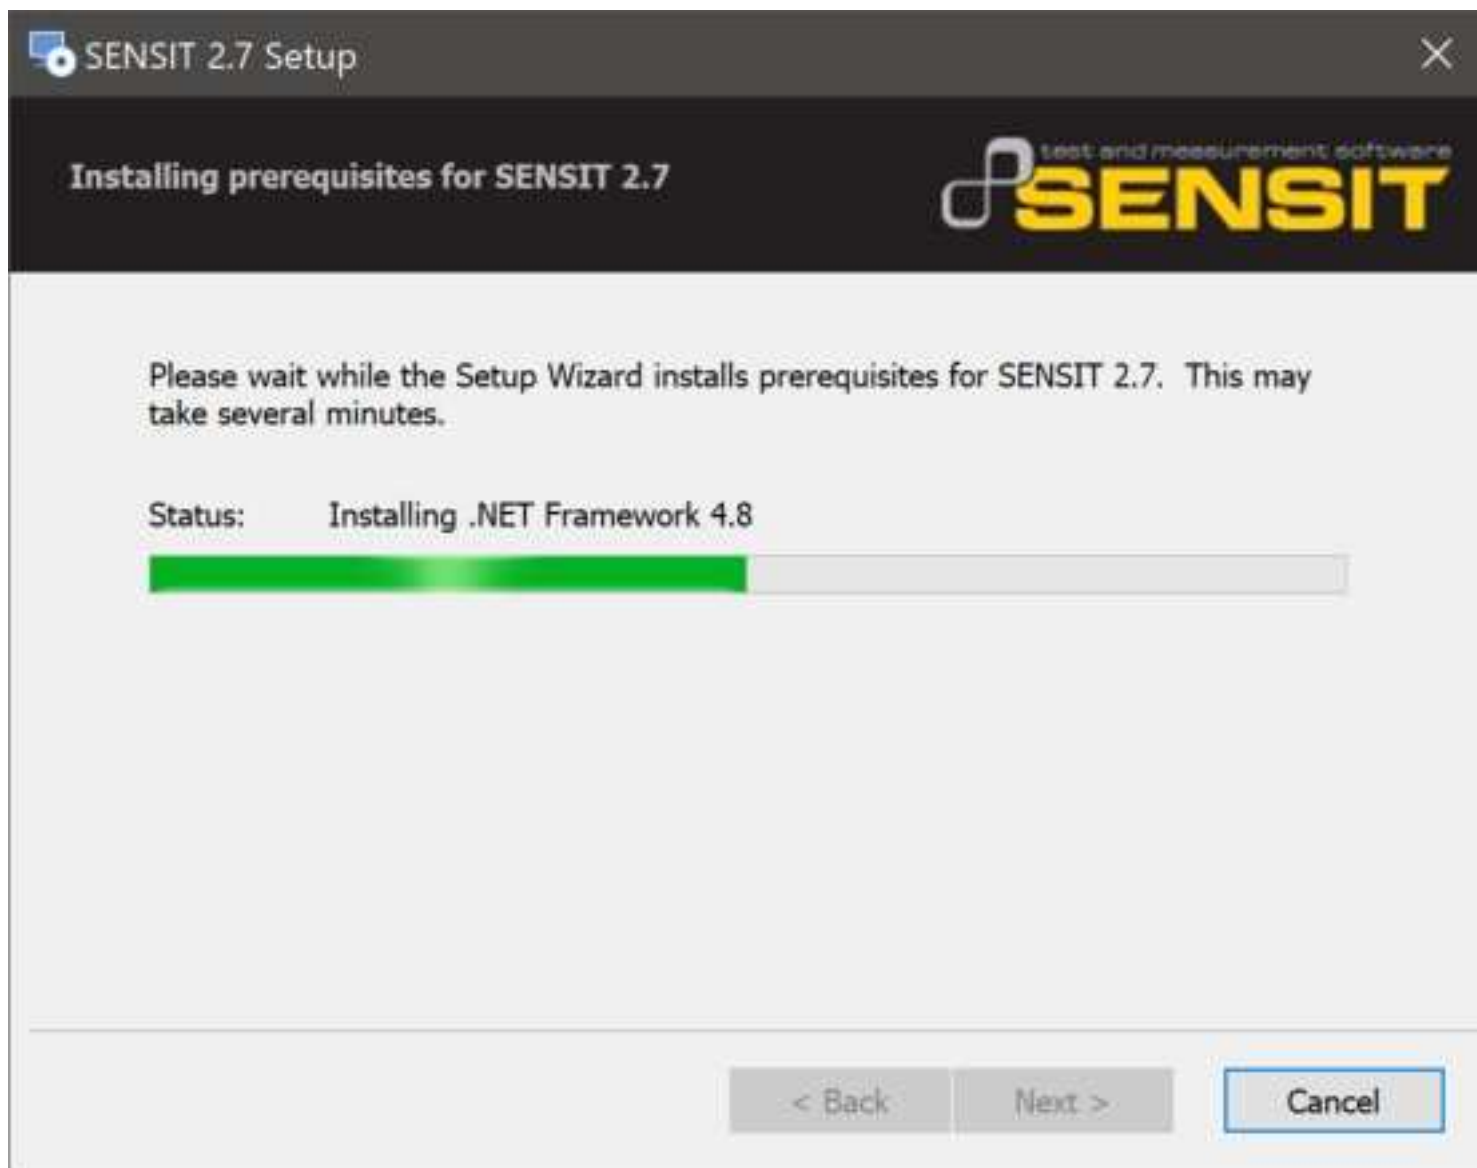

Installing FTDI D2XX Direct Drivers


FTDI D2XX Direct Drivers will be installed.

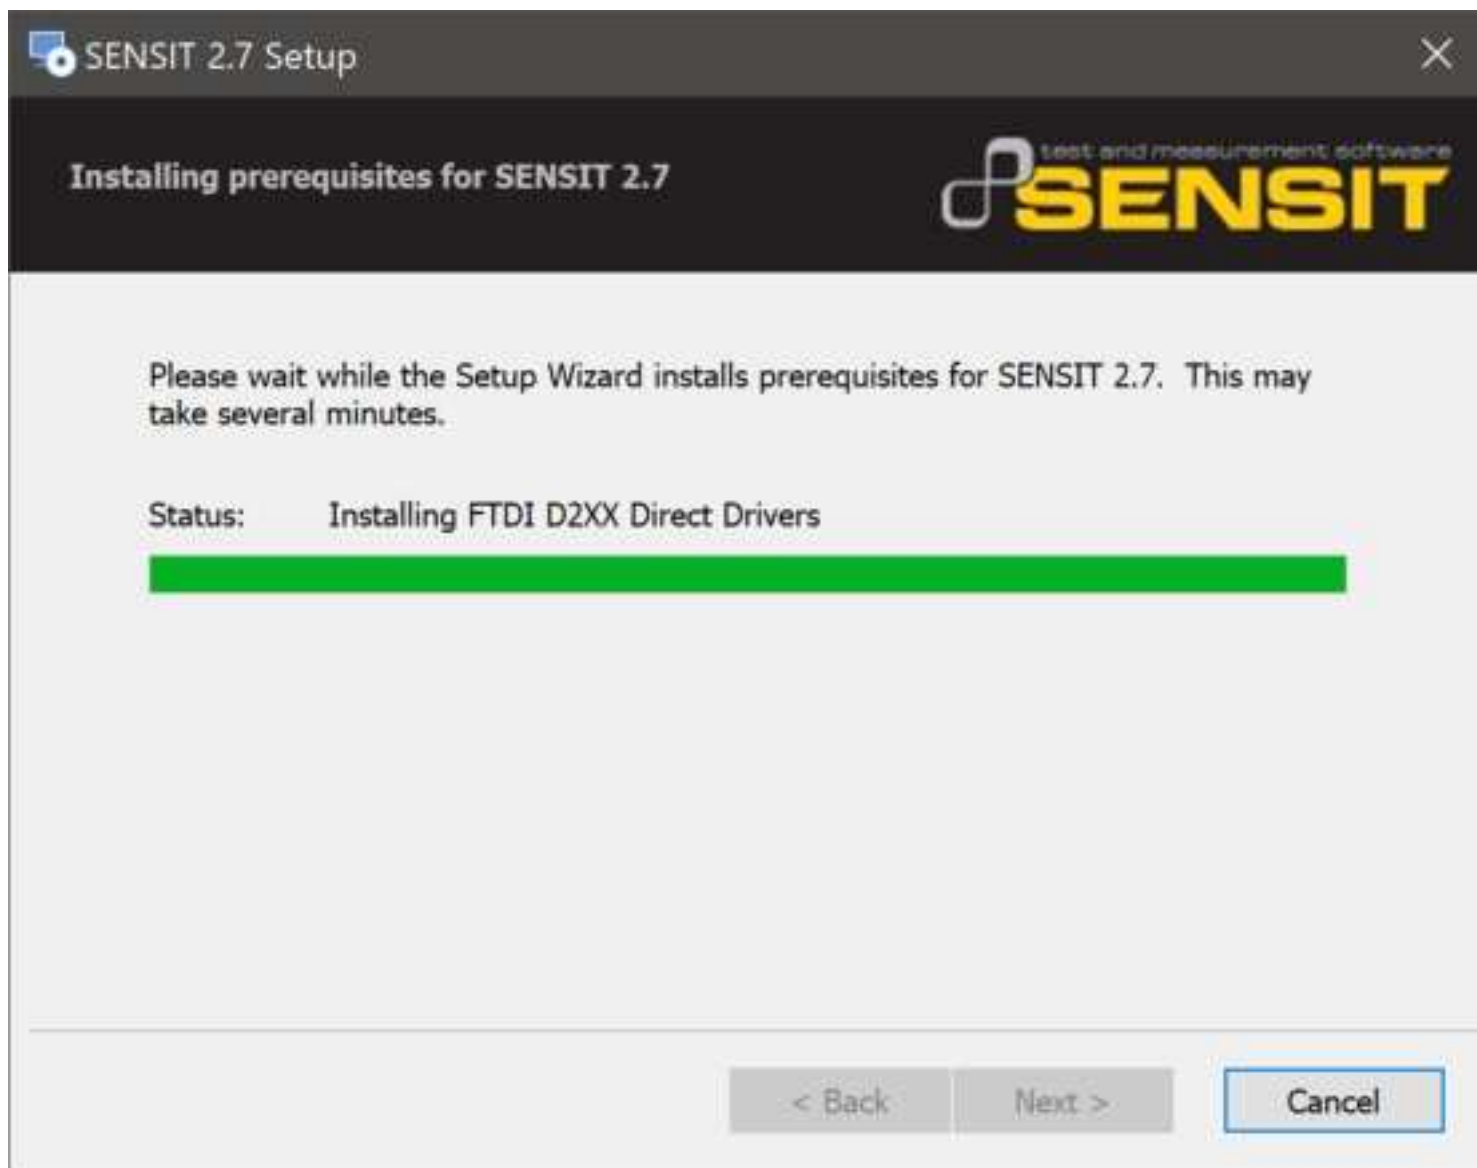


Extracting FTDI CDM Drivers

The FTDI CDM Drivers dialog will appear.

Click **Extract**.

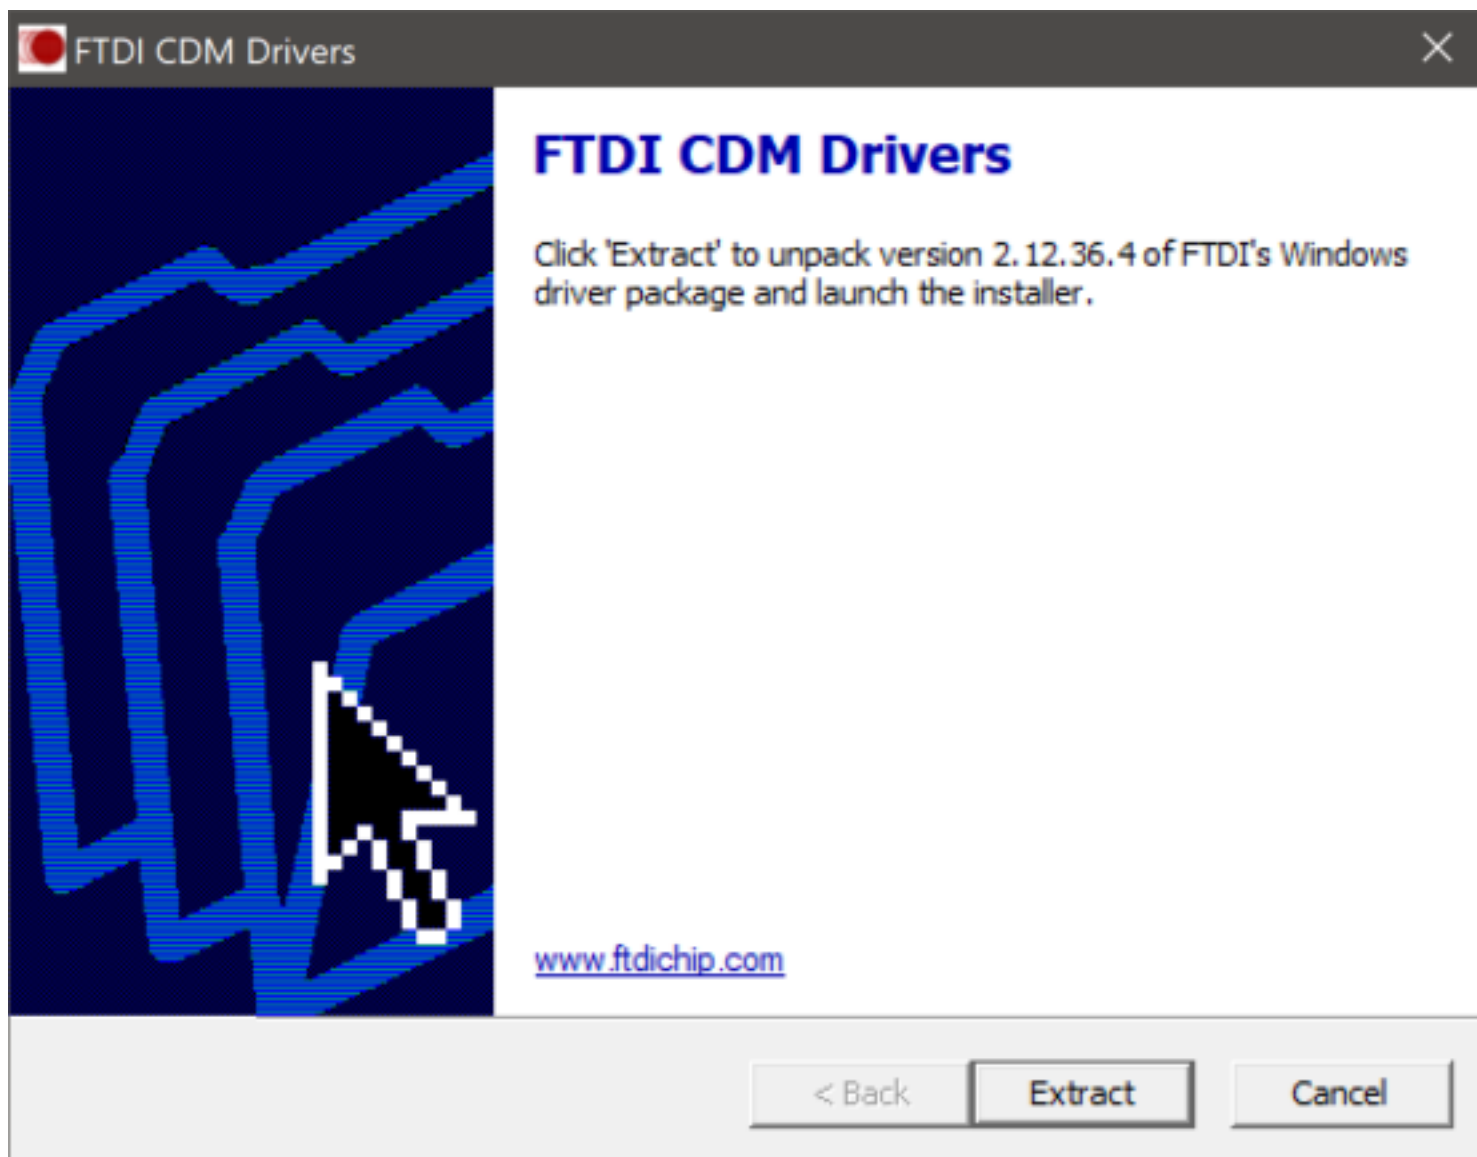

Device Driver Installation Wizard
Click **Next** to continue.

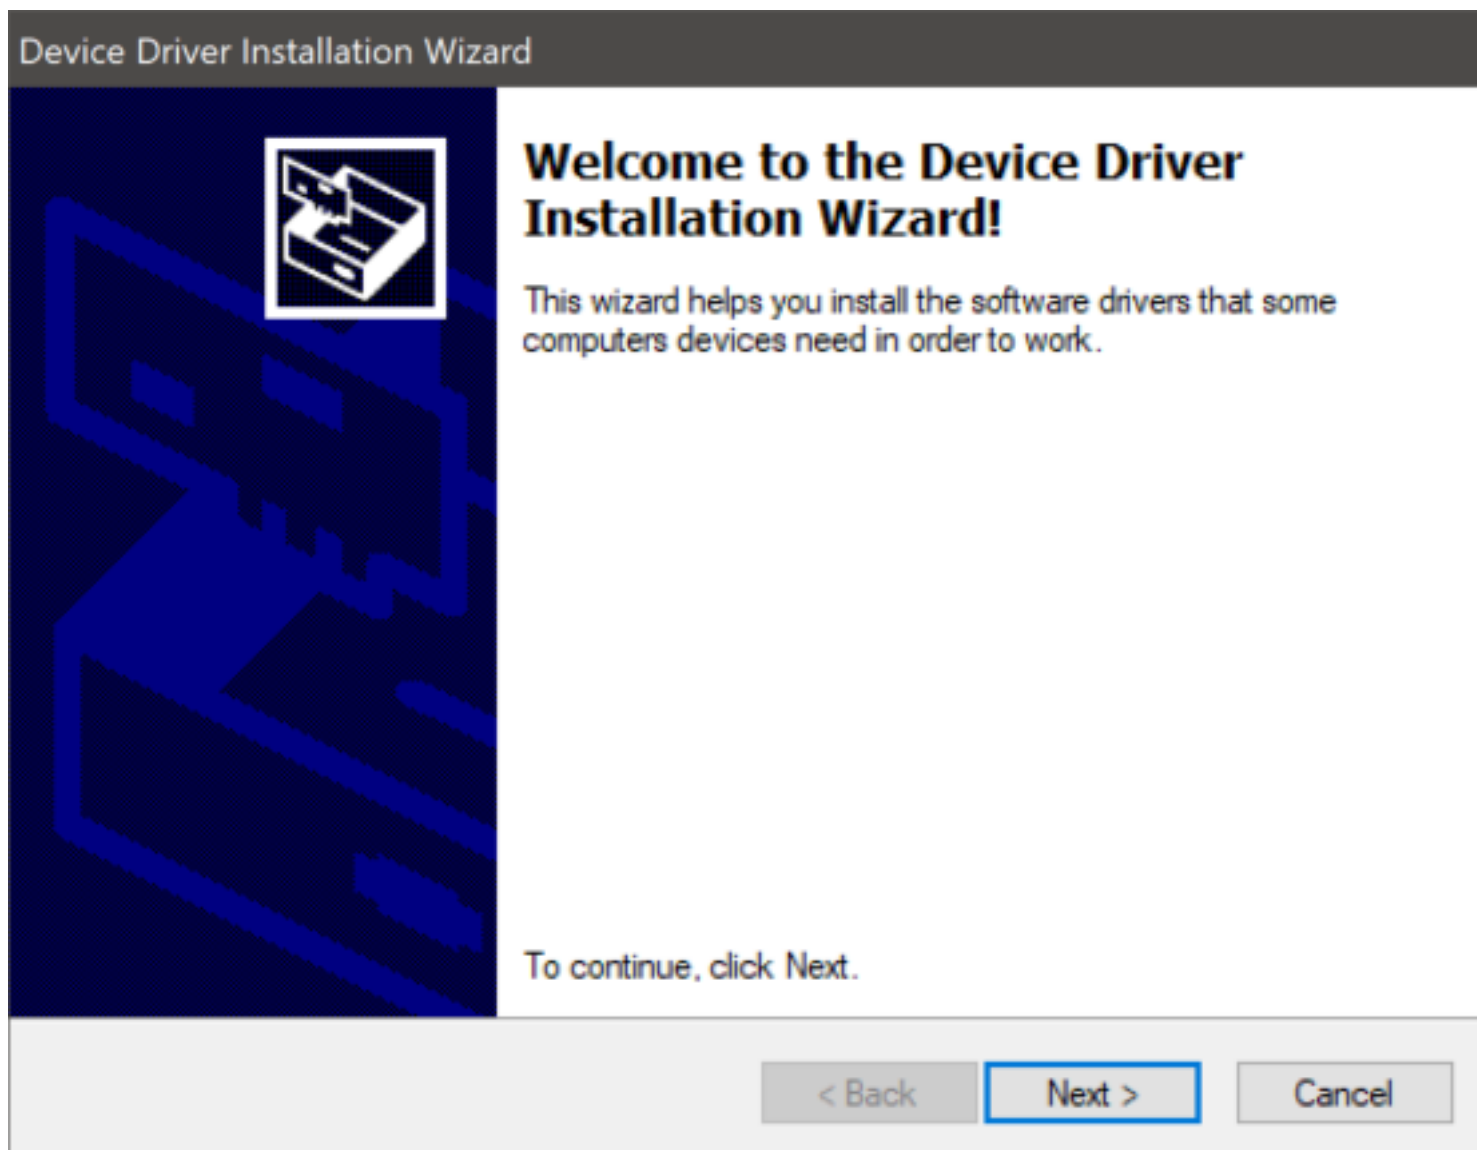

License Agreement

Select **I accept this agreement**.

Click **Next** to continue.

Device Driver Installation Wizard

License Agreement




To continue, accept the following license agreement. To read the entire agreement, use the scroll bar or press the Page Down key.

IMPORTANT NOTICE: PLEASE READ CAREFULLY BEFORE INSTALLING THE RELEVANT SOFTWARE:

This licence agreement (Licence) is a legal agreement between you (Licensee or you) and Future Technology Devices International Limited of 2 Seaward Place, Centurion Business Park, Glasgow G41 1HH, Scotland (UK Company Number SC136640) (Licensor or we) for use of driver software provided by the Licensor(Software).


BY INSTALLING OR USING THIS SOFTWARE YOU AGREE TO THE

☒ I accept this agreement
 ☐ I don't accept this agreement

Save As
Print


< Back
Next >
Cancel

Completing the Device Driver Installation Wizard
Click **Finish**.

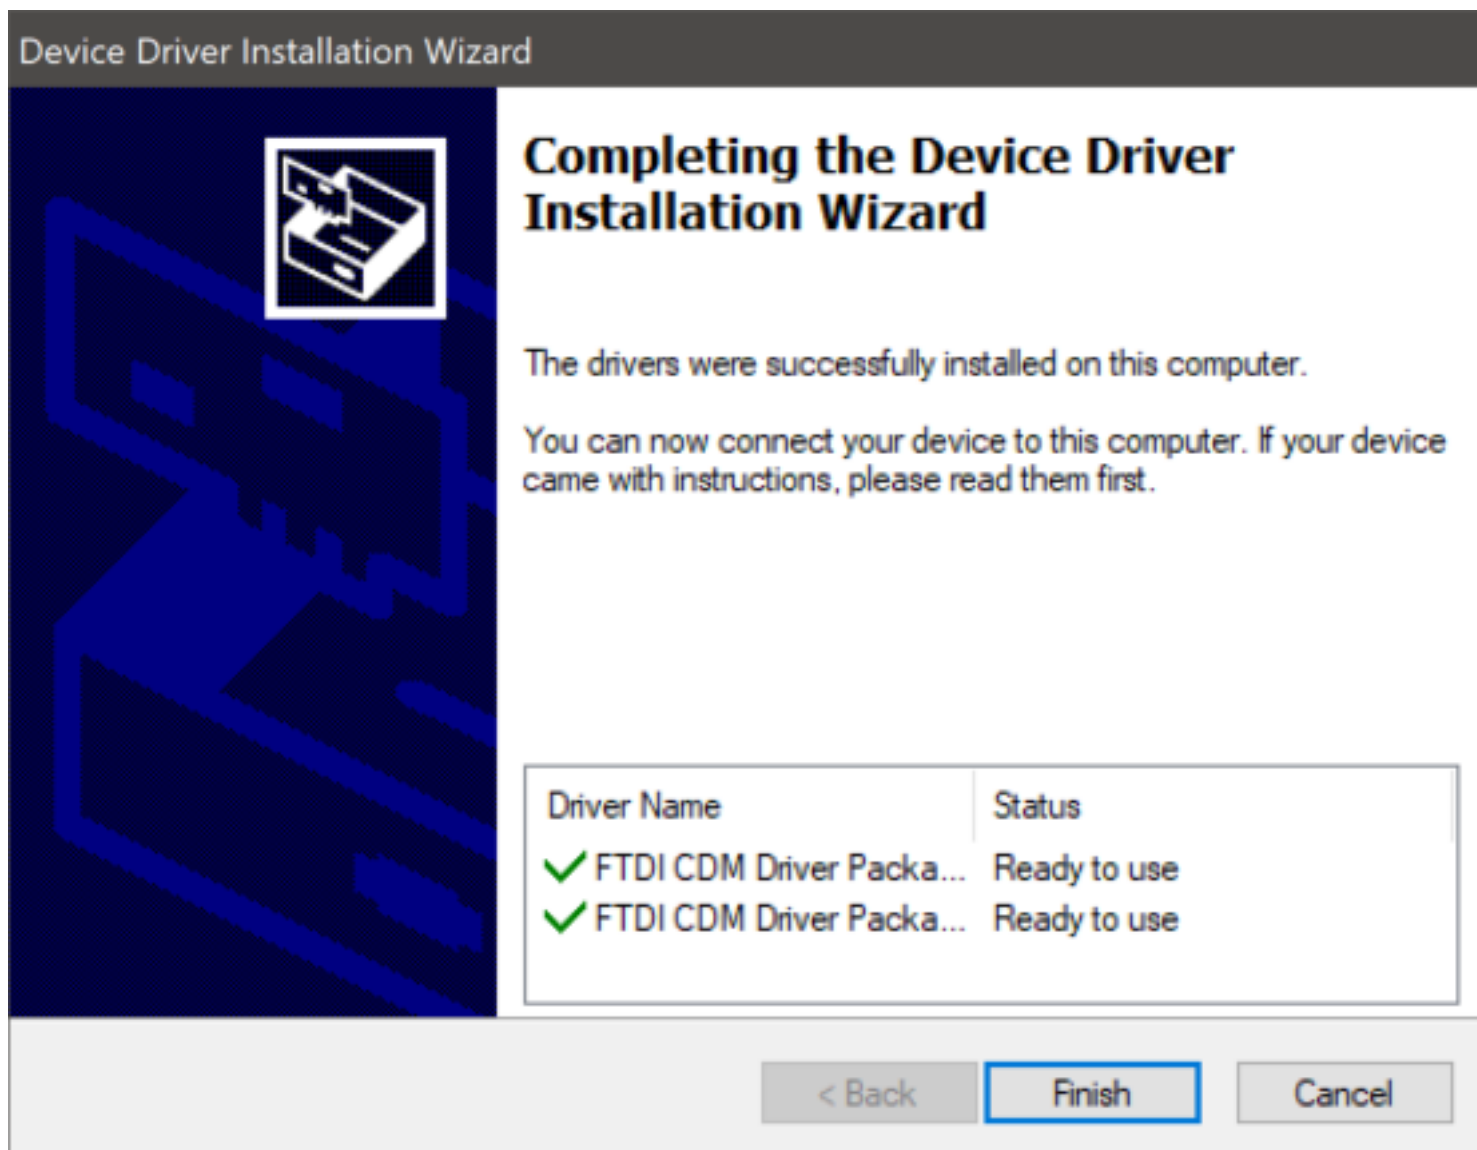

SENSIT Test and Measurement Setup Wizard

Click **Next** to continue.

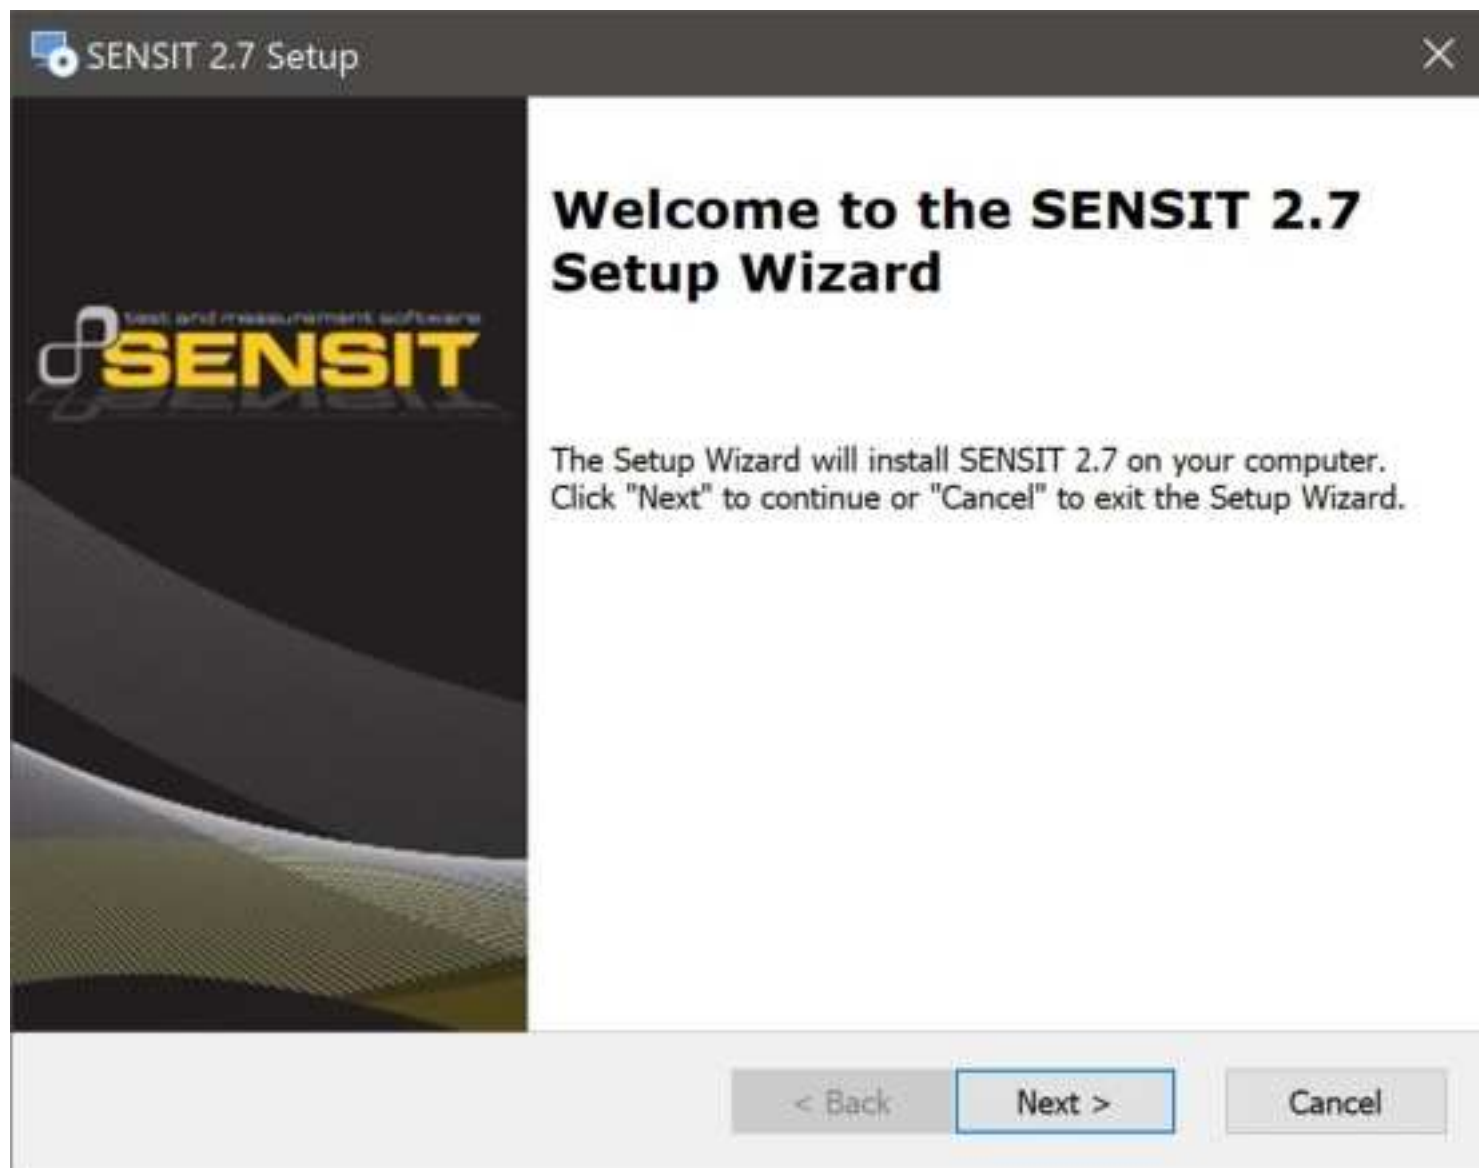

End-User License Agreement

Select **I accept the terms in the License Agreement**.
Click **Next** to continue.

The screenshot shows a software installation window titled "SENSIT 2.7 Setup". The window has a dark header bar with the title and a close button. Below the header, the text "End-User License Agreement" is displayed, followed by the instruction "Please read the following license agreement carefully". The SENSIT logo, which includes a stylized 'S' and the text "test and measurement software SENSIT", is in the top right corner. The main content area contains the title "End-User License Agreement for SENSIT Test and Measurement Software" and a bold warning: "IMPORTANT PLEASE READ THE TERMS AND CONDITIONS OF THIS LICENSE AGREEMENT CAREFULLY BEFORE CONTINUING WITH THIS SOFTWARE INSTALL:". Below this, a paragraph states: "This End-User License Agreement ('Agreement') is a legal agreement between you (either an individual person or a single legal entity) ('You') and FUTEK Advanced Sensor Technology, Inc. Irvine, California ('FUTEK') for the software product(s) identified above which may include associated software components, media, printed materials, and". At the bottom, there are two radio button options: "I accept the terms in the License Agreement" (which is selected) and "I do not accept the terms in the License Agreement". At the very bottom, there are three buttons: "< Back", "Next >" (which is highlighted with a blue border), and "Cancel".

SENSIT 2.7 Setup

End-User License Agreement

Please read the following license agreement carefully

test and measurement software
SENSIT

End-User License Agreement for SENSIT Test and Measurement Software

IMPORTANT PLEASE READ THE TERMS AND CONDITIONS OF THIS LICENSE AGREEMENT CAREFULLY BEFORE CONTINUING WITH THIS SOFTWARE INSTALL:

This End-User License Agreement ("Agreement") is a legal agreement between you (either an individual person or a single legal entity) ("You") and FUTEK Advanced Sensor Technology, Inc. Irvine, California ("FUTEK") for the software product(s) identified above which may include associated software components, media, printed materials, and


☒ I accept the terms in the License Agreement

☐ I do not accept the terms in the License Agreement

< Back Next > Cancel

Select Installation Folder


Click **Next** to continue.

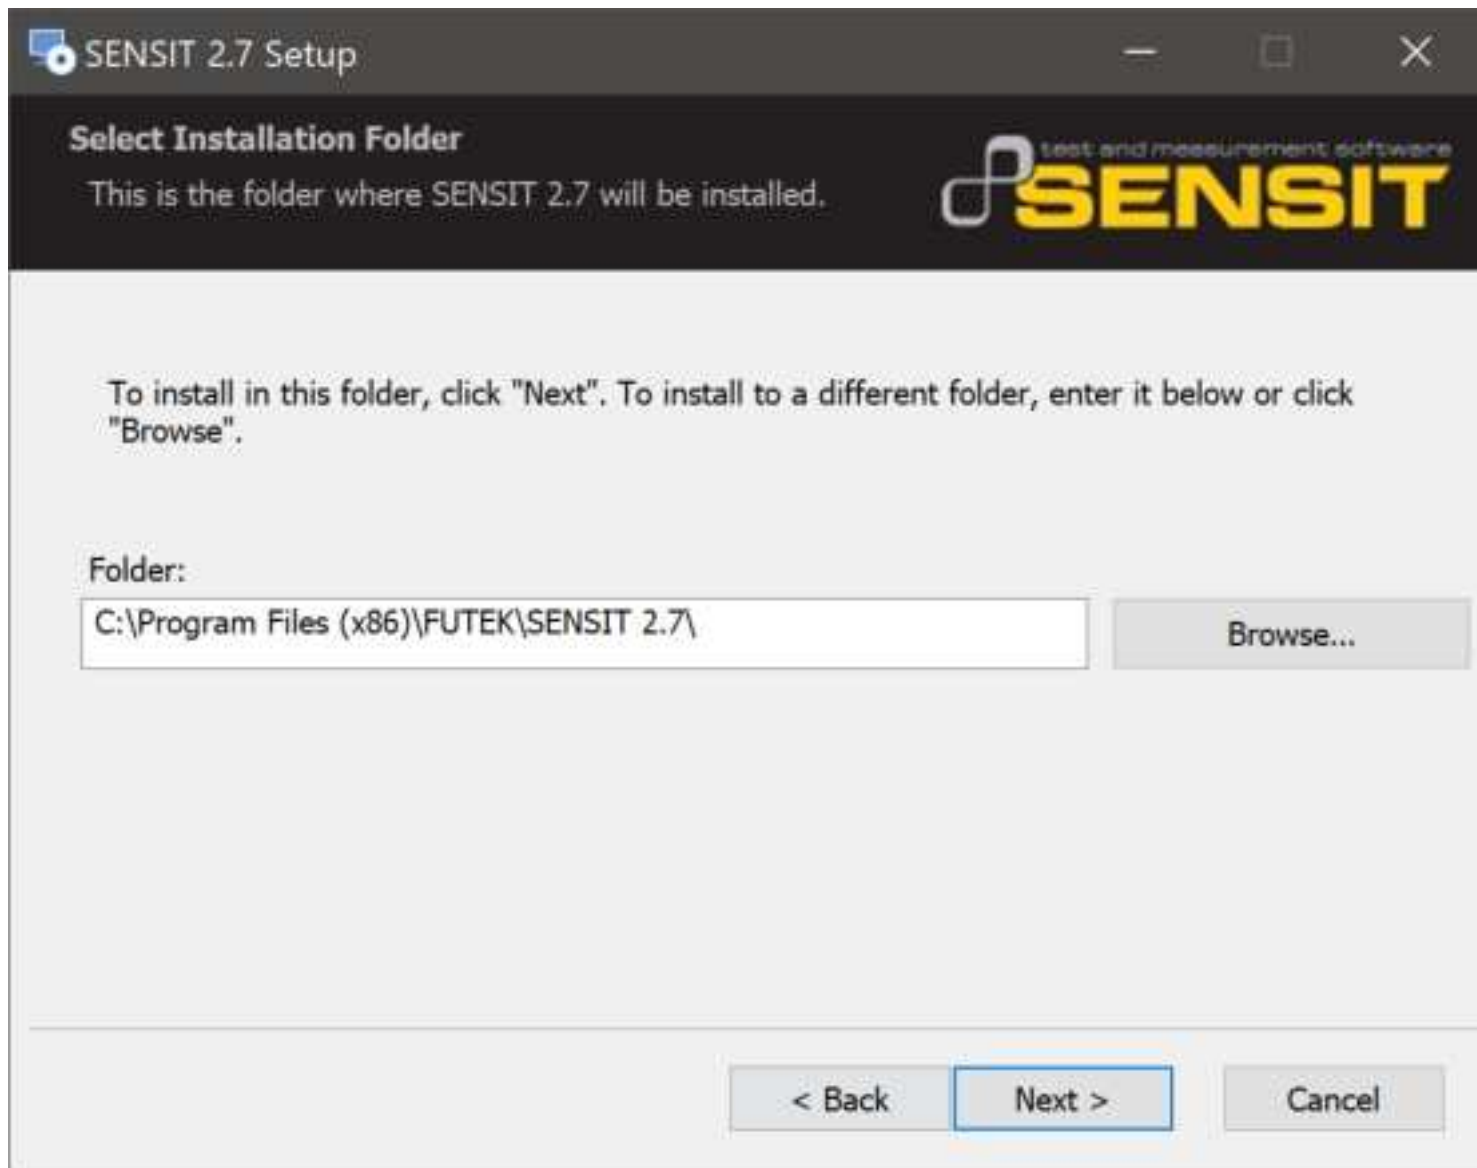

The screenshot shows the 'SENSIT 2.7 Setup' window. The title bar says 'SENSIT 2.7 Setup'. The main heading is 'Select Installation Folder'. Below it, a message states: 'This is the folder where SENSIT 2.7 will be installed.' To the right is the SENSIT logo with the tagline 'test and measurement software'. Below this, instructions read: 'To install in this folder, click "Next". To install to a different folder, enter it below or click "Browse".' There is a text box labeled 'Folder:' containing the path 'C:\Program Files (x86)\FUTEK\SENSIT 2.7\'. To the right of the text box is a 'Browse...' button. At the bottom of the window are three buttons: '< Back', 'Next >', and 'Cancel'. The 'Next >' button is highlighted with a blue border.


Ready to Install

Click **Install** to begin the installation.

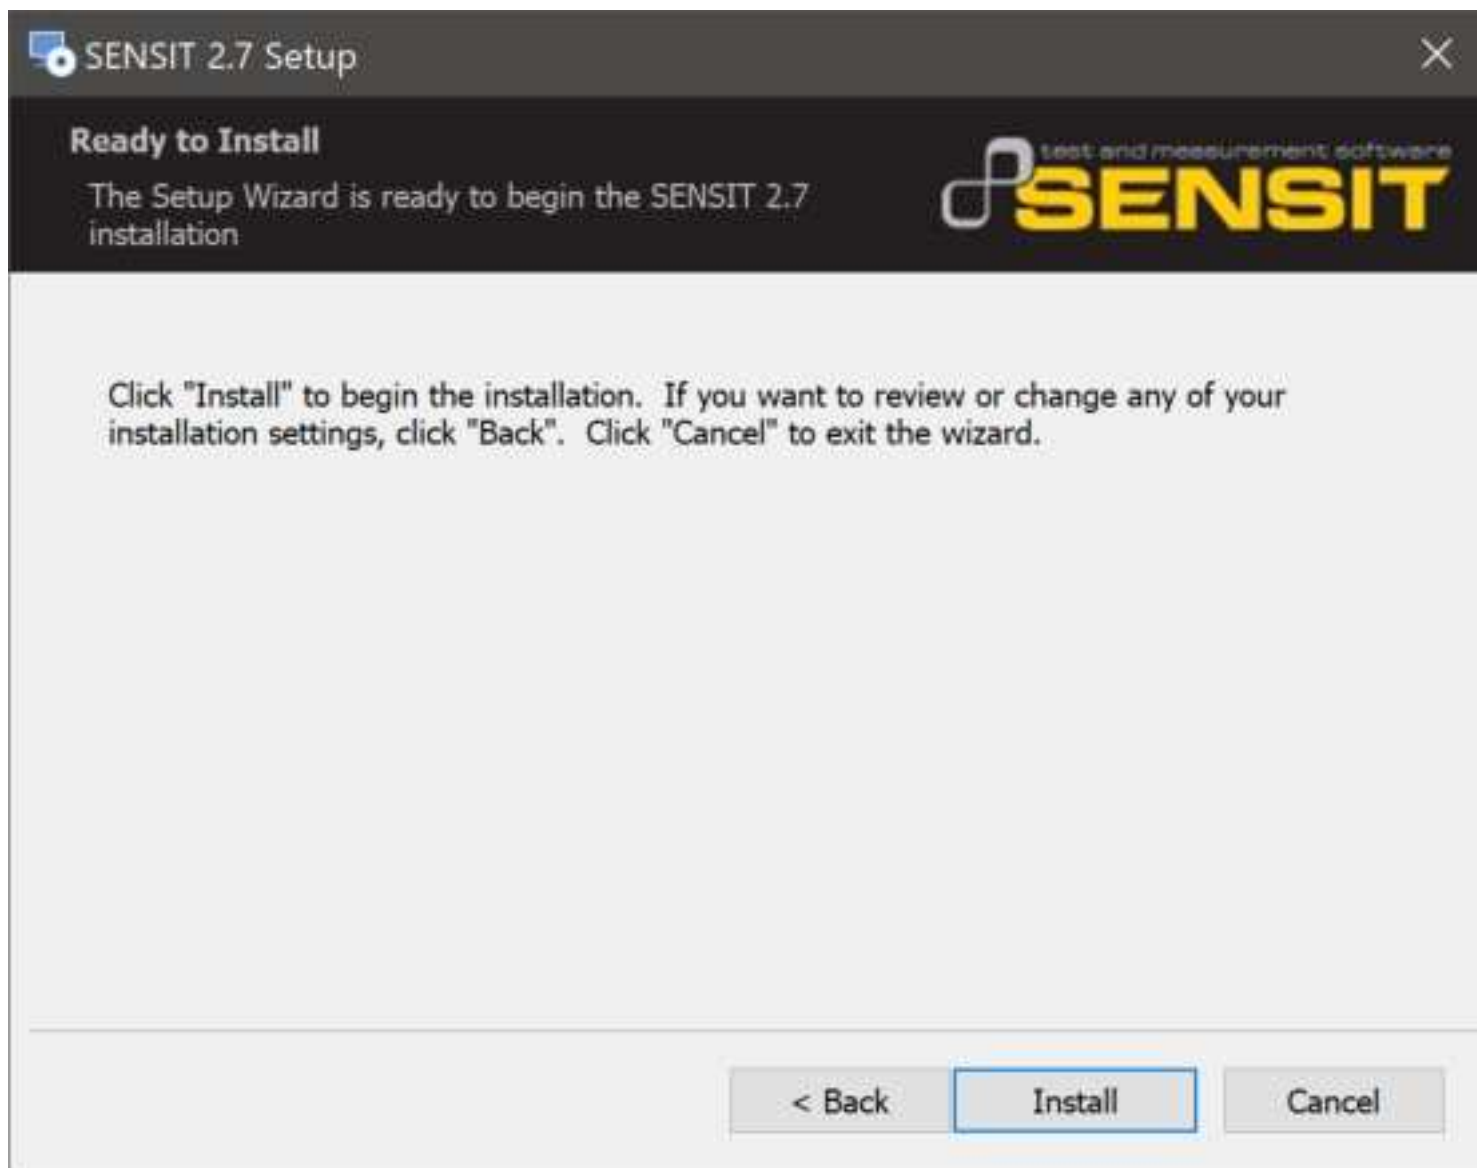


Installing SENSIT

Wait for the wizard to finish.

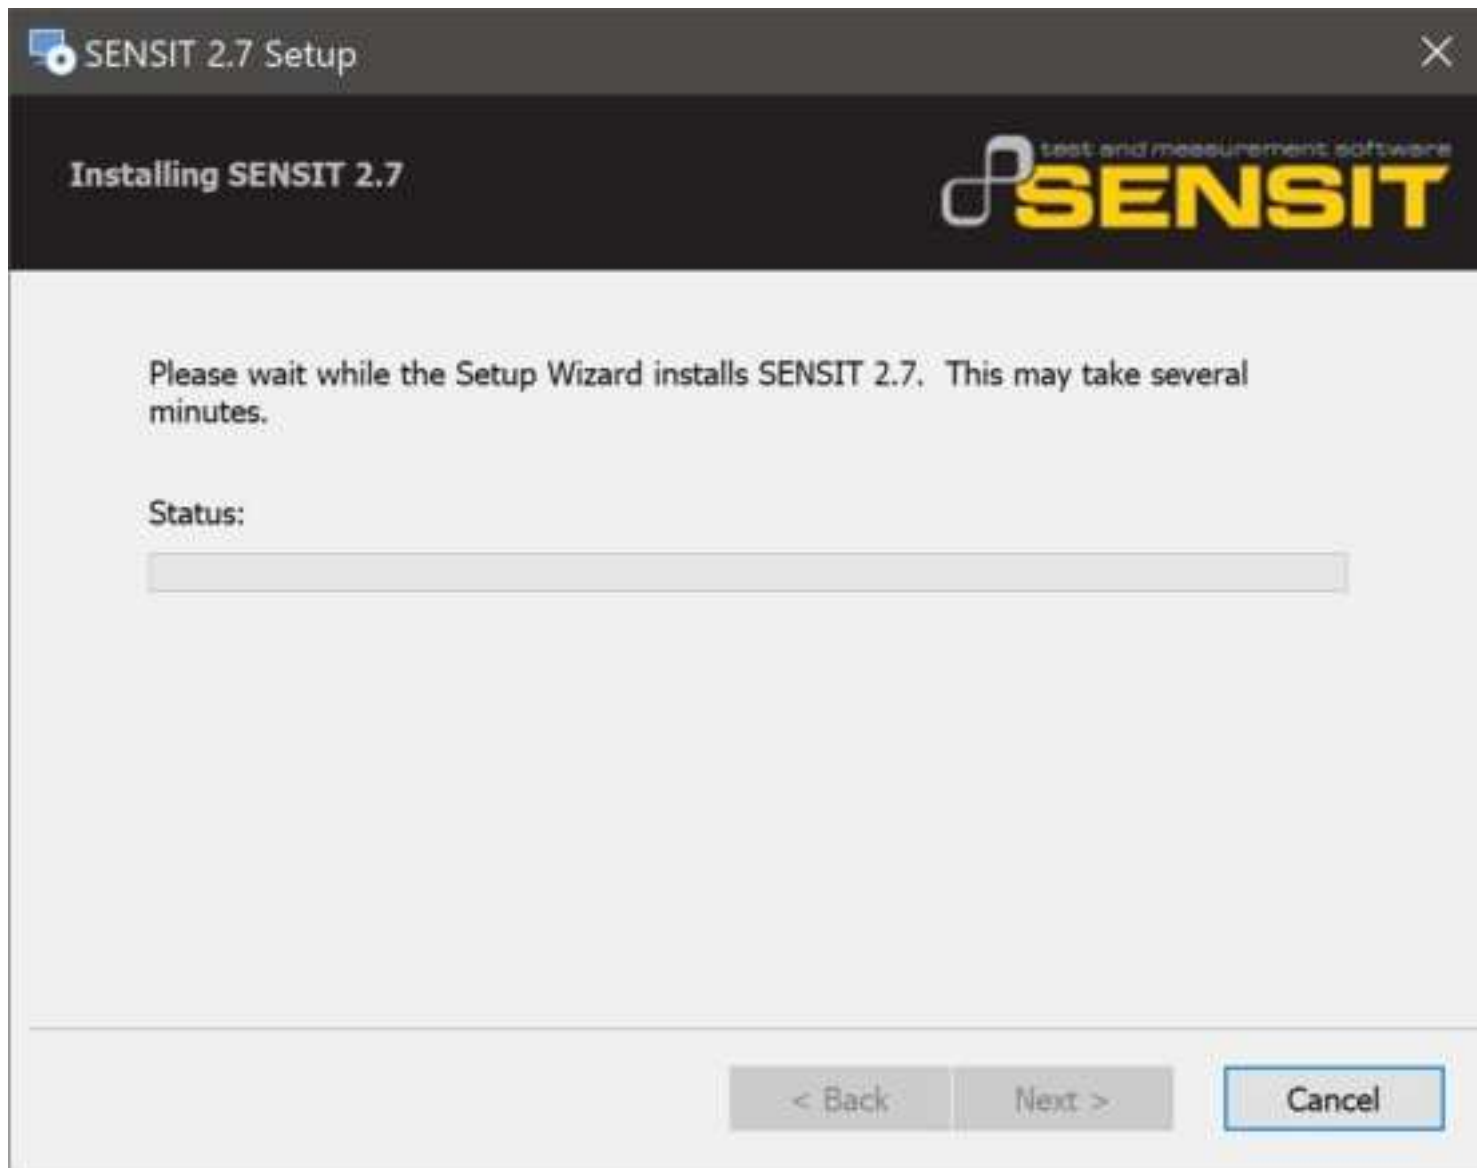

Completing the SENSIT Setup Wizard

Click **Finish** to exit the Setup Wizard.

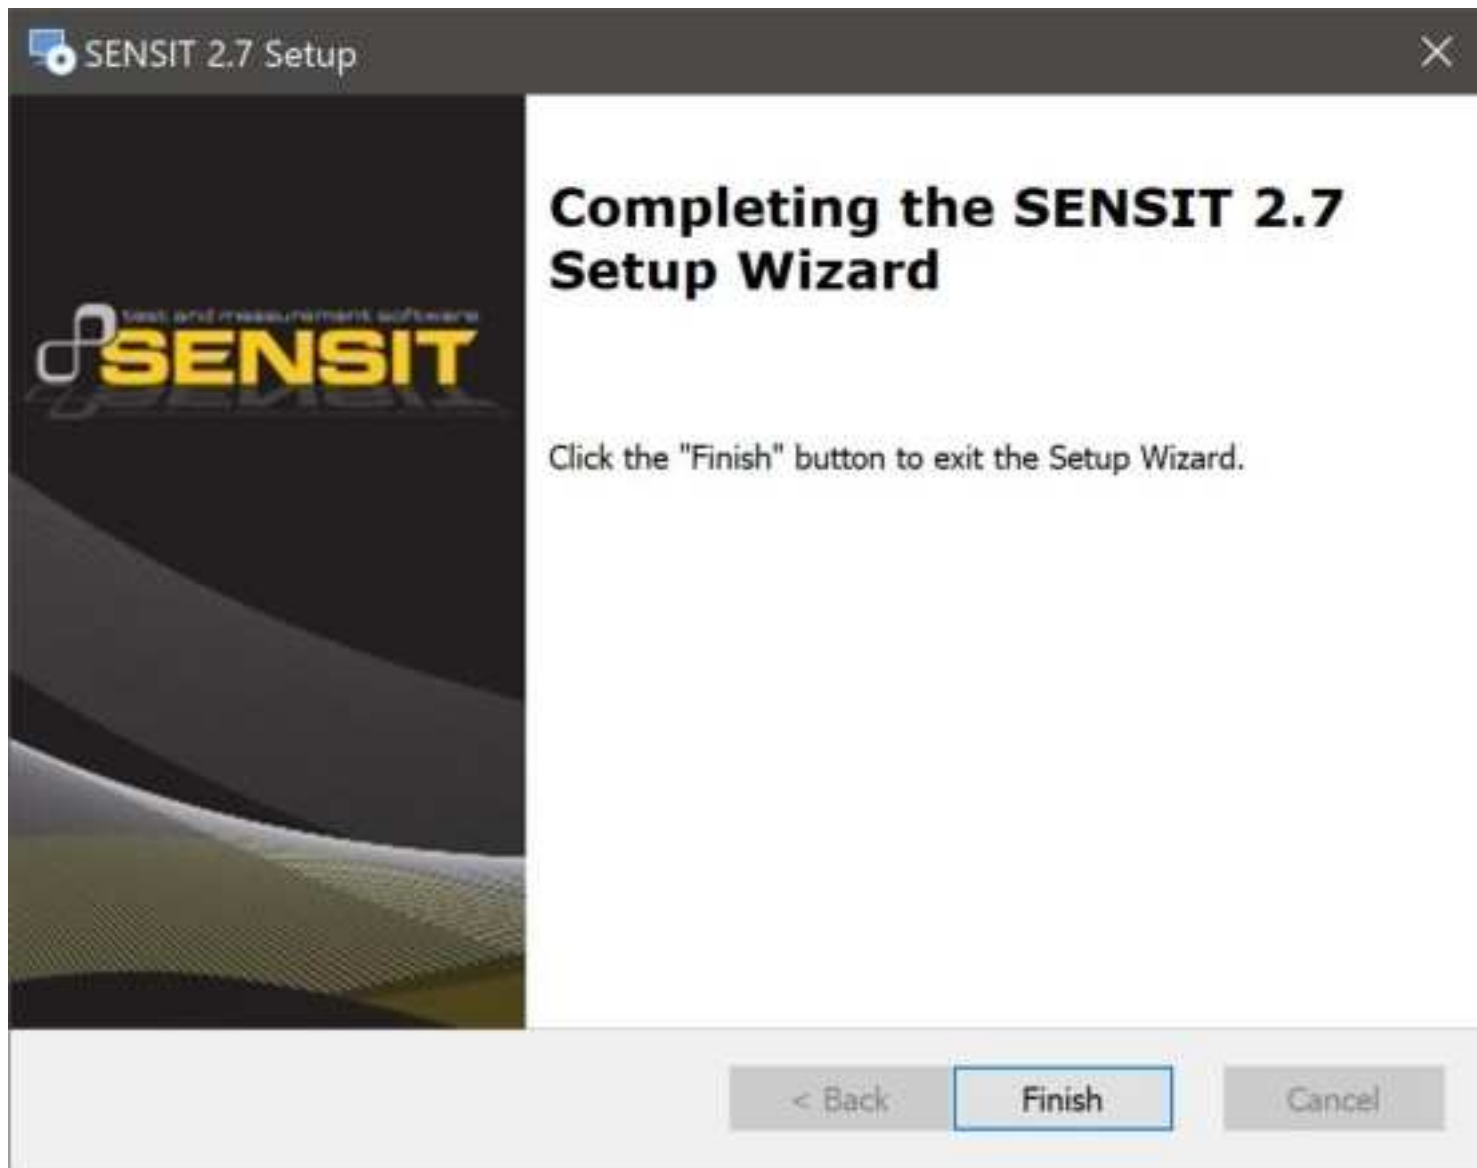

Release Information

SENSIT 2.7 Installation Guide – Released March 2022

Copyright

© 2022 FUTEK Advanced Sensor Technology, Inc. All rights reserved.

Disclaimer

Neither the whole nor any part of the information contained in, or the product described in this manual, may be adapted, or reproduced in any material or electronic form without the prior written consent of the copyright holder.

This product and its documentation are supplied on an as-is basis and no warranty as to their suitability for any particular purpose is either made or implied.

This document provides preliminary information that may be subject to change without notice.

Contact Information

FUTEK Advanced Sensor Technology, Inc.

Headquarters

10 Thomas
Irvine, CA 92618

Business hours:

7 am – 5 pm Pacific

Phone: (949) 465-0900

Email: futek@futek.com

Website: www.futek.com