

Tips & Tricks

Grill



The oil matters

For less smoke, we recommend using oils with a high smoke point—like canola, coconut, avocado, vegetable, or grapeseed oil—instead of olive oil.



Don't overcrowd

Evenly arrange and space out ingredients in a single layer to ensure consistent browning and even charring.



Batch cooking

Empty the fat/oil from the bottom of the pot if batch cooking more than twice. For best results, allow the unit to run for three minutes between batches to reheat the grill grate.



Check your food temp

The Foodi™ Grill cooks quickly, so monitor doneness with a food thermometer. Internal food temperature continues to rise as food rests, so remove it 5°F before target temperature is reached.

Air Crisp



Shake, shake, shake

When air fry crisping, check food and shake crisper basket frequently for even browning. Remove food at desired level of brownness.



Use oil for crispiness

For best results with fresh vegetables, use an even, light coating of canola oil.



Don't overcrowd

Evenly arrange and space out ingredients to ensure consistent browning.



Secure your food

Secure light food with toothpicks so it won't be blown around by the fan.

Bake/Roast



Convert traditional recipes

Use the Bake or Roast function to prepare foods typically cooked in the oven. Reduce the temperature by 25°F. Check food often to avoid overcooking.



Prevent oxidation

Fruits like apples and pears brown quickly when cut. To prevent oxidation, soak them in water with a squeeze of lemon juice for 5 minutes.



Trim the fat

Before dehydrating meat, make sure to trim off all fat, as it does not dry out and could spoil.

 


Pasteurize jerky

Before dehydrating meats and fish, use the Roast function at 330°F for 1 minute to fully pasteurize them.


Dehydrate

Cleaning Instructions

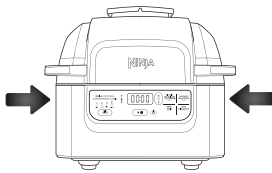


Allow base to cool

 before moving the unit, as the sides will be hot after cooking.

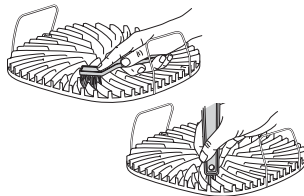


Use cleaning brush

 to help clean the accessories. The opposite end of the brush is a scraper to help remove baked-on food.

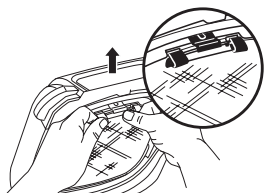

Remove splatter shield

 after it cools and clean after each use. Soak overnight and use cleaning brush to help remove baked-on grease from the frame and front tabs.

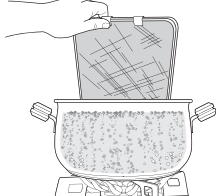

Deep Clean

the splatter shield by putting it directly into a pot of water. Once water comes to a boil, leave inserted for 10 minutes. **All parts are dishwasher safe, except the Foodi Thermometer and main unit.**

NINJA Foodi

 
GRILL

The grill that sears, sizzles, and air fry crisps.

Here's what's in the box



Foodi Grill

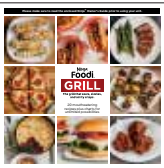

Recipe Book



Quick Start Guide



Owner's Guide



Splatter Shield

Must always be installed when unit is use.



Removable Cooking Pot

Must always be installed when unit is in use. Cook directly in the pot when roasting or baking.



Grill Grate

Use in the cooking pot for best grilling results.



Crisper Basket

Use in the cooking pot for best air crisping results.



Griddle

Use it on the grill grate for best griddling results.



Kebab Skewers

5 stainless steel skewers for grilling meat and vegetable kebabs.

Preheat for better results

For best grilling results, preheat the Foodi Grill before adding food. It may take about 8 minutes. Adding food before or during preheat may lead to overcooking.



Grilling 101

Use your Ninja Foodi Grill to grill indoors—to get even char, grill marks, and juicy flavor.



Grill Grate

Unique design promotes optimal airflow for even cooking, crisping, and charring.



Want juicier meat?

After grilling, remove meat and let rest at least 5 minutes before cutting it.

More flavor. Less smoke.

After countless hours of recipe testing, our chefs have paired your favorite foods with a recommended temperature setting that will maximize grill flavors while minimizing smoke. We've also created a list of popular ingredients with our recommended cooking directions.


LOW (400°F)
Best for bacon, sausages, and calzones, and when using thicker barbecue sauces.


MED (450°F)
Best for frozen meats and marinated food.


HIGH (500°F)
Best for steaks, chicken, and burgers.


MAX (up to 510°F)
Best for veggies, fruit, fresh/frozen seafood and pizza.

FOR LESS SMOKE, WE RECOMMEND USING OILS WITH A HIGH SMOKE POINT—LIKE CANOLA, COCONUT, AVOCADO, VEGETABLE, OR GRAPESEED OIL—INSTEAD OF OLIVE OIL.
If you choose to cook ingredients at a higher temperature than recommended, it may result in more smoke and food having a burnt, acrid flavor.

Grilling Cheat Sheet

 New York Strip Steaks 2 steaks (400–450g each, 3cm thick) Pat dry. Rub with 1 teaspoon canola oil. Season with salt and pepper. HIGH 9–11 mins Frozen: MED 18–24 mins Flip halfway through cooking.	 Boneless Chicken Breasts 4 breasts (200–255g each) Pat dry. Rub with 1 teaspoon canola oil. Season with salt and pepper. HIGH 14–18 mins Frozen: MED 22–26 mins Flip halfway through cooking.	 80% Lean Burgers 4 patties (115g each) Season with salt and pepper. Store-bought: HIGH 4–6 mins Handmade: HIGH 5–9 mins Frozen: MED 10–15 mins Flipping not necessary.	 Salmon 4 fillets (140–170g each) Pat dry. Rub with 1 teaspoon canola oil. Season with salt and pepper. MAX 7–9 mins Frozen: MAX 10–13 mins Do not flip during cooking.
 Fresh Bone-in Chicken Thighs 4 thighs (200–255g each) Pat dry. Rub with 1 teaspoon canola oil. Season with salt and pepper. HIGH 23–26 mins Frozen: MED 25–28 mins Flip halfway through cooking.	 Boneless Pork Chops 4 chops (225g each) Pat dry. Rub with 1 teaspoon canola oil. Season with salt and pepper. HIGH 14–16 mins Frozen: MED 20–23 mins Flip halfway through cooking.	 Hot Dogs (4 hot dogs) Whole HIGH 3–5 mins Flip halfway through cooking.	 Sausages 6 sausages (85–114g each) Whole LOW 8–12 mins Frozen: LOW 10–14 min Flip halfway through cooking.
 Shrimp 0,45kg Jumbo (16–18 count) Pat dry. Rub with 1 teaspoon canola oil. Season with salt and pepper. MAX 3–5 mins Frozen: MAX 4–6 mins Do not flip during cooking.	 Bone-In Marinated/Barbecue Chicken Thighs 4 thighs (200–255g each) MED 18–21 mins LOW 20–25 mins if using a thick sauce Flip 2 to 3 times while cooking.	 Boneless Marinated/Barbecue Chicken Breast 4 breasts (200–255g each) MED 16–19 mins LOW 19–24 mins if using a thick sauce Flip 2 to 3 times while cooking.	 Pineapple (6–8 slices or spears, 5cm thick) MAX 7–9 mins Flip gently several times during cooking.
 Peppers & Onions (1 pepper, 1 onion) Cut in 2.5cm slices MAX 11–13 mins Stir gently several times during cooking.	 Yellow or Green Squash 3–4 each Cut in quarters lengthwise. Toss with canola oil. Season with salt and pepper. MAX 12–16 mins Flip several times during cooking.	 Fresh Corn on the Cob (4 ears) Brush lightly with canola oil. Season with salt and pepper. MAX 10–13 mins Flip halfway through cooking.	 Fresh Asparagus (1 bunch) Toss with canola oil. Season with salt and pepper. MAX 5–7 mins Spread evenly on grill grate. Do not flip.

For more charts, please reference the included Inspiration Guide.

Using your grill's functions

FUNCTION	ACCESSORY USED	TEMP	TIME	PREHEAT
GRILL Grill indoors for juicy, char-grilled flavor.	Optional 	Adjust temp between Low and Max. Refer to the previous page or the Inspiration Guide for which settings to use. 	Set time, in minutes, and press START/STOP. 	PRE will appear, and the blinking bars will show preheating progress. Once preheated, "Add Food" will display. Do not add food before preheating is complete. Grill preheat can take approximately 8 minutes because of the grill grate's high density. Air Crisp, Roast, and Bake preheat takes approximately 3 minutes. If you just used a different function, and the grill grate is at room temperature when you place it in the unit, "Add Food" may appear on the screen immediately. We recommend allowing the grill grate to heat up for at least 6 minutes before placing ingredients on it.
AIR CRISP Crisp without the guilt of deep frying.		Adjust temp between 300°F–450°F. 	Set time, in minutes, and press START/STOP. 	
ROAST Roast your favorite foods right in the pot.		Adjust temp between 250°F–500°F. 	Set time, in minutes, and press START/STOP. 	
BAKE Make cakes and other baked goods easily and quickly.	Not included 	Adjust temp between 250°F–400°F. 	Set time, in minutes, and press START/STOP. 	
DEHYDRATE Create delicious homemade chips and jerky.		Adjust temp between 105°F–195°F. 	Add food, set time, in hours, and press START/STOP. There is no preheat. 	

Sneak a Peek

Lift the hood while cooking to check on or flip food. Unit will automatically pause cooking when hood is lifted and resume when it is closed.

