

Safety precautions

Dear users:

thank you for using our portable folding washing machine, in order to you can better use this product, to prevent personal injury and article damage accidents, please be sure to read and follow the contents of the following symbols in this instruction manual.



The act or operation that must be prohibited



The act or operation that must be followed



If the operation error may cause damage to goods and property

- **Work scene:** do not wash clothes contaminated by gasoline, paint, corrosive or acid-base chemicals with a portable folding washing machine
- **Use and maintenance:** Please select the appropriate detergent, use detergent, please pay attention to prevent detergent splashing into the eye, if splashed into the eye, please immediately wash with water; Regularly wipe the plug with a dry cloth (dust or moisture, etc., may lead to poor contact); children must, the whole machine (may lead to leakage, etc.)
- ⊘ **Use and maintenance:** do not touch the plug with wet hands. Do not unplug with a hand-held cord; do not store gasoline or other flammable gases and liquids near the washing machine (to avoid causing a fire); do not pour or pour water on the lower part of the washing machine (which may cause the whole machine to have poor electricity and can not work); do not pour hot water higher than 60 degrees, directly into the washing machine washing machine clothes (in order to avoid the product due to high temperature heat deformation, resulting in the whole machine bad). In the use process, please be sure to complete the current washing program and then power off, do not run the program is not completed, direct power off, will lead to damage to the performance of electrical accessories.

Fold the washing machine
use the installation instructions



Please read this manual carefully before use and keep it for future reference

Instruction manual for mini-cleaner



rated power: 40W/60W
rated frequency: 50HZ
timing: 0-10min
product weight: 1.8 kg
product capacity: 10L



1. Initial State



2. Press and hold the middle, lift



3. Spread out



4. Take out the drain



5. Hook the drain pipe to the fuselage.



6. Turn on the power



◆ Long Press 2 seconds to turn on or off.
◆ switch to one mode per touch



7. Dehydration mode



8. Button cover rub mode



9. Fold on both sides at the same time



10. Press the right side down



11. Press the left side down



12. Finish folding