




One Button Pop-Up Canopy

SKY5762 + SKY5763+ SKY5764 + SKY5767 + SKY5768 + SKY5772


PARTS

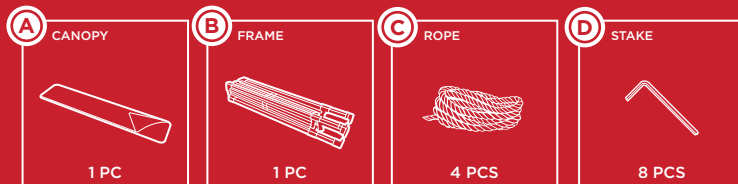


⚠ WARNING

- Be careful not to pinch hands or appendages during assembly.
- It is recommended that you use the ropes and stakes to secure the canopy.
- Canopy should not be left up in the rain. This product is not intended to withstand constant rain or inclement weather.
- This product is not intended to withstand periods of extreme/high wind or inclement weather.
- When not in use, this product should remain closed and stored away to avoid potential damage.

- 1** Drape part A canopy over part B frame.
Make sure to secure the corners with the attached adhesive strips.

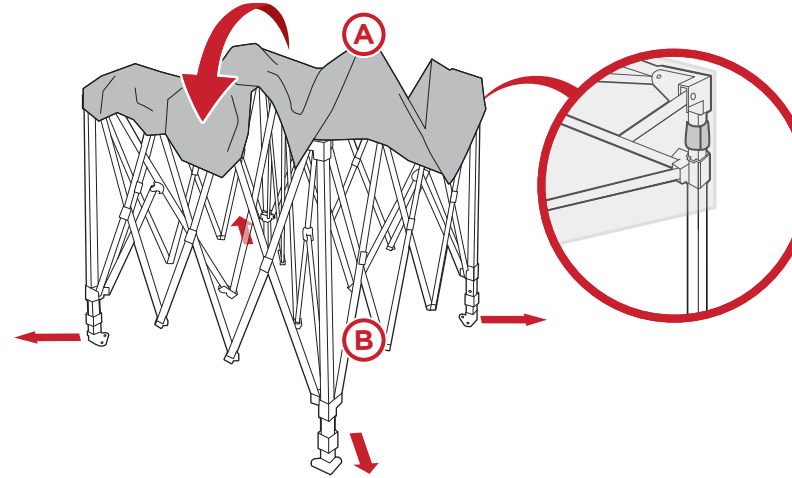

- 2** Push the middle button into the pole until it locks.
Secure the canopy with the attached adhesive strips.

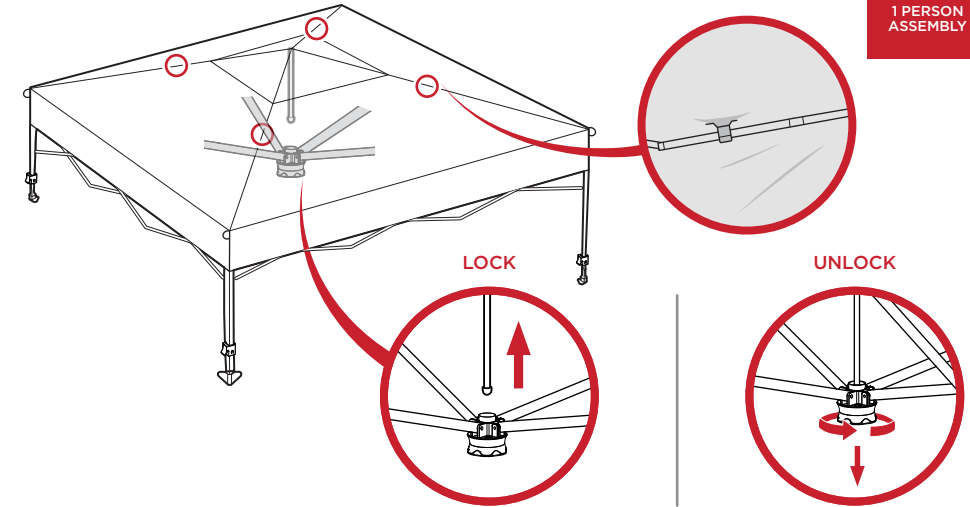


1 PERSON
ASSEMBLY



UP TO 10 MIN.
ASSEMBLY

- 3** Push the tabs on the legs and extend to your desired height.

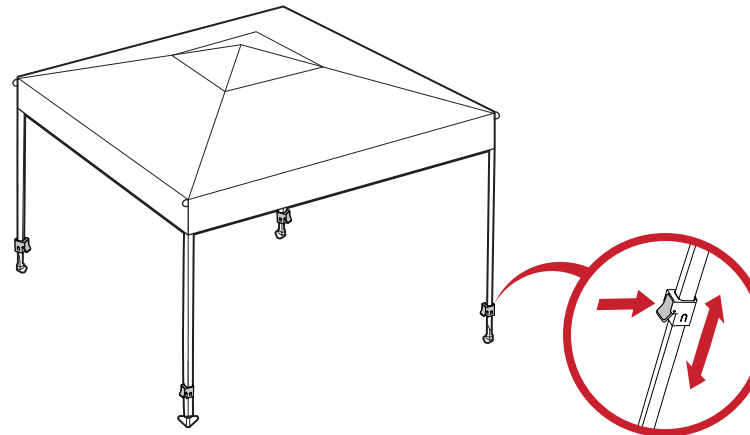

- 4** Secure with four part C ropes and eight part D stakes.

