 




Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TV/R	 TV/Radio /
 SAT	 Shift + 0
 SAT	 Smart / List
 EPG	 Guide / EPG / -/-
 Menu	 Menu / Home

Original	Replacement
 FAV	 Fav / Marker / PC
 Exit	 Exit / Cancel / Clear
 Up / CH+	 Up
 Up / CH+	 CH+ / Page+
 Down / CH-	 Down
 Down / CH-	 CH- / Page-
 Left / Vol-	 Left
 Left / Vol-	 Vol-
 OK	 OK
 Right / Vol+	 Right
 Right / Vol+	 Vol+
 Red / Audio	 Red / Netflix / Search
 Red / Audio	 Audio / Lang I/II
 Green / Mode	 Green / APP / Repeat
 Yellow / Disp	 Yellow / YouTube / Repeat
 Yellow / Disp	 Display / Media
 Blue	 Blue / Prime Video / Random





The image shows a black remote control with a variety of buttons. At the top are a red power button, a black 'DIMMER MUTE' button, and a yellow 'EJECT' button. Below these are four blue buttons: 'TV', 'DVD', 'SAT', and 'AUX'. The main section contains a grid of buttons for navigation and control, including 'ALON', 'STEP-FASTER', 'HOLD', 'REC MODE', 'PLAY', 'PAUSE', 'STOP', 'PRESET+', 'TUNE-', 'TUNE+', 'PRESET-', 'PRESET+', 'TUNE-', 'TUNE+', 'EQ', 'SURROUND', 'SOUND', 'AUDIO', 'BATTLE', 'PROGRAM', 'FORMAT', 'SIZE', 'TIMER', 'PICTURE', 'ZOOM', 'SLEEP', 'TV', 'RADIO', 'TYP. MENU', 'OPT. TOOLS', 'GOTO', 'MODE', 'BACK', 'SETUP', 'TEXT', 'IN/INPUT', 'HOME', and 'AUXILIARY'. In the center is a blue directional pad with an 'OK' button. Below the pad are 'CLEAR', 'EXIT', 'CANCEL', 'LIST', 'SMART', 'MEDIA', 'DISPLAY', 'RETURN', and 'BACK' buttons. The bottom section features a numeric keypad (0-9), 'TV', 'DVD', 'CD-STD', 'GUIDE', 'EPC', '0', 'FAV', 'MARKER', and a row of four colored buttons: red ('RECALL'), green ('REPEAT'), yellow ('REPEAT A-B'), and blue ('RANDOM'). The 'Mandis shop' logo and website 'www.mandis.tv' are printed at the bottom.