

Vacuum Hair Beard Trimmer

H115 v01: 21/08/20

Please read and retain these instructions for future reference

vivadia



Dimensions

18cm x4.2cm x4cm

Cable length: 1.8m

Input: DC 3.6V 1000mA

- CHOOSE FROM LENGTHS 1.5-16MM
 - VACUUM SUCKS HAIR INTO CHAMBER SO NO MESS
 - EASY TO EMPTY
 - STREAMLINE FORM/BEST ERGONOMIC DESIGN
 - 5 HOUR INITIAL CHARGING SETUP
 - CHARGING TIME:6HOURS - USING TIME:45-60MINUTES
- ACCESSORIES:1X TRIMMER,1XADJUSTABLE TRIMMER GUIDE,1XCLEANING BRUSH,1XBS PLUG 1XHAIR COMB,1XINSTRUCTION MANUAL

Important Safety Instructions

When using an electrical appliance, basic safety precautions should always be followed, including the following:

PLEASE READ ALL INSTRUCTIONS BEFORE USING.

- ☒ This appliance is not intended for use by children or infirm people unless they are being adequately supervised by a responsible person to ensure they can use it safely. Children should be supervised to ensure they do not play with the appliance.
- ☒ To protect against electric shock, do not immerse the appliance, power cord or plug in water or any other liquid.
- ☒ Do not use while bathing or in a shower.
- ☒ Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by manufacturer.
- ☒ Do not reach for a trimmer that has fallen into water. Unplug immediately.
- ☒ Please do not use the appliance if it has been dropped or damaged in any way.
- ☒ Check the power cord regularly for signs of damage. Never attempt to repair the appliance or to replace the cord yourself as this may lead to severe injury or electric shock.
- ☒ Store the product in a dry place and at a temperature between 15 °C and 35 °C.
- ☒ An appliance should never be left unattended when plugged into a power outlet, except when charging.
- ☒ Unplug Trimmer before cleaning.
- ☒ Keep the power plug and cord away from heated surfaces. Make sure the power plug and cord to not get wet.
- ☒ Do not plug or unplug the appliance with wet hands.
- ☒ Do not immerse the appliance in liquid, do not use it near water, in a bath-tub, basin or any other vessel.
- ☒ For household use only, do not use appliance outdoors.

*Calls cost 7 pence per minute plus your telephone company's network access charge

The Enterprise Department
Head Office: 11 Bridge Street
Bishop's Stortford, CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756 595
www.coopersofstortford.co.uk

Vacuum Hair Beard Trimmer

H115

Instructions for Use

Please read and retain these instructions for future reference

v001:



WARNING: KEEP THE TRIMMER DRY.



CAUTION: ENSURE THE TRIMMER IS SWITCHED OFF AND NOT CHARGING WHEN ADJUSTING BEARD TRIMMER GUIDE AND WHEN CLEANING.



Contents



1. Trimmer
2. Adjustable Trimmer Guide
3. Cleaning brush
4. Mains adaptor
5. Hair comb
6. Instruction booklet

*Calls cost 7 pence per minute plus your telephone company's network access charge

The Enterprise Department
Head Office: 11 Bridge Street
Bishop's Stortford, CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756 595
www.coopersofstortford.co.uk

Parts



Power and Charging

Charge for at least 8 hours before first time use.

- Ensure the product is switched off.
- Connect the mains adaptor to the trimmer before plugging into the mains.
- When charging the LED, charge indicator will turn blue. The blue light will turn off once charging is complete.
- This Trimmer will not charge while in use.
- If trimmer has not been used for a long period of time, Trimmer must be recharged for approximately 8 hours.

Vacuum Hair Beard Trimmer

H115

Instructions for Use

Please read and retain these instructions for future reference

v001:

A fully charged Trimmer has a cordless trimming time of up to 40 minutes under normal operation.



Adjustable Trimmer Guide

NOTE: The Adjustable Trimmer Guide has various length settings. When first becoming familiar with the Vacuum Hair Beard Trimmer, begin with a higher numbered setting.

Adjust cutting length as desired by pressing the button on the Trimmer Guide and sliding it up or down (0.5mm being shortest hair length, 18mm the longest).

The number indicated on the side of the trimmer is the length of hair that will remain



To attach and remove Adjustable Trimmer Guide

The Adjustable Trimmer Guide is already attached to the Trimmer. To separate them, press the guide's release button and pull the Trimmer Guide away from the main unit.

To re-attach, align the Adjustable Trimmer Guide with the Trimmer and slide it into place.

(NOTE: When re-attaching, a clicking sound means the trimmer guide attachment is secure and ready for use.



Operation

Comb through facial hair using the supplied hair comb to separate the hairs.

If using the Adjustable Trimmer Guide, adjust to select desired hair length setting.

Turn on the Trimmer.

Place the flat base of the Trimmer/Adjustable Guide against the skin.

Slowly slide the Trimmer Guide and Blades through hair. Repeat from different directions as necessary.

If hair builds up around the blades during the trimming process, switch the unit off, pull off the Trimmer Guide and brush away hair using the supplied cleaning brush.

Regularly check the level of collected hair in the vacuum chamber. Once this become full, switch off the beard trimmer and empty vacuum chamber.

NOTE: For even cutting allow the comb attachment/blade to cut its way through the beard hair. Do not force it through quickly. If you are cutting for the first time, start with the highest position using the Adjustable Trimmer Guide.

Cleaning

Always ensure the trimmer is unplugged and switched off before cleaning. It is advised cleaning is performed over a waste receptacle to prevent loose hairs being scattered.

- Remove the Adjustable Trimmer Guide. Using the supplied cleaning brush, brush loose hair from the stainless steel clipper blades.
- Open the vacuum chamber cover and tip contents into a waste receptacle.
- Use the cleaning brush to sweep out any remaining hairs.

Brush away loose hairs from the vacuum filter inside the vacuum chamber.



WARNING: DO NOT SUBMERGE ANY PART OF THE TRIMMER IN LIQUID.

PLUG WIRING (UK & IRELAND)

This appliance is supplied with a mains adaptor/charger with BS1363 plug pins.

DO NOT use If the socket outlets in your home or office are not suitable for this product's mains adaptor/charger plug pins. Attempts to insert the mains adaptor/charger into the wrong socket is likely to cause electric hazard or damage.

DO NOT use with any other mains transformer/charger than the one that is supplied with this product.

DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- Plastics, polybags – Contains the following recyclable plastic.



Code & Symbol	 OTHER
Type of Plastic	ABS,
Commonly used for	CD's, crisp packets, various flexible packaging, baby bottles, sunglass lenses
Notes	Not often or widely recycled

- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.

