

***Richmat* 豪江**

Product function manual

Smart home
HJSR06 B1e

一、Remote control button map



二、Remote control function description

Button label	Features
1	Press the button, the motor will run to the SNORE position with one button (there is an initial position) Multiplexing function: Press and hold the FLAT key while pressing the SNORE key, the buzzer sounds, the backlight flashes, and the current motor status is recorded to the SNORE position. (Power-off memory clear)
2	Press the button, the motor will run to M1 with one button (no initial value) Alternate function: Press and hold the FLAT button while pressing the M1 button, the buzzer sounds, the backlight flashes, and the current motor status is recorded to M1. (Not cleared after power failure)

3	Press the button, the motor will run to the ZG position with one button (there is an initial position) Alternate function: Press and hold the FLAT button while pressing the ZG button, the buzzer will sound, the backlight will flash, and the current motor status will be recorded to the ZG position. (Power-off memory clear)
4	Press the button, the motor will run to the TV position with one button (there is an initial position) Multiplexing function: Press and hold the FLAT button while pressing the TV button, the buzzer sounds, the backlight flashes, and the current motor status is recorded to the TV position. (Power-off memory clear)
5	Press the button, the motor will run to M2 with one button (no initial value) Alternate function: Press and hold the FLAT button while pressing the M2 button, the buzzer sounds, the backlight flashes, and the current motor status is recorded to M2. (Not cleared after power failure)
6	Press the button, the motor will run to the LOUNGE position with one button (there is an initial position) Alternate function: Press and hold the FLAT button while pressing the LOUNGE button, the buzzer sounds, the backlight flashes, and the current motor status is recorded to the LOUNGE position. (Power-off memory clear)
7	The back motor extends.
8	The back motor retracts.
9	The foot motor extends.
10	The foot motor retracts.
11	One-button reset, all motors retract to the minimum stroke position. Power-on reset.
12	The head massager is enhanced, the massager can be turned on (automatically closed in 30 minutes) (1→2→3→off cycle switch)
13	The foot massager is enhanced, and the massager can be turned on (automatically closed in 30 minutes) (1→2→3→off cycle switch)
14	The bed bottom lamp is on/off. (Default 15 minutes)
15	MODE (C/P/W) three-mode switch)
16	TIMER (10, 20, 30 switch, default 30 minutes) When pressing the back massage, leg massage, or massager mode, the time is displayed
17	Press the flashlight to turn on, release the flashlight to turn off.

Coding method:

1. Long press [remote control head up + foot up (7, 9) + control box code matching key] the buzzer sounds, indicating successful code matching.
2. The control box has a reset function for the code key.

Precautions:

To protect the reliability and safety of the motor and control box, do not switch the buttons frequently.

Caution:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.