

USER MANUAL

✓ FULL HD 1080P



***Please read the user manual carefully before
using the product and keep it properly***



Video instruction

Scan the "QR" Code to view the Video Manual , which makes VD01 easier to setup and use.



SCAN ME

Customer Service


Scan "QR" Code enter your question, to realize your 1-year warranty or help you arrange the replacement.

● Product Illustration



(1)	Led Fill Lights	(10)	LED Indicator light
(2)	High definition camera	(11)	Record button
(3)	Monitor	(12)	ON/OFF button
(4)	Right flip-flop	(13)	Reset hole
(5)	Left flip-flop	(14)	Flip key/WiFi on key
(6)	Confirmation key	(15)	Voice recording button
(7)	Horn	(16)	Fill light key/ Screensaver key
(8)	Microphone	(17)	Micro SD card slot
(9)	Quick Record Button	(18)	Data/Charging Interface

● Icon Introduction

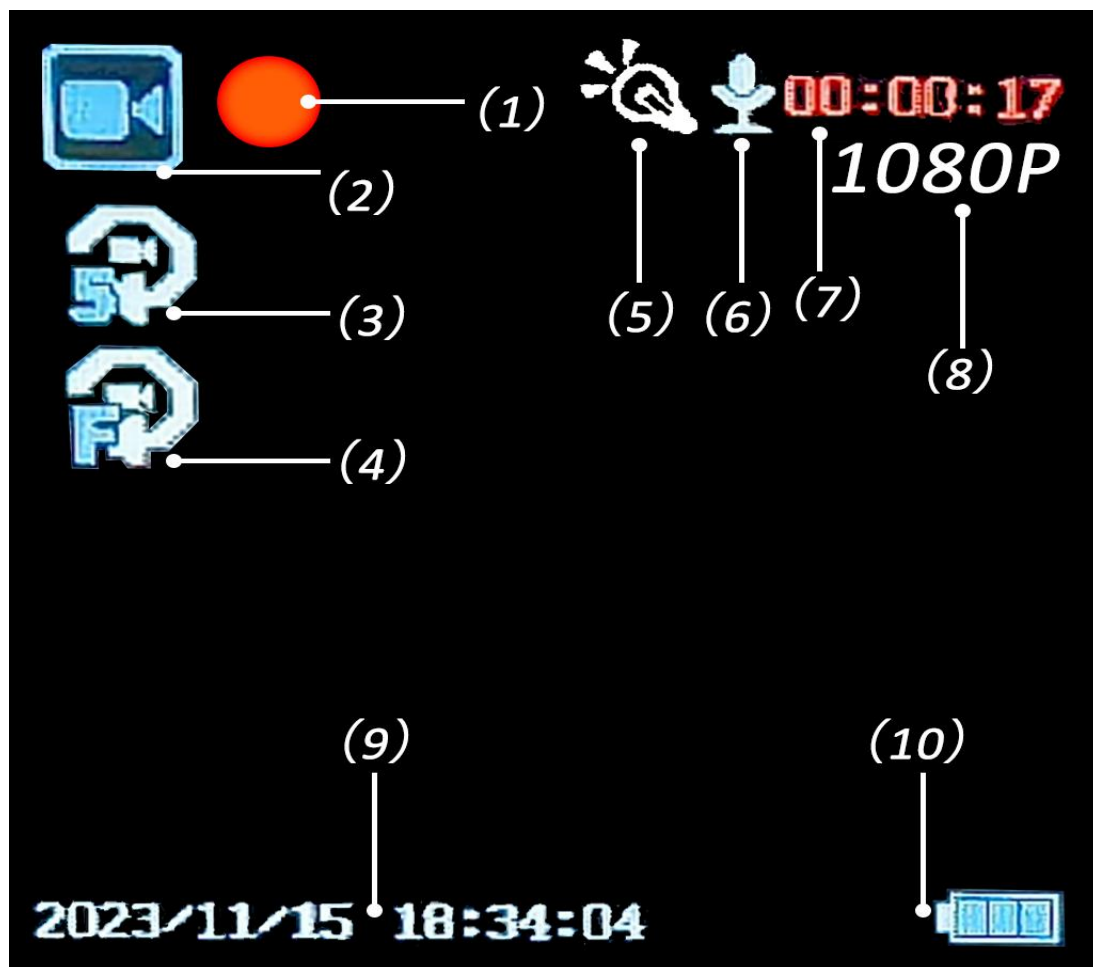

(1)	Video ON Indication	(6)	Video tape recording indication
(2)	Video mode icon	(7)	Recording time(Red) Memory card remaining time (White)
(3)	Loop recording ON icon	(8)	Video resolution indication
(4)	Motion detection ON icon	(9)	System time display
(5)	Fill light ON icon	(10)	Battery level display

● Quick Guide

Please make sure that the memory card has been inserted before use.

| → Long press the "⦿" button to **turn on** the device:
(LED Indicator - long **RED** light - standby mode)

| → Short press the "📹" button to **start recording**:
the **upper right corner** of the display screen displays the
(**RED**) recording time. (**LED** flashes and then turns off -
recording mode)

⏏ → Short press the "📹" button again to **stop
recording**: the **upper right corner** of the display screen
displays the **(White)** remaining recording time of the
memory card. Enter standby mode.

| → Short press the recording button "🎤" to enter the
recording interface, and short press the recording
button again to **Start/Stop recording**.

> Album & Replay

| → **In standby mode**, short press the confirmation
button "⦿" to enter the **album**. Use the "◀" "▶" left
and right buttons to select video or recording.

> Fast-forward & Delete Recordings:

⏮ → Short press the confirmation button "⏹" to play video or recording. "⏮" adjusts fast forward. (×2, ×4, ×8)

⏮ → Long press the confirmation button "⏹" to delete the current file.

> Return to Previous Level

⏻ → Short press the power button "⏻" to return to the previous interface.

> Go to Setting



⏻ → In standby mode, long press the confirmation button "⏹" to enter the settings.

● LED Indicators

Indicator Code	Condition
RED Light Solid	Standby mode
Red light flashes and then turns off	Recording mode
BLUE Light Solid	Charging
BLUE Light OFF	Full Charged

● Main function introduction

(1) Quick Video Recording


In any mode [except of hot spot mode], **push up** the " " key to enter the fast recording mode, and press down the " " key to save the video and return to the recording standby mode.

How to realize one key start recording:


Toggle the slide switch upwards first, then press and hold the power button to turn on the machine (the camera will auto start recording after it has been ON)

In WiFi mode, the Force video recording button is not effective.

(2) Image Mirroring

Operation: In the standby mode, **long press** the " " key to enter the Settings, select the item "Image Mirror "in Settings menu, and enable/disable the picture mirror function (valid only for selfies).

(3) Motion Detection

Long press the " " button in the video mode to enter the motion detection mode. If the object movement is detected, the video will start. If the object movement is not detected, the video will stop

automatically. **Long-press** "  " to exit the motion detection recording.

(Once detect a move will recording for minimum 1mins until without move)

(4) Loop Recording



Auto loop recording: when the disk has been full, continued recording will overwrite the previous video.

“Stop Loop” means auto Stop recording after card has been full.


(5) Car Mode

Start the car mode, USB power on will automatically turn on and start recording, USB power off will save the video and turn off the computer.


(6) Fill Light Switch

In any mode of power on, **long press** the "  " key to turn on the LED light, and **long press** the "  " key again to turn off the LED light.

(7) Light up/ down the screen

In any mode of mode on, short press "  " to close the screen, and short press any key to light up the screen.

(8) Image Flip

The default back clip direction of the image. If you need to rotate the lens for shooting, press " " to adjust the image.

(9) Reset

When the machine crashes and the key is invalid, it cannot be used normally. Insert the point of the "reset hole" with the **reset pin we equipped** to reset the machine, and it can be used normally after the reset.

● WiFi Connection

Please use the QR code below to download and install "Viidure", or search and download "Viidure" in Google Play or App Store.


(1) WiFi Switch:

In standby mode, long press the " " Left-first key to **turn on/off** WiFi and **enter/quit** the WiFi mode .

(2) WiFi connection:

Search and connect the network named **WiFi_** (**such as WiFi_44BA**) in the WiFi Settings of the mobile phone or tablet.

After successful connection, open the "Viidure App" to enter the main interface and click "Continuous Recorder" to enter the real-time preview interface.

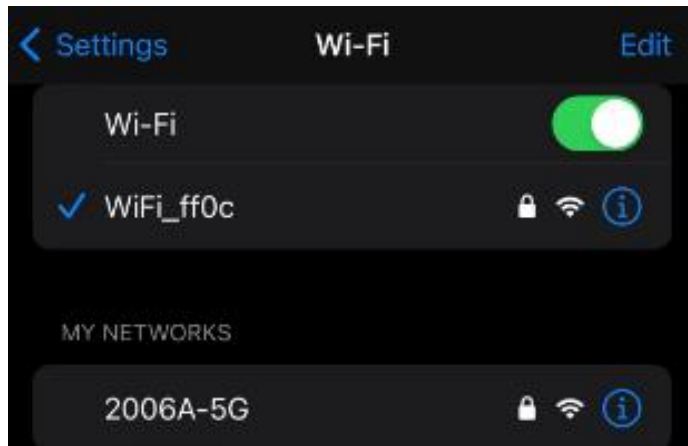

Is that state normal in Wi-Fi mode?





Normal, Please don't worry, just still follow our steps to do, that the problem won't affect connection.



When your phone will disconnect constantly, Please follow these steps:

- 1) Recommend you can re-download the app, and please choose to allow the app's wifi use, otherwise will cause the app could not connect to the internet [wifi]
- 2) Choosing still connect to this no internet Wi-Fi when you turn on the hotspot mode of the camera and

connect to its Wi-Fi [name usually calls "Wifi_xxx"], otherwise the connection will stop constantly since you don't offer the permission to keep its connecting.

● Key Function Introduction

Button name		Operation	Explanation
Left Button		Short Press	<p>① Short press to scroll up in the album or setting.</p> <p>② Short press to adjust the playback fast forward multiplier when playing back the video.</p>
Confirmation Button		Short Press	<p>① In standby mode, short press to enter the album in video or audio mode.</p> <p>② When viewing video and audio files in an album short press to play the video or audio, long press to directly delete or protect the file.</p>

		Long Press	In video record standby mode long press to enter video parameter settings and function settings.
Right Button		Short Press	<p>① Short press to scroll down in albums or setting.</p> <p>② Short press to adjust the playback volume when playing back a video.</p>
Flip-Flop		Short Press	Press briefly to turn on the image flip 180°, and press briefly to turn off the image flip 180° when it is on.
WiFi mode ON/OFF Button		Long Press	<p>In the camera standby mode, hold down to enable the hot spot WiFi, and in the WiFi enabled state, hold down to disable the hot spot WiFi.</p> <p><i>-In the Quick Video Recording mode, the WiFi mode button is not effective</i></p>

Note: This machine supports recording while charging.

● **Methods of Lens Usage**


This product lens can be **rotated 180°**, and the use of the process can be adjusted according to the needs of the angle as shown:



● **Installation of MicroSD Card**

(As shown in the figure)

- *Insert the TF card as shown, avoid the card stuck in the card slot.*
- *Supports **4-256G**.*

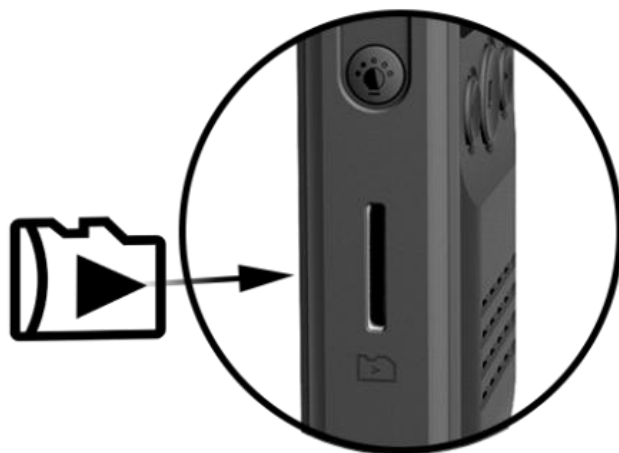

● **Timestamp Setting**

- Power on the device, in the standby mode.
- **Long press** the "◼" key to enter the setting.
- Select the item " Date/Time " in the setting menu.
- Use the left and right keys "◀▶" to adjust the time.
- Finally, press the confirm "◼" key to complete the time setting until back to setting.

● **Charging & Data Transfer**

- Connect the provided cable with a 5V 1A/2A adapter or power bank to charge the device.

(**BLUE** Solid while charging, and off after fully charged)

- Connect the provided cable with Computer to read the data. (A new flash-disk will show. Open the disk to view the files)
- Use the card reader we equipped to recognized the card that take out from the camera with the computer.

● **High-frequency Questions**

1. Screen Protector/Automatic Shut-Down Mode:

The Screen/Cam default will auto turn Off in 1 min if it's without any operations(you can close it or change in the menu)

2. How to realize one key start recording:

Toggle the slide switch upwards first, then press and hold the power button to turn on the machine (the camera will auto start recording after it has been ON)

3. Manual Control the screen:

you can short-press the "left-third" button to control manual the screen's ON/OFF no matter if the camera is recording.