 





Table of contents

This product is limited to home use only.
Please read this manual carefully before using the product and keep it safe.
Pay special attention to the "precautions" (pages 06-07).

Table of contents. --	01
Product introduction --	02
use --	02
Operating guidelines-	04
Daily maintenance.	06
Precautions ---	06
Micro-power short-range equipment declaration.--	08
Troubleshooting. --	08
Fault code.-	09
Basic parameters.--	09
Electrical diagram --	10
The name and content of harmful substances in the product.--	10
Warranty description--	10
Product warranty card.--	11

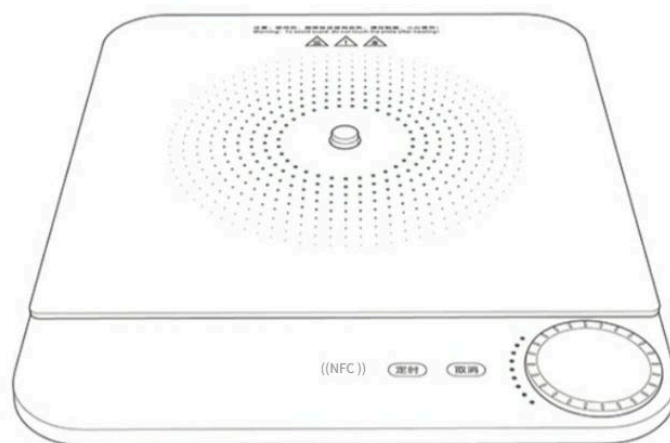

 Product introduction

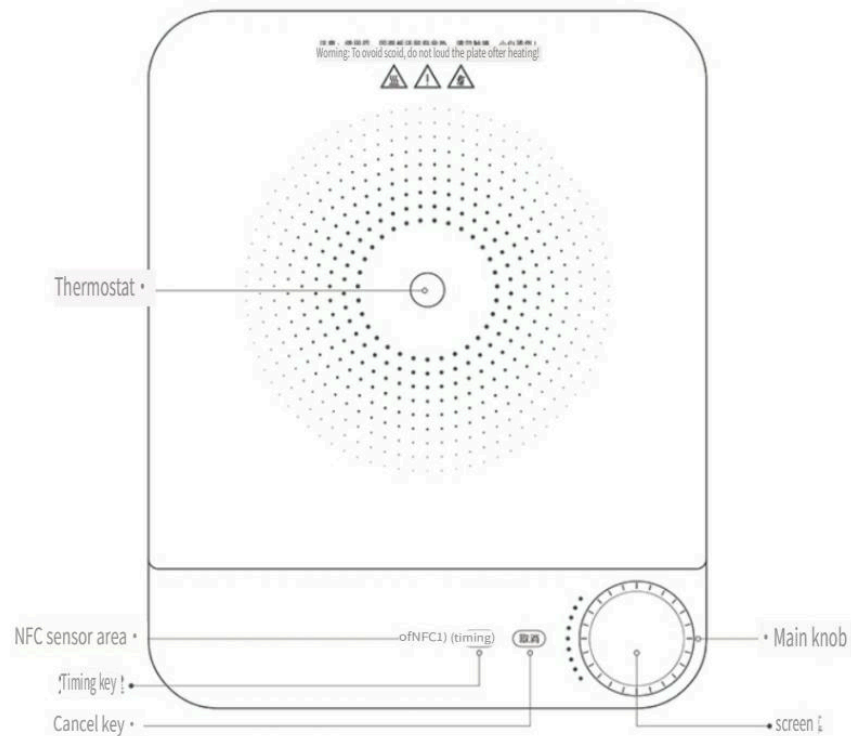

Reminder: The illustrations of products, accessories, user interfaces, etc. in the manual are schematic diagrams and are for reference only. Due to product updates and upgrades, the actual product can be slightly different from the schematic diagram. Please refer to the actual product.

 
use

1. Get started

Turn on

After the power is turned on, the boot animation is played. The screen shows "Long press to open", at this time After pressing the main knob for 0.5 seconds, the device is turned on. After the first boot, the screen shows "Manual", rotate the main knob to switch the menu.

Tip: The standby state defaults to firepower mode, and this mode can be used directly for off-chain without the need to select another function.

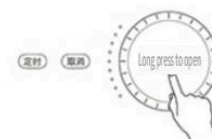

Function selection

Taking "Hot pot" as an example, turn the "main knob" left and right to select the "hot pot" mode. Click the "Main knob" to confirm, and the device starts cooking.

Tip: If you need to exit the function selection, you can click the "Cancel" button to operate.



Adjust firepower

 
In the Jiaren state, rotate the "main knob" left and right to manually adjust the firepower.



Shut down after Jiaren is completed

After Jiaren is completed, press and hold the "Main knob" for 3 seconds to sleep.

Tip: In any state, press and hold the "Main knob" for 3 seconds to put the device to sleep.

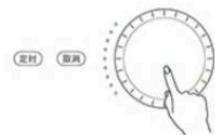

2. Connect to Wi-Fi

After the induction cooker is powered on for the first time, it automatically enters the Wi-Fi waiting connection state. Please set up the connection in the Mijia APP.

3. Reset Wi-Fi

In standby mode, rotate the "Main knob" to the screen to display "Wi-Fi Settings", click the "Main knob", and "Whether to reset" appears.

No/Yes" option, rotate the "Main knob" to the "Yes" option, click the "Main knob" to reset the Wi-Fi, and the screen will be reset after the reset is complete.

"Reset" is displayed.



4. Wi-Fi status :

Operating status	Screen display
Waiting for connection	Wi-Fi icon flashes slowly
Connecting	Connecting
Successful connection	The Wi-Fi icon is always on

Tip: When Wi-Fi is not connected, the Wi-Fi icon flashes. If Wi-Fi is not connected within 30 minutes, the Wi-Fi icon will go out.

5. Connect to Mijia APP

This product has been connected to Mijia, can be controlled through the Mijia APP, and can be used with other products interconnection.

Scan the QR CODE, download and install the Mijia APP, users who have installed the Mijia APP will go directly to the device connection page. Or search for "Mijia" in the app store and download and install the Mijia APP. Open the homepage of Mijia APP and click in the upper right corner of the page "4", add the device according to the APP prompt.

Tip: Due to the upgrade and update of the Mijia APP, the actual operation may be slightly different from the above description, please follow the current Guide the operation in the Qianmijia APP.



6. NFC

function: The

induction cooker has a built-in NFC smart sensor chip, which turns on the NFC function of the mobile phone. After being close to the NFC icon of the induction cooker, the mobile phone can quickly enter the smart food Spectrum menu.

Reminder: 1. Phones with Android operating system need to turn on the NFC function of the phone before they can use the NFC function; Android supports models: Xiaomi, Huawei, OPPO, vivo and other models with NFC function. 2. The NFC function of the mobile phone of the iOS system is turned on by default, and there is no need to turn on the NFC function separately; iOS supported models: iPhoneXR, iPhoneXS, iPhone XSMa, iPhone11, iPhone 11 Pro, iPhone 12, iPhone 12 Pro, etc. and subsequent models released.

How to use NFC:

When using NFC, the phone needs to be unlocked and the phone's NFC sensor The area is close to the NFC icon of the induction cooker.

Android phone: Automatically executed after the phone is touched.

iPhone: A notification pops up, and it can be executed automatically by clicking on the notification.

 
Reminder: 1. After the Android phone senses, if the Mijia APP is installed, open the APP; if it is not installed, jump to the Application market Mijia APP download page.
2. After the iPhone is sensed, a notification will pop up, and click "Open in Mijia APP" to determine whether it is installed. Install, if the Mijia APP is already installed, open the APP; if it is not installed, then jump to the App Store download page.

NFC sensing area:

Android phones: The NFC sensing area is usually on the top of the phone or the camera nearby.

iPhone: The NFC sensing area is on the top of the phone.

Tip: Due to the different NFC locations of some models, please move left and right to find the sensing area when using it.

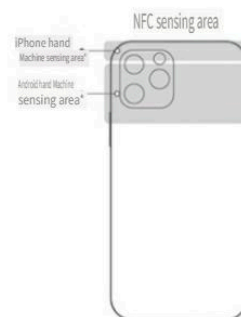

Operating guidelines

Manual mode

The default boot is manual mode, and the firepower gear can be adjusted according to the needs of cooking. whole. Slowly rotate the "main knob" to adjust the firepower in 1 gear, and rotate quickly. The "main knob" is adjusted with 10 gears of firepower.



Functional mode

Turn the "Main knob" left and right to select the desired basic menu function. Turn to the right. When you turn around, the menu will be arranged according to "manual, hot pot, cooking, soup, wonderful dishes, frying". The sequence is switched in turn. Click "Main knob", the device starts according to the selected menu function 烹饪。

Tip: Users can expand the menu functions in the device or adjust the order of menu functions after logging in to the Lajia APP.



1. Hot pot

The default duration is 2 hours. The firepower gear is adjusted independently according to the cooking needs (The default starting firepower is 99 gears).



2. Cooking

The default duration is 1 hour. The firepower gear is adjusted independently according to the needs of cooking (The default starting firepower is 80 gears).



3. Tang Xie

The default duration is 2 hours. The firepower gear is adjusted independently according to the needs of cooking. (The default starting firepower is 60 gears).



4. Stir-fry

The default duration is 1 hour. The firepower gear is adjusted independently according to the cooking needs (The default starting firepower is 99 gears).



5. Frying

The default duration is 2 hours. The firepower gear is adjusted independently according to the needs of cooking. (The default starting firepower is 70 gears).



Timing mode

1. Please confirm whether the current mode of the induction cooker is correct before timing. In choosing the appropriate After the mode, press the "Timing" button to enter the timing mode.

Reminder: In the non-heated state, the timing function can still be used. After the countdown is over, the alarm will remind and automatically enter the standby state. If you need to timing in the functional mode, you need to do it after the device enters the secret state.



2. Rotate the "Main knob" to set the countdown time, click the "Main knob" to turn on Start the countdown. Slowly rotate the "main knob" to adjust in 1 minute, fast Rotate the "main knob" to adjust in 10 minutes.

Reminder: The maximum timing is 4 hours, and the countdown is displayed in the format of "hours: minutes". After the countdown is over, the device stops adding. It is hot and automatically enters the standby state.



Firepower adjustment

In the heating state, rotate the "main knob" left and right to manually adjust the firepower and adjust the range. Surround 0 gears-99 gears.



Pause

In the heating state, press the "Main knob" once, the device pauses heating, and press again "Main knob", the device resumes heating with the previously set firepower.



If you have after-sales service needs, please call Xiaomi service

number: 400-100-5678

Or visit Xiaomi after-sales service website: www.mi.com/service

Manufacturer: Wuhu Junmai Electronic Technology Co., Ltd.

Address: 803, Dabifang Cultural Park (No. 77 Dabifang), Jinghu District, Wuhu City, Anhui Province
It is called room 203-206 (declaration commitment).

Executive standards: GB 4706.1-2005, GB 4706.14-2008, GB 21456-2014

05

 
Daily maintenance

Be sure to cut off the power supply to ensure that the induction cooker has stopped running, and wait for the equipment to cool before performing the following operations to prevent burns.

- a. In order to ensure the effect of cooking and the cleanliness of the panel, it is recommended to use soft after cooking. Use a soft damp cloth and a neutral detergent for cleaning.



- b. You can use a soft brush or a miniature vacuum cleaner to clean up the dust from the air outlet, or use a soft one. Wipe gently with a soft dry cloth, it is recommended to clean up every 3 months.



Precautions

In order to ensure the safety of use and avoid personal injury and property damage, please be sure to abide by the following safety precautions.



Note: On the high-temperature surface, the panel will become hot during the use of the product. Please do not touch it. Be careful of burns!

Usage restrictions

- Please do not let people who lack physical strength, perception, and intelligence, or lack experience and common sense, without supervision or Use this product under guidance.
- Please do not let young children use this product as a toy.
- This product should be placed out of the reach of children.
- The appliance cannot operate under an external timer or an independent remote control system.
- Warning: If there are cracks on the surface of the panel, unplug the appliance to avoid possible electric shocks.
- Do not place the product directly on the metal countertop for use, so as not to heat the metal countertop. And danger occurs.
- Due to heat, the walls and furniture will be damaged, discolored, and deformed, so please keep away from the walls and furniture when using it. The furniture is more than 10cm.
- Do not place this product in a place that is unbalanced, humid, or close to other sources of fire or heat (make sure the distance between this product and the fire source and heat source is >30cm).

Usage restrictions

- Do not place the product near a device that is susceptible to electromagnetic interference.
- Do not use non-professional pots and pans to avoid affecting heating performance or causing danger.
- If you use other pots and pans, please make sure: the material of the pots and pans contains iron material, the bottom is flat, and the diameter is not less than 12cm and does not exceed the heating zone.
- Before heating the pot, please make sure there is food in the pot and avoid dry burning in the empty pot.
- When using pots and pans with non-insulated handles, please pay attention to anti-scalding.

Power supply attention matter

- It is forbidden to use power supplies other than AC 220V to avoid fire or electric shock.
- When the power is turned off, do not pull the wires to avoid electric shock or short circuit and fire.
- Please do not insert or unplug the power plug with wet hands to avoid electric shock or injury.
- Please use a separate power socket with a rated current of more than 10A.
- If the power cord is damaged, in order to avoid danger, it must be repaired by the manufacturer, its maintenance department or similar department. The professionals of the door will be replaced.

In use

- Do not heat sealed containers or sealed foods (such as canned food, pressure cookers, etc.) directly on the product, To avoid accidents due to thermal expansion.
- Ensure that the air intakes and air outlets of the product are kept unblocked and not clogged by foreign objects to avoid overheating of parts. Affect use.
- Do not put metal objects such as knives, knives, knives, lids, etc. on the surface of the handle during use to prevent it from being heated. The object after is scalded.
- Please do not place paper, aluminum box paper, cloth and other items on the heating panel to avoid accidents.
- When using, care should be taken to maintain ventilation to ensure unobstructed heat dissipation.
- When working and the pot body is removed for a period of time, there will be residual heat in the Jia ren area. Please do not touch it and be careful of mental injuries.
- If the product is abnormal or faulty, please stop using it immediately and unplug the power plug. In the product After cooling, it will be repaired by professionals.

Cleaning and maintenance

- Confirm that the power cord plug is unplugged from the socket, and wait for the induction cooker panel temperature to cool before cleaning.
- The induction cooker shall not diffuse into the water or be drenched with water.
- Do not rinse the air inlet and air outlet of the induction cooker with water.
- Prevent liquids and foreign objects from entering the furnace body and ensure that the furnace body is clean.
- Do not use hard items such as steam cleaners or steel balls for cleaning.
- If the panel is oily, please wipe it with a soft damp cloth or neutral detergent. Do not use bleach or rotting water. Corrosive liquid for cleaning.
- The air intakes and air outlets must be checked regularly to ensure that they are not blocked.
- When cleaning up dust, please use a soft dry cloth to wipe the air inlet and air outlet, or use a soft brush Or a miniature vacuum cleaner.
- After the cleaning is complete, please wipe the surface of the induction cooker with a soft dry cloth to ensure that the induction cooker remains dry.
- If you don't use it for a long time, please unplug the power plug from the socket and make the product moisture-proof, dust-proof, and anti-Insect protection.

Other precautions matter

- Please do not let the product withstand strong impact or heavy pressure and sharp marking, so as not to cause injury or accident. ; Barrier.
- Do not modify, disassemble or repair by yourself to avoid fire, electric shock and burns.
- In the event of abnormality or malfunction, please stop using it immediately to avoid fire, electric shock and burns.

Micro-power short-range equipment declaration

- (1) The NFC technology used in this product complies with the "Catalogue and Technical requirements of Micro-power short-range Radio transmitting Equipment"
;The technical requirements of general-purpose micropower equipment, class C equipment, are used for data transmission applications.Using integrated antenna,
;control. For adjustment and switching, please refer to the relevant content in the product manual for usage.
- (2) The use scenario or use conditions shall not be changed without authorization, the transmission frequency range shall be expanded, and the transmission power shall be increased (including
additional Install an RF power amplifier), and the transmitting antenna shall not be changed without authorization.
- (3) No harmful interference shall be caused to other legal radio stations (stations), nor shall protection from harmful interference be proposed.
- (4) Industrial, scientific, and medical (ISM) application equipment that should withstand radio frequency energy interference or other legal
Radio station (station) interference.
- (5) If harmful interference is caused to other legal radio stations (stations), they should immediately stop using them and take measures. It can
continue to be used after the interference is eliminated.
- (6) Radio observatories and meteorological radars set up in aircraft and in accordance with laws and regulations, relevant national regulations, and standards Stations, satellite earth
stations (including measurement and control, ranging, receiving, navigation stations) and other military and civilian radio stations (stations), airports The use of
micro-power equipment in electromagnetic environmental protection areas, etc., shall comply with electromagnetic environmental protection and related industry regulations.
;Departmental regulations.
- (7) It is forbidden to use various model remote controls in an area with a radius of 5,000 meters centered on the center point of the airport runway.
- (8) The environmental conditions of temperature and voltage when micro-power equipment is used are the same as this product.


Troubleshooting

Fault type	Fault judgment and resolution
Switch indicator light (firepower Indicator light) not on ;	Whether the plug falls off Has the fuse or circuit breaker jumped? Is the socket not powered on?
The temperature cannot be controlled The thermostat controls	Is the bottom of the pot used uneven, or the center part is depressed? the failure of the central thermostat, whether there is a fault code E-05
"No pot" after 3 seconds of work Report an error	Is it appropriate to use pots and pans? Is the pot placed in the center of the panel? Is the diameter of the bottom surface of the pot greater than 12cm?
Suddenly stop heating when using	Is the ambient temperature very high? Whether the air inlet/outlet is clogged; whether the fan rotates When the temperature control state is in place, it means that the temperature has reached the set temperature. Induction cooker safety protection, please wait a few seconds to 20 seconds before confirming
Wi-Fi cannot be connected ;	Is the version of Mijia APP up-to-date? ; Is the Wi-Fi strength sufficient for the placement of the induction cooker? ;
Unable to update firmware	Is it in the process of work? Is Wi-Fi normal?

The name and content of hazardous substances in the product

Part name	Hazardous substances					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
Construction glue parts	○	○	○	○	○	○
Plastic parts	○	○	○	○	○	○
Hardware parts	×	○	×	×	○	○
Electrical components	×	○	×	○	○	○
Power cord	○	○	○	○	○	○
Circuit board assembly	×	○	×	○	○	○

This form is prepared in accordance with the provisions of SJ/T 11364.
 ○:表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限值以下。
 ×:表示该有害物质在该部件所有均质材料中的含量超过GB/T 26572规定的限值。
 * X: Indicates that the content of the hazardous substance in at least one homogeneous material of the component exceeds the limit requirements specified in GB/T 26572.



Basic parameter information

Product name	Induction cooker	Product model	MCL01M	Rated power	2100W
Rated voltage	220V~	Rated frequency	50Hz	Energy efficiency level	Level 3
Product size	350×280×23mm	Wireless connection	Wi-Fi IEEE 802.11b/g/n 2.4GHz, NFC		

This equipment contains a radio transmitter module with the model approval code: CMIIT ID: 2017DP6053 (displayed on the product nameplate)

Note: The energy efficiency level is based on GB21456-2014, and the energy efficiency test is recommended to use the highest power of the hot pot function.

Warranty description

The after-sales service of Mijia ultra-thin induction cooker is strictly in accordance with the "Law of the People's Republic of China on the Protection of Consumer Rights and Interests" and the "People's Republic of China." And the Domestic Quality Law" implements three guarantees of after-sales service, the service content is as follows:

1. Warranty period

- Within 7 days from the day after you sign for it, this product has the performance failure listed in the "Mijia Ultra-thin induction cooker Product Performance Failure Table". The situation has been tested and determined by the Xiaomi after-sales service center, and the return or exchange service can be enjoyed free of charge.
- Within 8-15 days from the day after you sign for it, this product has the performance failure listed in the "Mijia Ultra-thin induction cooker Product Performance Failure Table". In the case of failure, it has been tested and determined by the Xiaomi after-sales service center, and you can enjoy free replacement or repair services.
- Within 12 months from the day after you sign for it, this product has the performance failure listed in the "Mijia Ultra-thin induction cooker Product Performance Failure Table". In the case of failure, it has been tested and determined by the Xiaomi after-sales service center, and maintenance services can be enjoyed free of charge.

2. Warranty content

type	Warranty content	Warranty period
Whole machine	Parts of the machine itself	1 year