




Original	Recharge
 Power	 Power
 Energy Saving	 Sleep / Timer
 AV Mode	 Picture / Format
 Input	 AV / Input / RDS
 Tv/Rad	 TV/Radio /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 List	 Smart / List
 0	 0
 Q.Vlew	 Setup / OPT /

Original	Recharge
 Vol+	 Vol+
 FAV/Mark/Char/Nu	 Fav / Marker / PC
 P+	 CH+ / Page+
 Vol-	 Vol-
 3D	 Zoom / Size
 Mute/Delete	 Mute / Dimmer
 P-	 CH- / Page-
 Menu	 Menu / Home
 NetCast	 Sound / Title
 Q.Menu	 D.Menu / Top
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Back	 Back / Return

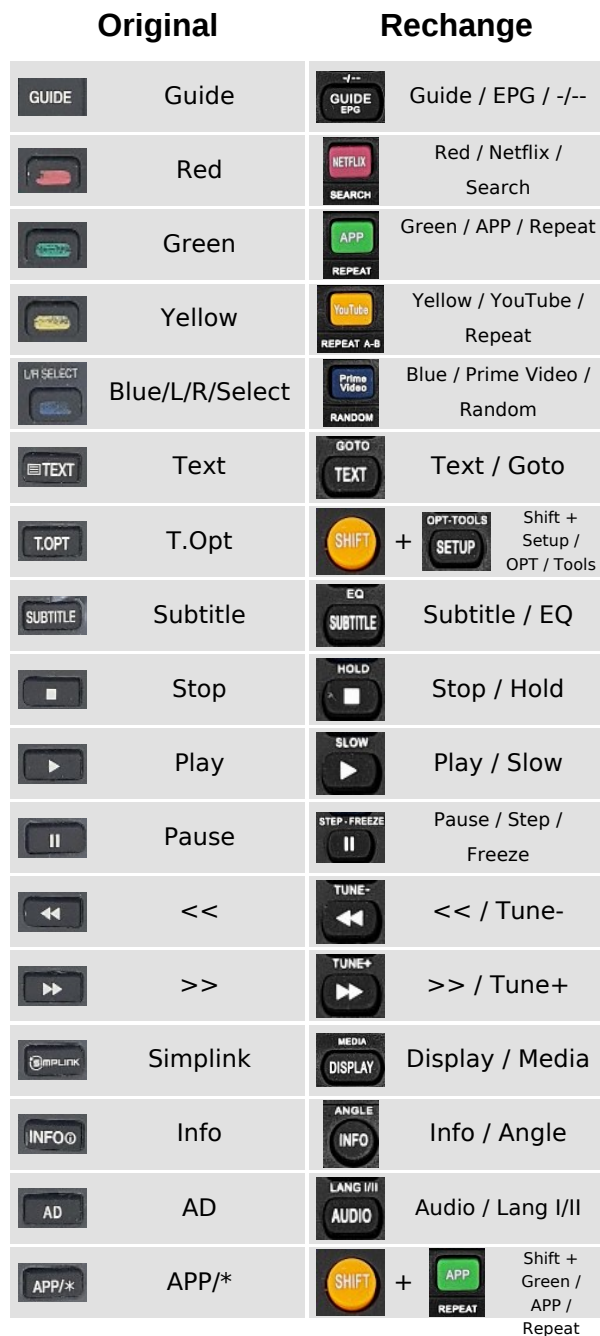



POWER DIMMER MUTE SHIFT
 TV DVD SAT AUX
 SLOW STEP-FREEZE HOLD REC MODE
 TUNE- TUNE+ PRESET- PRESET+
 TITLE LANG VIII EQ SURROUND
 SOUND AUDIO SUBTITLE
 FORMAT SIZE TIMER PROGRAM
 PICTURE ZOOM SLEEP TV RADIO
 TOP MENU OPT-TOOLS GOTO RDS
 D.MENU SETUP TEXT AV INPUT
 HOME ANGLE
 MENU INFO
 OK
 CLEAR RETURN
 EXIT BACK
 CANCEL
 + LIST +
 VOL SMART CH
 - MEDIA PAGE
 DISPLAY
 TV DVD CD-STD
 1 2 3
 VIDEO TAPE TUNER
 4 5 6
 AUX-HDD USB BLUETOOTH
 7 8 9
 HDMI-BAT PC
 GUIDE FAV
 EPG MARKER
 NETFLIX APP YouTube Prime Video
 SEARCH REPEAT REPEAT A-B RANDOM
 Mandis
 shop
 www.mandis.tv