



Originale	Sostituto	Originale	Sostituto
 Power	 Power	 ▼/O)/I/II/I+II	 Dual
 1	 1	 Vol+	 Vol +
 2	 2	 Vol-	 Vol -
 3	 3	 Mute	 Mute
 4	 4	 P+	 Ch +
 5	 5	 P-	 Ch -
 6	 6	 P.Info	 Info
 7	 7	 [i+]	 List
 8	 8	 AV Mode	 Format
 9	 9	 [<>]	 Eject
 0	 0	 Eco	 3D
 Recall	 Pre Ch	 Menu	 Menu
 Source	 AV	 Up	 Up
 ATV	 Shift + Smart	 Down	 Down
 DTV	 Smart	 Right	 Right
 EPG	 Guide	 Left	 Left
 Radio	 TV/R	 OK	 Ok





Originale		Sostituto		Originale		Sostituto	
	End		Exit		Option		Options
	Back		Back		Rec		Rec
	Red		Red		Rec Stop	 + 	Shift + Stop
	Green		Green		Stop		Stop
	Yellow		Yellow				
	Blue		Blue				
	[≡]		Text				
	[≡?]	 + 	Shift + Subt				
	[...]		Subt				
	[≡+]	 + 	Shift + Options				
	[≡o]	 + 	Shift + Dual				
	[≡◆]	 + 	Shift + TV/R				
	Sleep		Sleep				
	Power Aquos Link	 + 	Shift + Power				
	<<		<<				
	Play		Play				
	>>		>>				