

Wireless Sensor DolphinBar  TRADEMARKS ARE PROPERTY OF THEIR RESPECTIVE OWNERS	Wireless Sensor DolphinBar Description: Wireless Sensor DolphinBar can connect your Wii Remote Plus Controller to your PC by Bluetooth. Supports Nunchuk Controller and Wii Classic Controller. Supports four working modes:Keyboard and Mouse Mode (LED1), Keyboard and Mouse Game Mode(LED2), Game Controller Mode (LED3)and Wii Remote Controller Emulator Mode (LED4). Features: 1.Wireless Sensor DolphinBar can connect your Wii Remote Plus Controller to your PC by Bluetooth. 2.Supports TR WiiMotes. 3.Supports the newest Dolphin. 4.Easy and simple operation, no need extra Bluetooth dongle. 5.Supports Cursor Anti-Shake function. 6.Allows you to play more quicky and precisely with your Game Controller, Light Gun or Racing Wheel. 7.Works as a normal keyboard and mouse. 8.Works as a PC Remote Controller. You can return or skip to the beginning of the current, previous or next chapter, 1	and supports Fast reverse, Fast forward, Pause playing, etc 9.Works as a Game Light Gun. You can play all kinds of PC Shooting Games, and PC or Wii Light Gun is well supported. 10.Works as a wireless Game Controller. Connects your Wii Remote Controller, or Wii Remote Controller + Wii Nunchuk,or Wii Remote Controller + Wii Classic Controller to your PC.Supports the G-sensor function that is the best choice for the Racing Games. Supports the Vibration Feedback. 11. Compatible with the Wii Emulator Dolphin. Supports up to 4 of the Wii Remote Controllers. Compatible with Windows XP, Vista and Windows 7, Windows 8, Windows 10. LED and Switch Instruction 1.SYNC Button and LED 0 -For the initial syncing, press the “SYNC” button on the DolphinBar , you'll find that the 4 blue LEDs on your controller and the LED 0 on the DolphinBar will flash quickly.Once the syncing process is complete,the LED on the DolphinBar and your controller will stay lit. -There are three statuses for LED 0, flash slowly, flash quickly and stay lit. If the Wii Remote Controller does not connect, the LED 0 will flash slowly; if the Wii Remote Controller connects successfully, 2	the LED 0 will stay lit; if you press the SYNC button and start syncing, the LED 0 will flash quickly. 2.MODE Button and LED 1,LED 2, LED 3,LED 4. 2.1 Switch to four different modes, Keyboard and Mouse Mode (LED1), Keyboard and Mouse Game Mode (LED2),Game Controller Mode (LED3) and Wii Remote Controller Emulator Mode (LED4) by pressing the MODE button on theDolphinBar 2.2 Switch to four different modes by using the key combination on the Wii Remote Controller - Keyboard and Mouse Mode (LED1): “HOME” + Direction Button “DOWN” - Keyboard and Mouse Game Mode (LED2): “HOME” +Direction Button LEFT - Game Controller Mode (LED3): “HOME” + Direction Button “UP” Wii Remote Controller Emulator Mode (LED4): “HOME” +Direction Button “RIGHT” 2.3 The default mode is the Keyboard and Mouse Mode(LED1). The changes will be saved automatically after you switch to your desired mode. 3	3. TOP/BOTTOM Button -Switch to “TOP”if the DophinBar is on the top of the monitor. -Switch to “BOTTOM” if the DophinBar is at the bottom of the monitor. Modes and Buttons Instruction 1. Keyboard and Mouse Mode (LED 1 on the DolphinBar) -It supports one Wii Remote Controller only. The Nunchuk and Wii Classic Controller are not supported. The Wii Remote Controller will go to the Sleep mode automatically if no movement for more than 10 minutes. - Two statuses for this mode. The Normal Keyboard and Mouse Status (The blue LED 1 and 2 on your Wii Remote Controller will light) and the Multimedia Status (The blue LED 1 and 3 on your Wii Remote Controller will light). These two statuses can be exchanged by pressing the Button “HOME” + Direction Button “Down”. -The Normal Keyboard and Mouse Status Button Instruction (The blue LED 1 and 2 on your Wii Remote Controller will light) 4
--	--	--	--	---

Wii Remote Controller

IR Camera

A

B

1

2

Keyboard and Mouse

Mouse Moving

Page Up

Page Down

Shut off the connection

Wii Remote Controller

IR Camera

A

B

<