



User Manual

Thermostat 560

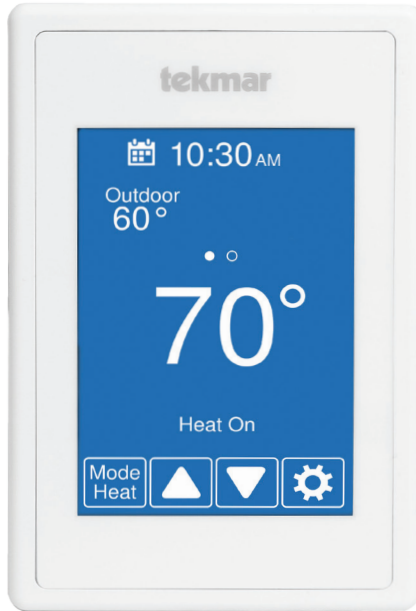

Home Screen


After 60 seconds of inactivity, the thermostat home screen displays only the time and the temperature.

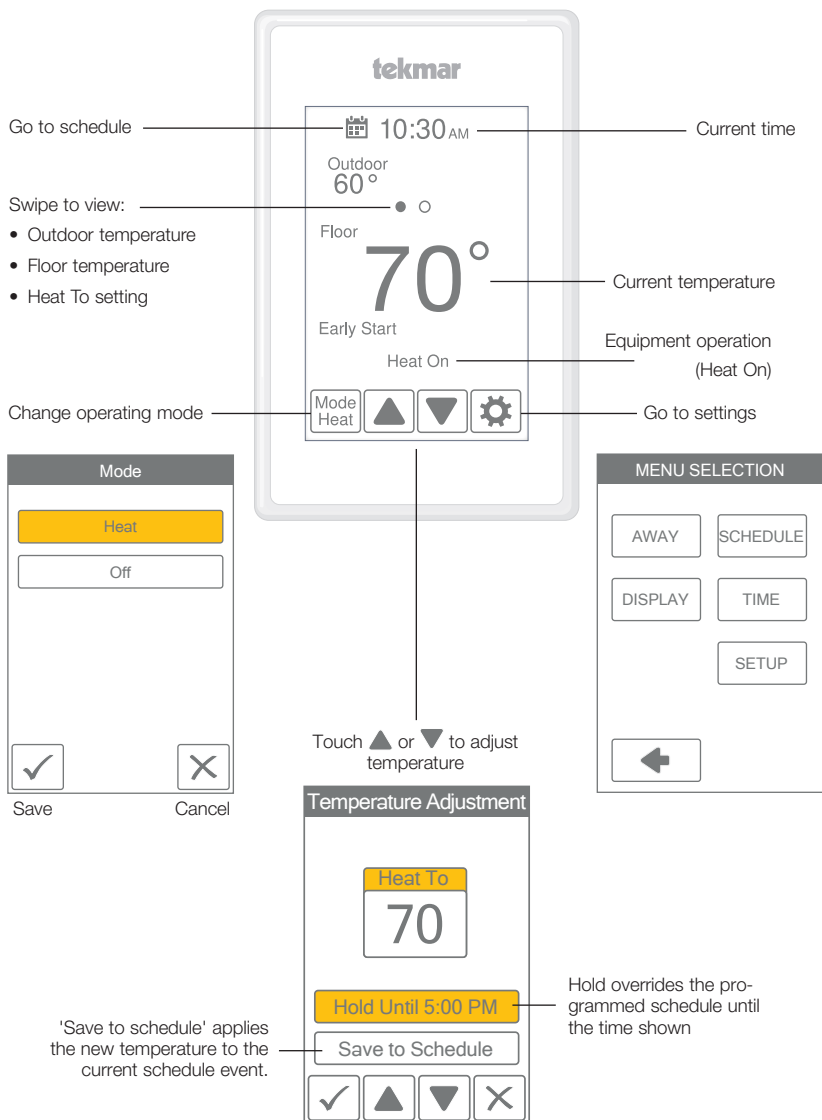



User Settings

Away

Use the Away setting to save energy when the building is unoccupied

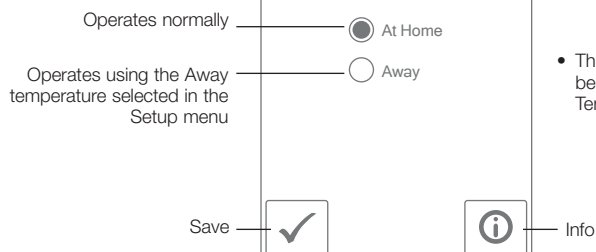

Schedule

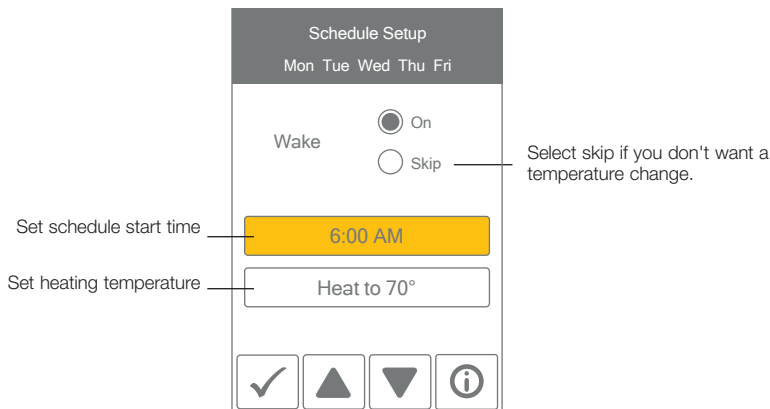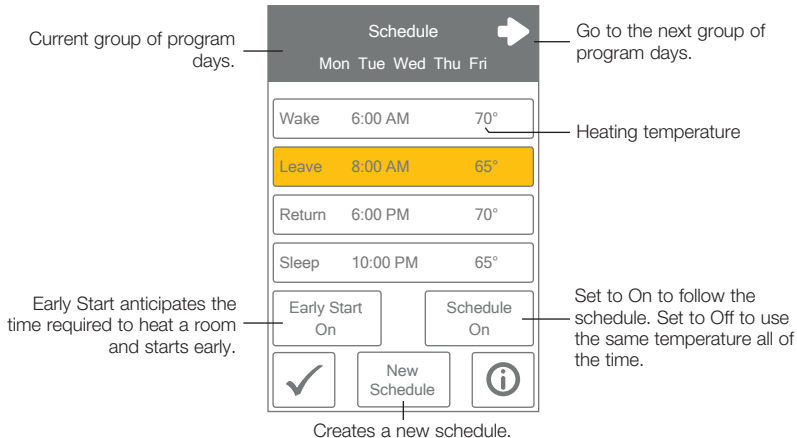

Display

DISPLAY 1/2

Select °F or °C — Temperature Units: °F

Energy use. See below. — Energy Use: Monthly

Brightness when touching the display — Brightness - Active: 80%

Brightness after 60 second timeout of no use — Brightness - Inactive: 50%

Choose the background color — Theme: Light

Language: English — Select English, French or Spanish

Navigation buttons: Left Arrow, Up Arrow, Down Arrow

DISPLAY OPTIONS 2/2

10 second count down to allow the screen to be cleaned with a moist cloth. — Clean Screen: Off

Select if the time is shown when inactive — Inactive Time Display: On

Select if the outdoor temperature is shown when inactive — Inactive Outdoor Display: Off

Navigation buttons: Left Arrow, Up Arrow, Down Arrow

Energy Use

Daily Usage

Today	0 hrs
Yesterday	0 hrs
Tue	0 hrs
Mon	0 hrs
Sun	0 hrs
Sat	0 hrs
Fri	0 hrs

View each day's run time for heating.

Navigation buttons: Checkmark, Monthly Usage, Information

Toggle between Daily and Monthly Usage.

Time

TIME & DATE

Aug 25 2016

1 30 PM

▲

▲

▲

▼

▼

▼

✓

OPTIONS

i

The time and date is manually set by highlighting a field and then using the ▲ or ▼ buttons.

Time options are:

- 12 hour or 24 hour time format
- Daylight savings time

Page left intentionally blank

Page left intentionally blank

Need help? Go to our website or contact us.

watts.com/tekmar | tekmar.customerservice@wattswater.com | 1-800-438-3903

tekmar[®]

A WATTS Brand

Tel: 1-800-438-3903 • Fax: (250) 984-0815
watts.com/tekmar