

SKOTTEL BRAAI 50 GRILL 2 BRAAI 50 PAELLA BRAAI 50

MODEL No: 8309T-13 28/37/50mbar





GRILL 2 BRAAI 50

USER INSTRUCTIONS

EN DE DK ES FR IT NL NO PL SE SI FI TR



Explanation of Symbols



Recycling packaging material! Place the packaging material in the appropriate recycling waste bins wherever possible.

CAUTION



Provide ample ventilation. This gas appliance consumes air (oxygen). Do not use this appliance in an unventilated space to avoid endangering your life. If still more gas appliances and/or occupants using gas are added to the space, additional ventilation must

be provided. IMPORTANT

Read these instructions carefully so as to familiarise yourself with the appliance before fitting the appliance to a gas cylinder.

Retain these instructions for future reference.

1. Safety information

These instructions are for your safety and to help you avoid risk of injury and/or damage. All warranties will become void if you do not follow these instructions.

- This appliance complies to BS EN 498, BS EN 484.
- Gas appliances require ventilation for efficient performance and to ensure the safety of
 users and other persons in close proximity, do not use the appliance in an unventilated
 area. It is intended for outdoor use only.
- Ensure that the appliance is used in a well-ventilated area.
- WARNING: ACCESSIBLE PARTS MAY BE VERY HOT. KEEP YOUNG CHILDREN AWAY.
- Read these instructions carefully before using the appliance.
- FOR OUTDOOR USE ONLY!

Assembly and use

- Do not use the appliance if it has damaged or worn seals.
- Do not use an appliance that is leaking, damaged or which does not operate properly.
- · Handle the appliance with care, do not drop it.
- Always operate the appliance on a firm level surface.
- · Ensure that the assembled product is stable and does not rock.
- This appliance is not suitable for installation or connection to a reticulated gas supply.
- This appliance must be kept away from flammable materials during use. Minimum safe distances are: Above the appliance 120cm. At the rear and sides 60cm. (fig 1)
- · When using a pot, the minimum recommended pot size is 225mm and maximum recommended size is 450mm.
- Do not use any cooking surface or pot that is larger than the recommended size. Our cooking surfaces have been specifically designed to
 allow gas combustion to escape and the closer of this space could affect the performance of this appliance.
- Do not modify this appliance, any modification may be dangerous. Do not use it for anything for which it has not been designed.
- · Do not move the appliance during use.
- · Never leave the appliance unattended when lit.
- During use, parts of the appliance will become hot (particularly the burner) Avoid touching hot parts with bare hands. The use of gloves is
 recommended
- Do not use the appliance without the pot stands being in place and properly located.

Hose

- The hose must be checked for wear or damage before every use and before connecting to the gas container.
- Do not use the appliance if it has a damaged or worn hose. Replace the hose.
- Do not twist or pinch the hose.
- The hose length should be no less than 0.8m and shall not exceed 1.5m. Replace when the hose is damaged or shows signs of brittleness or cracks.

Gas Container


- This appliance must only be used with an approved hose and regulator
- Ensure that the gas container is fitted or changed in a well-ventilated location, preferably outdoors, away from any sources of ignition such
 as naked flames, pilots, electric fires and away from other people.
- · Keep gas containers away from heat and flame. Do not place on a stove or any other hot surface.
- Refillable containers are to be used only in the upright position so as to ensure proper fuel withdrawal. Failure to adhere to this may cause
 liquid discharge from the gas container resulting in a dangerous operating conditions.
- . Do not try to remove the gas container whilst the appliance is in operation.
- The gas container must be disconnected from the appliance after use or when in storage.

Light back

- In the event of light back (where the flame burns back and ignites inside the burner or venturi housing), immediately turn off the gas supply
 by firstly closing the control valve on the gas cylinder and then the appliance valve. After the flame is extinguished, remove the regulator
 and check the condition of the seal; replace the seal if in doubt. Re-light the appliance.
- · Should the flame persistently light back, return the product to your authorized repair agent.

Leaks

- If there is a gas leak on your appliance (smell of gas), immediately turn off the gas supply by turning the control knob clockwise to the "OFF" position and take it into a flame free location where the gas leak may be detected and stopped. If you wish to check for gas leaks on your appliance, do it outside. Do not try to detect gas leaks using a flame; use soapy water.
- Check for leaks on the tailpiece by the valve and on the cylinder regulator fitting with gas open on the cylinder but not open or switched on by the appliance control knob.

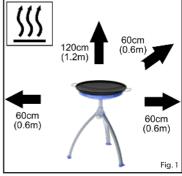



How to check the appliance is connected to the gas supply in a sound fashion

- It is important that all gas connections have been correctly connected to prevent any gas leaks.
- The correct way is to smear the joint, i.e. where the gas container connects to the appliance, with soapy water. Turn the appliance control knob
 slightly anti-clockwise to turn the gas on. If bubbles form, then there is a gas leak. Immediately turn the gas off and disconnect the gas supply
 from the appliance. Check that all the connections are properly fitted. Check that the seal is in place and in good condition before connecting
 the gas supply. Re-check with soapy water after refitting the gas supply.
- If a gas leak persists, return the product to your local dealer for inspection/repair.

PRODUCT No. 8309						
Country of use	DK, FI, NO, NL, SE, AT, DE, SI	BE, ES, FR, IE, IT, PT, GB, CH	PL	AT, DE		
Appliance Catagories	I3B/P (30)	13+ (28-30/37)	I3B/P (37)	I3B/P (50)		
Allowable gases and operating pressure	Butane @ 28-30mbar Propane @ 28-30mbar Butane/Propane mixtures @ 28-30mbar	Butane @ 28-30mbar Propane @ 37mbar	Butane @ 37mbar Propane @ 37mbar Butane/Propane mixtures @ 37mbar	Butane @ 50mbar Propane @ 50mbar Butane/Propane mixtures @ 50mbar		
Nominal usuage	Butane - 218 grams/hour	Butane - 218 grams/hour	Butane - 218 grams/hour	Butane - 218 grams/hour		
Gross nom. heat input	3kW	3kW	3kW	3kW		
Jet number	85		81	74		
Gas supply sources:						
a)	A refillable gas container not exceeding 11kg and complying with local regulation in force.					
b)	CA 445/CA 500 Cadac or equivalent EN417 compliant disposable cartridge with CADAC Power Pak 500.					

Country Name and Abbreviations					
AE = United Arab Emirates	E = United Arab Emirates AL = Albania		BE = Belgium	CH = Switzerland	
CZ = Czech Republic DE = Germany DI		DK = Denmark	ES = Spain	FI = Finland	
FR = France	GB = United Kingdom	GR = Greece	HR = Croatia	IT = Italy	
JP = Japan	KR = Korea	NL = Netherlands	NO = Norway	PL = Poland	
PT = Portugal	RO = Romania	RU = Russia	RS = Serbia	SI = Slovenia	
SK = Slovakia	SE = Sweden	TR = Turkey	ZA = South Africa		

I 3B/P (30), I 3+ (28-30/37) and I 3B/P (37), Appliance categories: (DK, FI, NO, NL, SE, AT, DE, BE, ES, FR, IE, IT, PT, GB, CH)

Push an approved hose onto the valve tailpiece until it is properly seated. On the other end, attach a suitable low pressure regulator. 13B/P(30): 30mbar Butane configurations regulator or 30mbar Propane configurations regulator or 30mbar butane/propane mixture configuration regulator.

 $13B/P(37): 37 mbar\ Butane\ configurations\ regulator\ or\ 37 mbar\ Propane\ configurations\ regulator\ or\ 37 mbar\ butane/propane\ mixture\ configuration\ regulator.$

13+(28-30/37): 30mbar Butane configurations regulator or 37mbar Propane configurations regulator.

Again making sure that the hose is properly seated. The type of hose used shall comply with the relevant EN standard and locate requirement.

I 3B/P (50) Appliance category: (AT, DE)

13B/P(50): 50mbar Butane configurations regulator or 50mbar Propane configurations regulator or 50mbar butane/propane mixture configurations regulator.

Screw a hose with the correct threaded fittings on each end, onto the left hand 1/4" BSP thread of the valve (M). Attach a suitable 50mbar low-pressure regulator on the end of the hose. The hose assembly used must comply with DIN 4815 part 2 or equivalent.

2. Fitting and Changing the Gas Supply

Connecting the gas supply


- Before connecting the appliance to a gas supply, ensure that the rubber seal on the regulator is in position and in good condition.
- Before connecting the hose and regulator to the appliance, check that the appliance control knob (K) is in the "OFF" position ("*" turn fully clockwise).
- · Carry out this check each time you fit the appliance to a gas cylinder.
- · Blow out any dust from the gas supply opening to prevent possible blockage of the jet.
- NOTE! When installing the tailpiece, ensure it is held straight while tightening the tailpiece nut, in order to prevent a possible gas leak. Tighten
 with a suitable spanner or hand wheel.
- · Fit an approved hose and regulator to the appliance.
- Ensure that the gas supply (gas cylinder/gas cartridge) is fitted in a well-ventilated location away from any source of ignition, such as naked flames and away from other people.
- Do not twist or pinch the hose. Ensure that it is routed away from the stove body so as to prevent deterioration / damage to the hose caused by heat.
- · Make sure that the gas cylinder is kept upright at all times, connect to the cylinder by screwing on hand tight until fully engaged.
- Ensure that a complete gas seal has been made (check for the smell of gas around the connection joint). Do not check for leaks with a naked flame. Use warm soapy water only, applied to the joints and connections of the appliance. Any leakage will show up as bubbles around the leakage area.
- If you cannot rectify the gas leak do not use the appliance. If you are in doubt, contact your nearest stockist.


Disconnecting and changing the gas supply


- After use, turn the appliance control knob to the "OFF" position and close the gas supply.
- When you need to replace your empty cylinder, make sure that the gas is closed at the cylinder valve.
- · Do not smoke while changing the cylinder.
- · Remove the regulator from the empty cylinder.
- Attach the regulator to the full cylinder, refer to the instructions above on how to connect the gas supply.
- Apply the same care and checking procedures as if fitting a new gas cylinder.

How to check if your gas cylinder is empty

- The easiest way to check if you are low on gas is by picking up your gas cylinder.
- If you think your gas cylinder is feeling a little lighter than you'd like, weighing the bottle is a great way to see how much gas is left. Most
 cylinders will have the empty weight stamped on either the neck or foot ring, and if the weight indicated on the stamp and the weight of your
 cylinder are the same, you're out of gas. You can then approximate the amount of gas you have left by the difference in weight.
- Assemble the tripod stand as per figure 2a and 2b.

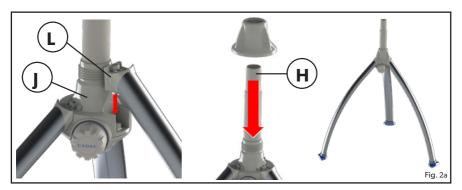


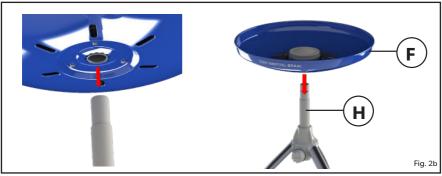

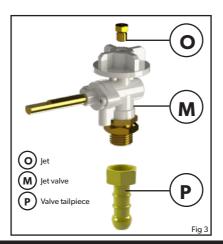

3. Component List

- A Skottel Dish
- C Pot Stand
- F Burner Pan
- (G) Burner
- (H) Stem
- Tripod Housing
- (K) Control Knob
- L) Leg
- B Grill2Braai Grid
- Q Paella Pan

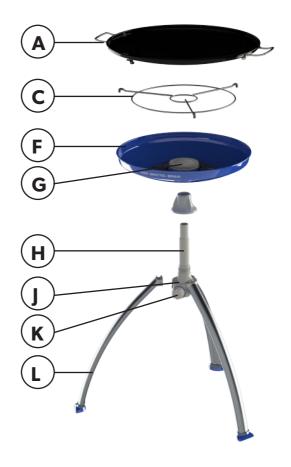





The following surfaces are also sold seperately. Check with your local stock is to see what accessories are available in your region.



4. Operating the Appliance

Assembly and use

- When operating this appliance, please take care to ensure that all parts are in good working order and that you have checked for any gas leaks before lighting the appliance with every use.
- Cooking surfaces can simply be placed and are ready to use. No assembly required.
- PLEASE NOTE: Please ensure all protective packaging and plastic are removed from the appliance before use.
- Do not block or modify the vents of the burner pan (F) in the base plate, as this will affect the airflow to the vents located inside the housing (J) of the support legs. Such a situation will affect the performance of the product and may cause an unstable flame.
- Assemble the tripod as described in section 2.
- · Place the burner pan (F) on the stem and tripod assembly.

For Skottel Braai

- To prepare the Skottel Braai for use place it onto the burner pan (F) so that all three locators (V) (Fig.4) will properly mate with the lip
 on the circumference of the burner pan (F) thus ensuring a stable fitment.
- Cooking temperatures are easily adjusted to suit your own requirements by turning the control knob (K) to regulate the degree of heat.
 A feature of the Skottel BBQ is that it offers various heat zones (See Fig. 5). This is very useful as some foods cook quicker than others and the food that is ready first, can be moved to the cooler areas of the dish to keep warm whilst the balance of the food is still cooking.

For Grill2Braai

· To prepare the aluminium grill plate for use, place it on the top edge of the burner pan, ensuring all locating feet are securely positioned.

For Paella Braai

To use the paella pan you need to place it on top of the pot stand. Do not heat paella pan on full flame with no food inside.

- Adjust the heat as required by adjusting the gas flow on the control knob and start cooking.
- · After completion of cooking close the valve and remove the cooking surface after it has cooled down.
- · After cooking and cleaning, pack the unit away for re-use.

Precautions to observe before lighting.

- Use this appliance only on a firm level surface.
- · After prolonged storage, inspect the appliance for any insects and webs, which may affect gas flow.

 
Lighting up using a BBQ lighter

When starting cold, the appliance may be lit from the top prior to fitting the desired cooking surface onto the fat pan. When lighting up a
hot appliance, it is recommended that this be done by sticking a barbecue lighter through one of the vent holes underneath the burner,
until it is in line with the burner (DO NOT place the BBQ lighter through the large hole directly underneath the burner). Ignite the BBQ
lighter whilst the BBQ lighter is lit, push and turn the control knob anti-clockwise to light the burner.

Genera

- Use the control knob to adjust the flame intensity to the desired level by turning the knob clockwise to decrease the flame and anticlockwise to increase the flame.
- After use, first close the control valve on the gas cylinder (if applicable). When the flame has gone out, close the control valve on the device
- Do not move the appliance when in use. It is unsafe practice to move the appliance whilst lit and may cause flaring.
- When not in use remove the gas supply.





5. GreenGrill Cooking Options

GreenGrill Cooking

Most of the cooking surfaces have our GreenGrill coating. This ceramic coating is completely PFOA-free; it contains no toxic substances, and guarentees healthier cooking!

PREPARATION & USE

- 'Seasoning': before using the cooking surface for the first time, you can season it to give the cooking surface at thin protective layer that prevents food
 from sticking. It is not required but we do recommend it. It's very easy: lightly rub cooking oil on the surface and then place over medium heat
 for 2 3 minutes. When it cools, wash the cooking surface with soapy water before use and grease it lightly with some oil (cooking oil of your
 choice, e.g. sunflower oil).
 It's ready to go!
- Note: GreenGrill coating conducts heat better than products with a regular (PTFE) non-stick coating. We therefore recommend using only 75% of the
 power of what you are used to.
- Never leave the cooking surface on the heat source without oil. Apply a thin layer of oil with a kitchen paper towel or a brush before placing the
 cooking surface on the heat source. Make sure you have oiled all parts, so with e.g. a BBQ grid include the raised edges as well.
- We recommend frying in sunflower oil or Rapeseed Oil because of the high burning point. Olive oil can have a relatively low burning point, which can cause the ingredients to stick to the pan or burn. We therefore do not recommend using oilve oil.
 Tip: bring meat or fish to room temperature before frying. This will prevent sticking to the cooking surface.
- Always use silicone and/or wooden utensils so that the GreenGrill coating is not damaged. Never use metal utensils as this can damage the
 coating.

CLEANING

- · Let the cooking surface cool down before cleaning. Extreme temperature changes can cause deformation of the cooking surface.
- The GreenGrill coating is 'Easy Clean'. Warm soapy water with a soft sponge is sufficient for cleaning the cooking surfaces with GreenGrill
 coating. Avoid scouring pads or steel wool.
- If the cooking surface has food particles remaining from a previous use they can adhere to the coating, which can lead to brown spots. In
 these places, ingredients can stick to the cooking surface because the coating is no longer reached. Make sure that these spots are properly
 removed before use
- For stubborn stains or residues, you can try the 'vinegar method' for the paella pan or chef pan: pour a layer of vinegar into the pan and heat
 the pan slightly. The vinegar does not have to boil and should certainly not evaporate completely. Pour the vinegar out of the pan, clean the pan
 with soapy water and the pan is as good as new. Note: heating vinegar can give off an unpleasant smell.
- The CADAC | DOMETIC Soft Soak (sold seperately) is the ideal companion product to facilitate overnight soaking. When using the Soft Soak, we recommend placing the cooking surface face down which allows for maximum soaking and also uses less water.
- Any stubborn stains that remain after soaking, can be loosened and brushed away using the CADAC | DOMETIC Soft Soak Brush (sold seperately)
- · Dry with a soft cloth and you're done!

MAINTENANCE

- We recommend to add a little oil to the cooking surface after cleaning and spread it with kitchen paper.
 The oil seals the surface from the outside air and moisture. It also ensures that the food does not burn into the surface.
- Place the cooking surface in a plastic bag before you put it into its storage bag so you are ensured the storage bag remains clean and oil free.
- The storage bag prevents damage to the GreenGrill coating and your product.





Soft Soak Brush

Cooking Options

These are the available cooking options.

Grilling: This cooking option is ideal for fat-free grilling of chicken, sausages, chops, kebabs, fish or vegetables. For this type of cooking, use the grill plate.

Caution: Please note that when cooking fatty meats some fat will splatter onto the unit which may cause flare-ups. Please use caution when handling such meats. The cooking temperatures are easily adjusted to suit your own requirements by turning the control knob to regulate the degree of heat.

<u>Frying:</u> This option is ideal for stir-fries, fish, breakfast, pancakes, prawns, paella and vegetables. For this type of cooking, use the Paella Pan. Please note that being a shallow pan, it is not suitable for deep-frying. The easy clean surface encourages the minimum use of fat for healthy cooking.

Boiling: For this type of cooking, make use of the pot stand ensuring that it is properly seated. Place a suitable pot (not less than 225mm diameter and not more than 450mm diameter). One liter of water will boil in approximately 6 minutes depending on the conditions, size of pot used, etc.

Note: When using small sized pots do not attempt to use pots with plastic handles as these can get extremely hot.

<u>Paella:</u> This cooking option is ideal for preparing paellas, risottos, pasta dishes, traditional breakfasts etc. The Paella Pan is made from a high quality pressed aluminium which allows for excellent heat distribution and retention.

6. Cleaning

- Allow the appliance to cool down before you clean it.
- Use a damp cloth wrung out in a solution of soapy water to clean exterior surfaces.
- The grill plate is coated with a tough durable ceramic non-stick coating that has been used with great success on some of the best cookware
 in the world. Never the less, taking care of it can help you to enjoy extra years of healthy, easy, non-stick cooking.
- Whilst the ceramic non-stick coating is very durable, it can easily be damaged by the use of metal cooking utensils. It is therefore
 recommended that only plastic or wooden utensils be used when cooking.
- Always allow the grill/Paella Pan to cool before immersing it in water.
- · Make sure that no water gets onto the burner or pilot/light area. Wipe the appliance completely dry before use.
- · Do not use abrasive cleaners as they may damage the surfaces.
- · Clean the appliance after each use. After cleaning recondition the cooking surface with a light wipe of oil.
- Do not use any high-pressure steam equipment or a water jet to clean the appliance.
- · Note: For stubborn stains, oven cleaner may be used.

7. Storage

- Always allow the unit to cool down and be cleaned before storing.
- Turn off the gas supply to the appliance, disconnect and remove the gas supply from the appliance.
- Never store an appliance with the gas supply connected, this is an unsafe practice.
- Store the appliance and gas supply in a well-ventilated area away from combustible material. Storage of cylinders should preferably be outdoors and must NOT be in a basement.

8. Maintenance & troubleshooting

Maintenance

- If you clean and maintain your appliance on a regular basis, the life of your appliance will extend and the possibility of problems will
- · We recommend the service of your appliance to be every twelve (12) months by a service agent to ensure continued efficient operation.
- This appliance must only be serviced by an authorized person.
- Check your gas hose and connections regularly for any signs of leaks and every time the gas cylinder is re-filled or fitted to the appliance with every use.

Troubleshooting

In the case of a spattering flame or jet blockage:


- · Clean your burner ports in case of an over spill.
- We recommend to clean or replace the jets every six (6) months to ensure continued efficient operation of your appliance.
- Should the appliance operate abnormally after storage and all checks have not isolated the problem, the venturi may be blocked. A
 blocked venturi would be indicated by a weaker yellowish flame or no flame at all in extreme cases. Under these circumstances it will be
 necessary to remove and check and thoroughly clean out any foreign matter which may have gathered in the appliance.
- This may be done by removing the jet using standard tools and blow any dirt from the jet, alternatively, you may purchase new jets from
 your local store. Do not attempt to clean the jet mechanically.

Replacing a blocked jet:

- Your appliance is fitted with a specific size jet (O) to regulate the correct amount of gas.
- Should the hole in the Jet (O) become blocked, this may result in a small flame or no flam
 at all. Do not attempt to clean the Jet (O) with a pin or other such device as this may damage
 the orifice, which could make the appliance unsafe.
- To replace the Jet (O):. Unscrew the 3 screws on the bottom housing cover and remove cover.
- Remove Valve base plate assembly by unscrewing the six self-tapping screws fixing it to the tripod housing (j) and subsequently remove the valve (M) from the housing simply by sliding it out.
- The jet (O) will now be accessible at the top of the valve (M).
- $\bullet \quad \text{Unscrew the jet (O) from the valve (M) using a suitable spanner.} \\$
- Do not use pliers on the jet as this may damage the jet, making it unusable or impossible to remove. Screw the new jet into the valve. Do not over-tighten as this may damage the jet.
- Re-fit the valve and baseplate in the reverse order of assembly. When re-fitting the valve, ensure that the valve spindle aligns with slot in the tripod housing.
- Reconnect the gas supply, in Section 2.

Replacing the Hose:

• The fitting of a hose is described in Section 2.

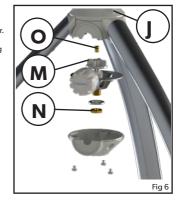

9. Spares & Accessories

Always use genuine spares as they have been designed to give optimum performance.

Spares

Item	Spare No.	Item	Spare No.	Item	Spare No.
	740-SP030 (Jet 0.85 28mbar) 740-SP028 (Jet 0.81 37mbar) 740-SP015 (Jet 0.74 50mbar)	P	8309-SP001		8309-SP002
	8309-SP003		8309-SP005		Skottel Braai 8309-SP006 Grill2Braai 8309-SP015 Paella Braai 8309-SP014

Accessories

ltem	Spare No.	Item	Spare No.	ltem	Spare No.
	8309-100		5758		370-EU 370-UK 370-ZA
	8910-100		8910-900		



10. Warranty

CADAC Europe BV hereby warrants to the ORIGINAL PURCHASER of this appliance for 2 years, that it will be free of defects in material and workmanship from the date of purchase as follows:

 Valves:
 2 Years

 Plastic parts:
 No Warranty

 Enamel parts:
 2 Years

 Burners:
 1 Year

The warranty will only apply if the unit is assembled and operated in accordance with the printed instructions.

CADAC Europe BV may require reasonable proof of your date of purchase. THEREFORE, YOU SHOULD RETAIN YOUR SALES SLIP OR INVOICE.

This Limited Warranty shall be limited to the repair or replacement of parts that prove defective under normal use and service and which on examination shall indicate, to CADAC Europe BV's satisfaction, they are defective. Before returning any parts, contact the customer service representative in your region using the contact information provided with your manual. If CADAC Europe BV confirms the defect and approves the claim, CADAC Europe BV will elect to replace such parts without charge. CADAC Europe BV will return parts to the purchaser, freight or postage prepaid.

This Limited Warranty does not cover any failures or operating difficulties due to accident, abuse, misuse, alteration, misapplication, vandalism, improper installation or improper maintenance or service, or failure to perform normal and routine maintenance, including but not limited to damage caused by insects within the burner tubes, as set out in this owner's manual. Deterioration or damage due to severe weather conditions such as hail, hurricanes, earthquakes or tornadoes, discoloration due to exposure to chemicals either directly or in the atmosphere, is not cover by this Limited Warranty.

There are no other express warrants except as set forth herein and any applicable implied warranties of merchantability and fitness are limited in duration to the period of coverage of this express written Limited Warranty. Some regions do not allow limitation on how long an implied warranty lasts, so this limitation may not apply to you.

CADAC Europe BV is not liable for any special, indirect or consequential damages. Some regions do not allow the exclusion or limitation of incidental or consequential damages, to this limitation or exclusion may not apply to you.

CADAC Europe BV does not authorize any person or company to assume for it any obligation or liability in connection with the sale, installation, use, removal, return, or replacement of its equipment; and no such representations are binding on CADAC Europe BV.

This Warranty applies only to products sold at retail.

To enjoy and ensure longevity of your **CADAC Europe BV** product, please refer to the cleaning and maintenance section of the user manual with particular attention to the care of the Stainless Steel.



CADAC SOUTH AFRICA

P.O. Box 43196. Industria, 2042 South Africa Tel: +27 11 470 6600 Email: info@cadac.co.za www.cadacsa.co.za

CADAC UK

14 Deanfield Court, Link59 Business Park, Clitheroe, Lancashire, **BB710S** United Kingdom. Tel: +44 (0) 333 2000363 E:mail: info@cadacuk.com www.cadacinternational.com

CADAC MOZAMBIQUE

Exclusive Brands Africa 492 Avenida Namaacha Maputo, Mozambique Tel: +258 21 406254 www.cadac.co.mz

CADAC IRAN

Robin Bazarganan Carin Co. Unit D, 6th Floor, Negin Zafar Building, No.1327, Shariati Street, Tehran, Iran Tel: +98 21 276 00 781 Mail: info@cadac.ir

CADAC CHINA

Room 807, Huayue International Building, No.255 Tiangao Road, South Yinzhou business district, Ningbo, China Tel:+86 574 87723937

Email: info@cadac.com.cn CADAC SWEDEN & NORWAY

KAMA FRITID AB 0046 36 353700 info@kamafritid.se

CADAC ELIDODE

Ratio 26, 6921 RW Duiven The Netherlands Tel: +31 26 319 7740 Email: info@cadaceurope.com www.cadacinternational.com

CADAC SCANDINAVIA

Millarco International A/S Rokhøj 26 8520 Lystrup, Denmark Phone: +45 87 43 42 00 millarco@millarco.dk www millarco com

CADAC MONTENEGRO

City kvart Z1L6 81000 Podgorica, Montenegro Tel 38220671446, 38269020063 01510 VANTAA E-mail: coca@t-com.me

CADAC DENMARK

Camper Fritid Industrivej 11 6640 Lunderskov, Denmark Tel · +45 7558 5255 Email: info@camper.dk www.camper.dk

CADAC ZIMBABWE

Exclusive Brands Africa Unit 8 Birkenhead Park 43 Josiah Chinamano Street Belmont, Bulawayo Tel: +263 971 740 (Bul) Tel: +263 479 2564 (Har) www.cadac.co.zw

CADAC GERMANY

Ratio 26, 6921 RW Duiven The Netherlands Tel: +31 26 319 7740 Email: info@cadaceurope.com www.cadacinternational.com

CADAC Czech Rep.

RÖSLER Praha spol. s r.o. K Horkám 19/21 102 00 Praha 10 Česká republika Tel: +420 267 188 011 Email: info@rosler.cz www rosler cz

CADAC FINLAND

OY KAMA FRITID AB Koivuhaantie 2-4 B 00358 20 792 0310 info@kamafritid.fi

CADAC POLAND

Kamai Wola Batorska 461 32-007 Wola Batorska Poland Tel: +48 12 635 1373 Email: handlowy@kamai.pl www.kamai.pl

CADAC ZAMBIA

Exclusive Brands Africa Limited 7225A Kachidza Road Light Industrial Area Lusaka, Zambia Tel: +260 211 842015 Tel: +260977 345034 Email: info@ebagrp.com

CADAC FRANCE

Le Viallon, 42520 Veranne France Tel: +33 4 74 78 13 65 Email: info@cadaceurope.com www.cadacinternational.com

CADAC NEW ZEALAND

Riverlea Group (Pty) Ltd 2A Maui Street, Pukete, Hamilton 3200, New Zealand Tel: +64 7 847 0204 Email: sales@riverleagroup.co.nz www.riverleagroup.co.nz

CADAC U.A.E.

Supreme Impex General Trading LLC Office No. 1801-7 Latifa Tower Sheikh Zayed Road Dubai, UAE

CADAC ITALY

Brunner SRL/GMBH via Buozzi 8 39100 Bolzano (Italy) Tel: +39 0471 542900 Email: info@brunner.it www.brunnerinternational.com

CADAC SOUTH EAST EUROPE

Bulevar oslobodjenja 285 Tel: +381 11 339 2700 Email: sinisaj@cadac.rs www.cadac.rs