

Table 2: WM800 RSM Overview and Description

No.	Description
1	1-Dot Button
2	3-Dot Button
3	Push-To-Talk (PTT) button
4	2-Dot Button
5	Power Button
6	Volume Toggle
7	Emergency Button
8	Microphone
9	Speaker
10	Task Light Button
11	Charging Contact
12	Near Field Communication (NFC) Tag
13	Blue Dot
14	Audio Jack
15	Battery Latch
16	Swivel Clip
17	Task Light
18	USB-C Jack
19	Power Indicator
20	Audio/Bluetooth Indicator

WM800 RSM Feature Overview

Table 3: WM800 RSM Feature Overview and Description

Feature	Functionality
Power On/Off	Turn on or off the WM800 RSM by pressing and holding the Power button for two seconds.
Auto Power Off	Cancel auto powering off by pressing the Power button once.
Check Battery and Connection Status	- When the RSM is turn on, press the Power button to check the battery and connection status. - Battery Statuses are as follows: - High: Blinking green twice. - Medium: Blinking amber twice. - Low: Blinking red twice. - Critical: Continuous blinking red. - Connection Statuses are as follows: "Searching for Host", "Connecting", "Connected", "Reconnecting", and "Disconnected". - Audio/Bluetooth Indicator blinking blue twice when RSM is connected. - Voice or Tone Prompt are available.
Programmable Buttons	You can program 1-Dot, 2-Dot, and 3-Dot buttons to different functions. Refer to the radio or host device user manual for detail.

Table 3: WM800 RSM Feature Overview and Description

Feature	Functionality
Voice Control	- Voice Assistant (ViQi) is available when the WM800 RSM is paired with a radio supporting ViQi. - Activate by pressing and holding the 3-dot programmable button.
Task Light Control	Turn the Task Light on or off by pressing the Task Light button for one second.
Volume Controls	- Adjust the volume level by pressing the + or - button. - Ramp up or down the volume level by pressing and holding the + or - button.
Tone and Voice Prompt Selection	Select tone or voice prompt when the RSM is in pairing mode by pressing the 2-dot button. NOTE: To set tone or voice prompt, ensure that the RSM is not connected to any host device.
Clear Device from Pairing List	Remove host device from the WM800 RSM pairing list by pressing and holding the PTT and Power buttons simultaneously.
Error Indication	Occurs in the event of any product error. The WM800 RSM Power and Audio/Bluetooth Indicator is blinking red.

Dual-unit Charger Overview


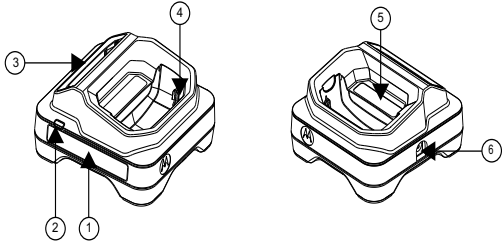


Table 4: Charger Overview and Description


No.	Description
1	Charging Indicators Label
2	Charger Indicator for Battery
3	Battery charging pocket
4	RSM charging pocket
5	Battery Caution Label
6	Power supply input

Attaching the Battery

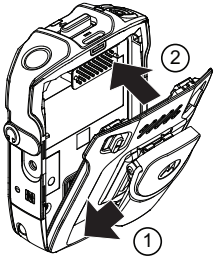

- Slot in the bottom side of the battery to the RSM battery contact.
- Press firmly in the middle to ensure both latches snap in place and fully locked.

Detaching Battery

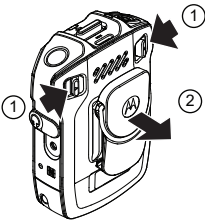

- Pinch the left and right latches simultaneously.
- Pull out the clip to remove the battery.

Getting Started

Before you start, fully charge the WM800 RSM.

Charging WM800 RSM and Battery

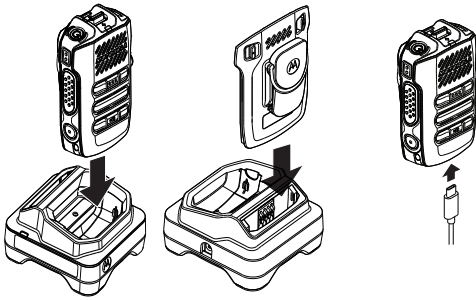


Table 5: Charging Indication

Power Indicator	Description
Solid red	Charging.
Blinking green	Charged up to 90% or more.
Solid green	Close to fully charged or fully charged.
Blinking amber	Battery is waiting to charge. (Either the battery voltage is too low or the battery temperature is too low or too high to allow charging. When this condition is corrected, the battery will automatically begin charging.)

Table 5: Charging Indication

Power Indicator	Description
Rapid blinking red	Charging error.

Table 6: Power Indication

Power Indicator	Description
Blinking green for one second	Power On
Blinking green twice	Power Off
Blinking red twice	Power up error

Table 7: Battery Indication


Power Indicator	Description
Off	Battery is medium or high level. NOTE: Refer to Check Battery and Connection Status feature in Table 5 for more information about the battery status.
Blinking red	Battery at low level. NOTE: Voice and Tone Prompt are announced every two minutes until the device starts charging.
Rapid blinking red	Battery at critical level. Charge the RSM immediately to prevent flat-battery. NOTE: Voice and Tone prompt are announced every 30 seconds until the device starts charging.

Table 8: Audio/Bluetooth Status


Audio/Bluetooth Indicator	Description
Blinking blue	Pairing mode
Solid blue	- Connecting - Reconnecting - Disconnected
Off	Connected NOTE: Refer to Check Battery and Connection Status feature in Table 3 for more information about the connection status.

NOTE: Refer to the LED indicators on the device for the WM800 RSM charging status. Refer to the LED indicator on the charger for battery only charging status.

Recommended Wearing Positions

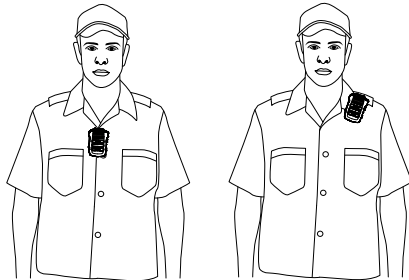


Recommended Wearing Positions:
Using Tethering Accessory without Velcro Pad

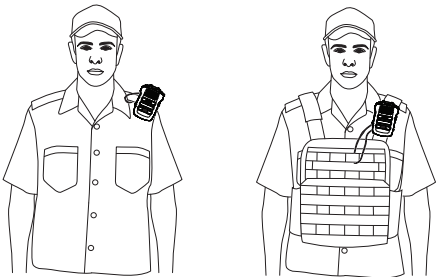

Recommended Wearing Positions:
Using Tethering Accessory with Velcro Pad




Locking the Tethering Kit Accessory

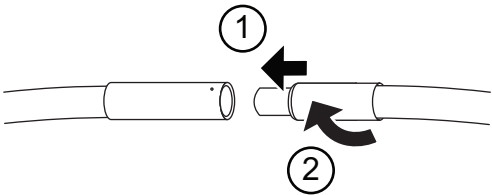

- Push in the clasp.
- Twist the clasp to lock.

Unlocking the Tethering Kit Accessory

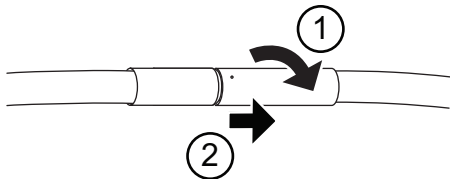

- Twist the clasp to unlock.
- Pull out the clasp.

Replacement Parts and Accessories

Table 9: Replacement Parts and Accessories

Part Number	Description
PMMN4156_	Wireless RSM (without Battery)
PMNN4846_	Wireless RSM Battery (included Swivel Clip)
PMPN4653_	DUC with Power Supply United States Plug
PMPN4654_	DUC with Power Supply Australia/New Zealand Plug
PMKN4294_	USB-C Cable (1 m)
PMLN9067_	Tethering Kit Accessory (Pack of 10)
PMLN8312_	Low Profile Swivel Clip with D-Ring
PMLN8120_	Receive-Only Loud Audio Earpiece with Translucent Tube, 3.5 mm Jack
PMLN8650_	N-Ear 360 Flexo™ Dynamic Braided Fiber Cloth™ Single Ear Earpiece
PMLN8652_	Receive-Only Extra Loud Earpiece with Translucent Tube, 3.5 mm Jack

Pairing Your WM800 RSM Through Bluetooth

- While WM800 RSM is power off, press and hold the **Power** button until you hear "Power On" followed by battery status and "Searching for Host" voice prompt, and the blue LED blinks during pairing mode.
- From the compatible device, search and select **"WM800_xxxx"** from the Bluetooth list.


NOTES:

- You hear the "Connected" voice prompt and Pairing tone plays when the devices successfully paired.

Motorola Solutions will not be responsible in any way for problems or damage caused by any ancillary equipment or peripherals (specific examples include, but are not limited to: batteries, chargers, adapters, and power supplies) not furnished or manufactured by Motorola Solutions, which is attached to or used in connection with the Product. When the Product is used in conjunction with ancillary or peripheral equipment not supplied by Motorola Solutions, Motorola Solutions does not warrant the operation of the Product/peripheral combination and Motorola Solutions will not honor any warranty claim where the Product is used in such a combination and it is determined by Motorola Solutions that there is no fault with the Product. Upon open or dismantle the Product, warranty is immediately voided. Motorola Solutions specifically disclaim any responsibility for any damage in any way caused by improper installation by unauthorized personnel.

NOTES

- Align the NFC tag from the WM800 RSM and the M logo at the back of the radio together until you hear the beep tone (successful detection).

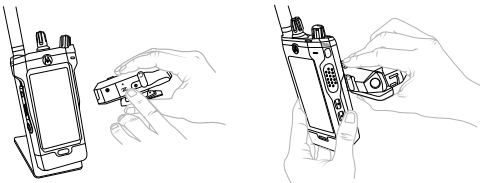

- Observe the following in the radio and WM800 for a successful pairing:
 - The WM800 has short beeps until devices are successfully paired.
 - You hear the "Connected" voice prompt (if Language is selected).
 - The Audio or Bluetooth LED blinks blue after a successful connection.
- If pairing is unsuccessful, the WM800 returns to pairing mode.

NOTE: The WM800 RSM pairing mode times out in two minutes.


Unpairing Your WM800 RSM

- While WM800 RSM is power off, press and hold the Power button and PTT button. The blue LED blinks and a "Pairing Cleared" voice prompt from the WM800 RSM indicates that the paired device is deleted from the paired device list.

NOTES:

- Depending on the radio codeplug configuration and ways to pair the devices, the WM800 RSM paired device list is cleared when the WM800 RSM is turned off.
- Refer to the radio user manual for more details on the pairing programmable options.
- Always unpair the WM800 from the Bluetooth host and ensure that the paired device is removed from the paired device list before starting another pairing process.

Attaching Secondary Audio Accessory

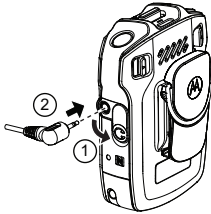

Warranty

Motorola Solutions offers warranty for your RSM. Refer to your Motorola Solutions dealer or point-of-purchase for detailed information.

NOTE: Warranty is void after customer replacement of any parts other than replacement parts listed.

Warranty Exclusion

Motorola Solutions does not warrant the installation, maintenance or service of the Product, accessories, batteries, or parts.