



MCHOSE G75 HANDY GUIDE

- MODE SWITCH:
- 1. indicates 2.4GHz mode.
 - 2. indicates USB wired mode.
 - 3. indicates wireless mode.

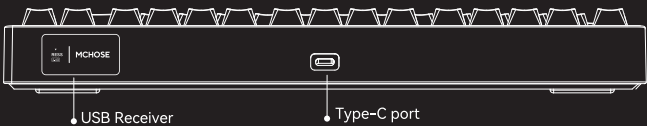

 
· SYSTEM MODE SWITCH

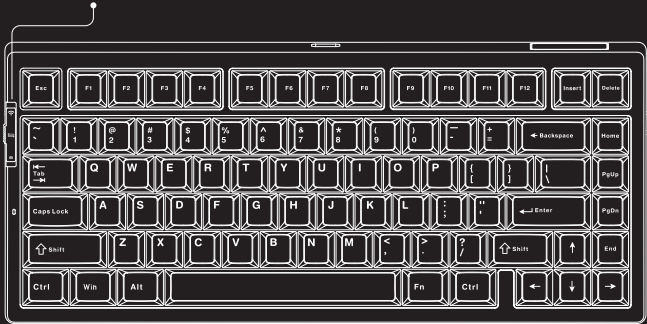

· BACKLIGHT SETTING



· CHARGING



By connecting the keyboard to the computer with the provided USB cable, the keyboard will charge. During the charging process, the **[ESC]** key light remains lit. Once fully charged, the keyboard will be in normal light effect. Please charge the keyboard in time when **[ESC]** key flash red.

 
For more details, please refer to user manual.
Switch replacement tutorial, please visit : <https://youtu.be/1cp30THpHM>

· WIRELESS CONNECTION




- ① Switch the toggle to **[B]** to enter the wireless mode.

Note: Wireless1, Wireless 2, Wireless 3 are the same connection method. The combination key of wireless channel 2 is **[FN+2@]** .The combination key of wireless channel 3 is **[FN+3#]** .



 - ② Press the combination key **[Fn+ 1!]** and hold for about 3 seconds until the bottom indicator light flashes quickly to activate wireless pairing.




- ③ Search for the wireless device name **[MCHOSE G75]** on your device, and click to connect, the wireless indicator light will go back to normal after successful pairing.

· 2.4GHZ CONNECTION



 - ① Switch the toggle to **[2.4G]** to enter the 2.4GHz mode.



- ② Open the nameplate cover from the lower right corner of the keyboard and take out the USB dongle from the dongle slot.



- ③ Insert the USB dongle into the USB port on your computer. The keyboard is now ready for use.

· WIRED CONNECTION



- ① Switch the toggle to **[Wired]** to enter the wired mode.



- ② Connect the cable to Type-C port of the keyboard, Connect the cable to the USB port of the computer. The keyboard is ready to use.