



Figure: your machine may look different than the one shown.

S8 (NAB)

Instructions for Use



For your safety: read and understand manual before use.

en

es

fr

Your S8

1	IMPORTANT SAFEGUARDS	4
2	Control elements	8
3	Preparing and using for the first time	10
	Setting up the machine	10
	Filling the bean container	10
	Determining the water hardness	10
	First-time use	11
	Managing your S8 – the JURA Cockpit	12
	Connecting milk	12
	Establishing a WiFi connection	13
4	Preparation	13
	Preparation with preselection (Specialty Selection)	14
	Espresso and coffee	14
	Sweet latte (prepared with syrup attachment)	15
	Latte macchiato, cappuccino and other specialty coffees with milk	15
	Milk and milk foam	16
	Americano and lungo	16
	Espresso doppio	16
	Ground coffee	16
	Hot water	17
	Adjusting the product settings	17
5	Daily operation	18
	Switching the machine on and off	18
	Filling the water tank	18
	Maintenance actions	19
6	Machine settings	20
7	Maintenance	21
	Rinsing the machine	21
	Rinsing the milk system	21
	Cleaning the milk system	22
	Dismantling and rinsing the professional fine foam frother	23
	Inserting/changing the filter	24
	Cleaning the machine	25
	Descaling the machine	26
	Descaling the water tank	27
	Cleaning the bean container	27

8	Display messages	28
9	Troubleshooting	29
10	Transport and environmentally friendly disposal	30
	Transport / Emptying the system	30
	Disposal	30
11	Technical data	31
12	Index	32
13	JURA contact details / Legal information	34

1 IMPORTANT SAFEGUARDS

Comply with the instructions for use

Failure to observe the instructions for use may result in serious injuries or damage to property. Safety information is therefore indicated as follows:



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

DANGER

DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.

WARNING

WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION

CAUTION, used with the safety alert symbol, indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

NOTICE

NOTICE is used to address practices not related to personal injury.

Follow the basic safety precautions

When using electrical appliances, basic safety precautions shall always be followed, to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.

- To protect against fire, electric shock and injury to persons, do not immerse power cord, plugs, or body of machine in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- The use of an accessory attachment not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- To disconnect, turn any control to 'OFF' then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Use extreme caution when dispensing hot steam, hot water or hot coffee.

SAVE THESE INSTRUCTIONS. Pass them on to any subsequent user.

Intended use

The appliance is designed and intended for household use only. It shall only be used for coffee preparation and to heat milk and water, according to these instructions. Use for any other purpose will be deemed improper.

JURA Elektroapparate AG cannot accept any responsibility for the consequences of improper use.

People, including children, who

- do not have the physical, sensory or mental capabilities to use the appliance safely or
- are inexperienced or lack knowledge in how to use the appliance safely

must be supervised by a responsible person when using it, or must be instructed in how to use it correctly.

Special power cord set instructions

- A short power-supply cord is to be provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
- The cord shall be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.
- This appliance has a 3-pin grounded plug.
- Do not modify the plug in any way. Extension cords are available and may be used if care is exercised in their use.

If the user chooses to use an extension cord,

- the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and
- if the appliance is of the grounded type, the extension cord should be a grounding type 3-wire cord, and
- the longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.



⚠ WARNING

To reduce the risk of fire or electric shock, DO NOT remove any service covers. DO NOT modify the appliance in any way that is not described in these instructions. NO user serviceable parts included. Repair MUST be done by authorized personnel only.

In the event of signs of damage, for example if there is a smell of burning, unplug the machine immediately from outlet and contact JURA customer service.

⚠ CAUTION

This appliance is for household use. Any servicing other than cleaning and user maintenance shall be performed by an authorized service representative:

- Do not immerse base in water or try to disassemble.
- Do not put the appliance or any individual parts in the dishwasher.
- Check voltage to be sure that the voltage indicated on the name plate complies with your voltage. The name plate is located on the underside of the appliance.
- Never use warm or hot water to fill the water container. Use cold water only.
- Keep your hands and the cord away from hot parts of the appliance during operation.

There is a risk of scalds or burns on the spouts and the cappuccino frother / nozzle.

- Keep children away.
- Do not touch any hot parts. Use the handles or knobs provided.
- Ensure that the cappuccino frother / nozzle is correctly fitted and clean. If incorrectly fitted or if they become blocked, the cappuccino frother or its parts might come off.

en

es

fr

1 IMPORTANT SAFEGUARDS

NOTICE

- Never clean with scouring powders or hard implements.
- Ensure that the ventilation slots are not covered.



- Never do anything with the machine which is not described in these instructions. In case of doubt, call your dealer.

- Never pull out the drip tray during the brewing process. Only pull the drip tray when the display instructs you or when the appliance is ready for use.

NEVER DO (or you will void your warranty protection):

- Never fill instant coffee, chocolate mix etc. into the bean container or ground coffee funnel (filler funnel for ground coffee). It will damage the functioning of the brewing chamber.
- Never fill sugar coated coffee beans into the bean container. In case of doubt, call your dealer.
- Never fill anything other than coffee beans into the bean container (no chocolate, no rice, no nuts, no spices, nothing other than roasted coffee beans).
- Never fill frozen beans into the bean container. If you store beans in the freezer, let them thaw 3 to 4 hours before filling them into the bean container.
- Never fill anything but fresh, cold and clean water into the water tank, except when decalcifying.
- Never use mineral or carbonated water. You can use tap water, bottled water, spring water and reverse osmosis water.

—

en

es

fr

2 Control elements




- 1 On/Off button 
- 2 Bean container with aroma preservation cover
- 3 Touch display
- 4 Milk system with professional fine foam frother (height-adjustable)
- 5 Height-adjustable coffee spout
- 6 Hot-water spout
- 7 Cup platform with aperture
- 8 Insert for drip tray
- 9 Drip tray
- 10 Coffee grounds container
- 11 Power cord (permanently connected or plug-in) (back of the machine)
- 12 Water tank
- 13 Water tank cover
- 14 Service socket with JURA Wi-Fi Connect (under cover)
- 15 Filler funnel cover
- 16 Filler funnel for ground coffee (removable)
- 17 Grinder adjustment switch
- 18 Container for milk system cleaning
- 19 Measuring spoon for ground coffee
- 20 Syrup attachment



3 Preparing and using for the first time

Setting up the machine

- Choose a spot for your S8 which protects the machine against overheating. Ensure that the ventilation slots are not covered.

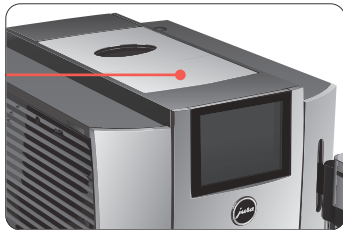

- Place the S8 on a horizontal surface that is not sensitive to water.

Filling the bean container

The aroma preservation cover on the bean container ensures that the aroma of the beans is retained for longer.

CAUTION


Coffee beans which have been treated with additives (e.g. sugar), ground coffee or freeze-dried coffee will damage the grinder.

- Only use roasted, untreated coffee beans to fill the bean container.
- Remove the aroma preservation cover.
- Fill the bean container with coffee beans and close the aroma preservation cover.

Determining the water hardness

When you use the machine for the first time, you must set the water hardness. If you know the hardness of your water, go straight to the next section. If you do not know the water hardness, you can find this out first:

- Hold the Aquadur® test strip supplied under running water for one second. Shake off the water.
- Wait for about 1 minute.
- You will then be able to read the degree of water hardness from the discoloration of the Aquadur® test strip and the description on the packaging.

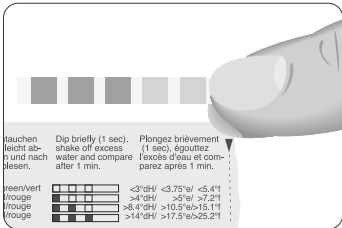

Level	Display German Degree (°dH)	Degrees of general hardness (°dGH)	Parts per million (ppm)	Indicator Strip number of 'reddish' fields
Not active	–	–	–	–
Very soft water	<3	<3	< 53.4	None
Soft water	> 4	> 4	> 71	1
Hard water	> 8.4	> 8.4	> 150	2
Very hard water	> 14	> 14	> 250	3

First-time use

WARNING

If the machine is operated with a defective power cord, there is a danger of potentially fatal electric shock.

- ▶ Never use a machine which is damaged.
- ▶ Never use a machine which has a defective power cord.

NOTICE

Milk, sparkling mineral water or other liquids can damage the water tank or the machine.

- ▶ Only fill the water tank with fresh, cold water.

Precondition: the bean container has been filled.

- ▶ For machines with a **plug-in** power cord: connect the power cord to the machine.
- ▶ Insert the power plug into a power socket.
- ▶ Press the On/Off button  to switch the S8 on.

'Choose language' / 'English'

- i** To display more languages, touch **< or >** until the desired language comes into focus (e.g. **'English'**).

- ▶ Touch **'Save'**.
'Saved' appears briefly on the display.
'Water hardness'

- i** Please refer to the section above for a description of how to determine the water hardness.

- ▶ Touch **< or >** to change the water hardness setting.
- ▶ Touch **'Save'**.
'Saved' appears briefly on the display.
'Insert filter'


- ▶ Place a receptacle under the coffee spout.



- ▶ Remove the water tank and rinse it with cold water.
- ▶ Fit the filter cartridge extension supplied on top of the CLEARYL Smart+ filter cartridge.



- ▶ Insert the filter cartridge with its extension into the water tank.
- ▶ Turn the filter cartridge clockwise until it audibly clicks into place.

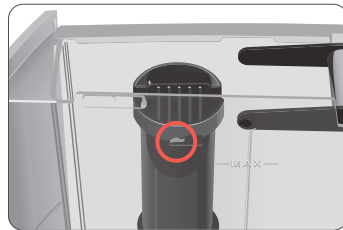

- ▶ Fill the water tank with fresh, cold water and reinsert the tank.

- i** The machine automatically detects that you have just inserted the filter cartridge.

'Filter is being rinsed', water flows directly into the drip tray.
'System is filling'
'Empty drip tray'

en

es

fr

3 Preparing and using for the first time

- ▶ Empty the drip tray and put it back into the machine.



'Accessory'


- i** You have the option of connecting the S8 to the JURA Cool Control milk cooler (wireless connection). To do this, touch **'Connect'** and follow the instructions on the display.
- ▶ Touch **'Next'**.
- 'Wi-Fi connection'**
- ▶ If necessary, scan the QR code with your mobile device to download the JURA app (J.O.E.®).



- i** If you would like to connect the S8 to your home network, touch **'Connect'** and follow the instructions on the display. You can also establish the connection later on (in the machine settings under **'Wi-Fi connection'**).
 - ▶ Place one receptacle under the coffee spout and another under the fine foam frother.
 - ▶ Touch **'Next'**.
 - 'Machine is rinsing' / 'Milk system is being rinsed'**
- The start screen is displayed. Your S8 is ready for use.

Managing your S8 – the JURA Cockpit

The **JURA Cockpit** allows you to manage your S8. To go to the JURA Cockpit, swipe your finger across the start screen from bottom to top.

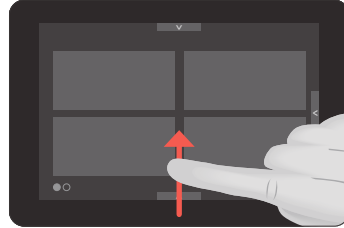


Symbol	Meaning
	'Maintenance' area (blue)
	'Machine settings' area (green)
 (white)	Your S8 is connected with the network and/or Cool Control via JURA Wi-Fi Connect.
 (red)	No connection to the WiFi network
	Filter mode

Connecting milk

Your S8 creates fine, creamy, feather-light milk foam with a perfect consistency. The most important requirement for frothing milk is a milk temperature of 39–46 °F (4–8 °C). We would therefore recommend using a milk cooler or a milk container.

- ▶ Remove the protective cover from the professional fine foam frother.
- ▶ Connect the milk pipe to the professional fine foam frother.

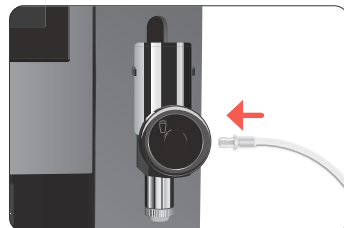

i The milk system of your S8 has a connector **HP3** and an interchangeable milk spout **CX3**.

- ▶ Connect the other end of the milk pipe to a milk container or a milk cooler.

Establishing a WiFi connection

Your S8 can be connected with your JURA app (J.O.E.®).

Precondition: J.O.E.® is installed on your mobile device. The JURA Wi-Fi Connect is inserted into the service socket of your S8.

- ▶ To go to the JURA Cockpit, swipe your finger across the start screen from bottom to top.
- ▶ Touch the 'Machine setting'  symbol.
- ▶ Touch 'Wi-Fi connection'.
- ▶ Touch 'Connect'.
- ▶ Add a new network in your JURA app (J.O.E.®) and follow the instructions.

4 Preparation

WARNING

Hot coffee, hot steam and hot water can cause scalding. Scalding is a serious burn.

- ▶ Use extreme care when handling hot liquid or steam.
- ▶ Allow liquid to cool down before drinking.
- ▶ In the event of scalding, rinse affected area with cold water and seek medical attention.
- ▶ Keep children AWAY.

Basic information about preparing drinks:

Aim	What to do
Display more products	Touch   to display additional pages of the start screen or swipe across the start screen from right to left to open the product selector view
Change the coffee strength of a single product	While the grinder is operating, swipe across the display with your finger
Change the amount for a single product	During preparation, swipe across the display with your finger
Change the amount, coffee strength and temperature for any given product	Tap and hold a product for around 2 seconds and configure the settings under 'Product settings'
Setting the consistency of grind	Turn the grinder adjustment switch to the desired position
Stop preparation	Touch 'Cancel'

en

es


fr

Aim	What to do
Place a product on the start screen as a favorite or reposition a product	Tap and hold a product for around 2 seconds and under 'Product position' select 'Replace product' or 'Change position'

- i** If the screensaver is active, touch the display to return to the start screen.
- i** Coffee tastes best served hot. A cold porcelain cup cools the beverage – and impairs the taste. We therefore recommend prewarming the cups. You can purchase a JURA cup warmer from your specialized dealer.

Preparation with preselection (Specialty Selection)

Swipe across the display from top to bottom to open the Specialty Selection.

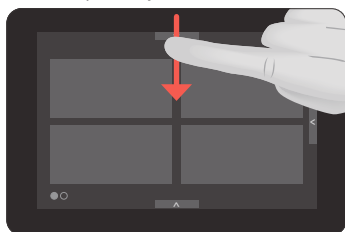

Now choose the desired preselection for the product:

Specialty Selection	Meaning
 – 'Extra Shot' (cappuccino, latte macchiato, flat white, Sweet Latte)	The product is prepared with two brewing operations, with half the amount of water – for a specialty coffee with a particularly intense taste.

Specialty Selection	Meaning
 – Double product (espresso, coffee)	The product is prepared with two brewing operations (two strokes).
 – Ground coffee (all specialty coffees except for espresso doppio)	The product is prepared with ground coffee.
'S' – 'Sweet milk foam' (all specialities with milk)	Use the syrup attachment provided to prepare the product with sweet milk foam.

- i** The Specialty Selection closes after 10 seconds.
- i** If you press your preselection **briefly**, the next product will be prepared according to your preselection.
- i** If you press and **hold** your preselection (for 2 seconds), the preselection will be active until you switch off your S8.

Espresso and coffee

Example: coffee

- Place a cup under the coffee spout.



- Touch **'Coffee'**.
The preset amount of water for coffee flows into the cup.

Sweet Latte (prepared with syrup attachment)

The Sweet Latte is a specialty coffee with sweet milk foam. To make this specialty, use the syrup attachment provided.


- i** All specialties with milk can also be prepared with **sweet milk foam**. To do this, use the syrup attachment provided and before starting preparation, select the Specialty Selection **'S'**.

Precondition: milk is connected to the professional fine foam frother.


- ▶ Remove the cover from the syrup attachment.



- ▶ Fill the syrup attachment with syrup. Fill it to the first, second or third mark depending on the desired sweetness.
- ▶ Close the syrup attachment.
- ▶ Touch **'Sweet Latte'**.
'Please connect the syrup attachment, ensuring it is filled with syrup'
- ▶ Remove the lower part of the professional fine foam frother.

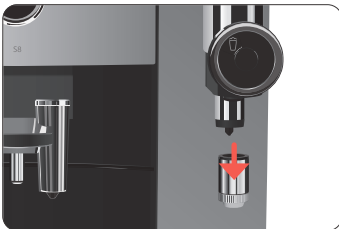

- ▶ Connect the syrup attachment to the professional fine foam frother.

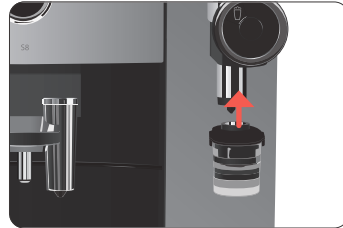

- ▶ Turn the setting wheel of the professional fine foam frother to the 'Milk Foam' position.
- ▶ Place a cup under the fine foam frother.
- ▶ Touch **'Next'**.

The preset amounts of coffee and milk foam flow into the cup.

'Please remove the syrup attachment for cleaning and connect the fine foam frother.'

- ▶ Remove the syrup attachment and rinse it thoroughly under running water.
- ▶ Touch **'Next'**.

- i** **8 minutes** after preparation, the milk system is **automatically** rinsed. Therefore always place a receptacle under the fine foam frother after preparing milk.

To ensure that the professional fine foam frother always works properly, you must clean it **daily** when you have been preparing milk (see chapter 7 'Maintenance – Cleaning the milk system').

Latte macchiato, cappuccino and other specialty coffees with milk

Your S8 prepares the following specialty coffees with milk at the touch of a button:

- Cappuccino
- Flat white
- Latte macchiato
- Cortado
- Macchiato

4 Preparation

Example: latte macchiato

Precondition: milk is connected to the fine foam frother.

- ▶ Place a glass under the Professional fine foam frother.



- ▶ Turn the setting wheel of the Professional fine foam frother to the 'Milk Foam' position.
- ▶ Touch 'Latte macchiato' (page ○ ●).
The preset amount of milk foam flows into the glass.

i There is a short interval while the hot milk separates from the milk foam. This allows the typical layers of a latte macchiato to form.

The preset amount of water for espresso flows into the glass.

i **8 minutes** after preparation, the milk system is **automatically** rinsed. Therefore always place a receptacle under the fine foam frother after preparing milk.

To ensure that the fine foam frother always works properly, you must clean it **daily** when you have been preparing milk (see chapter 7 'Maintenance – Cleaning the milk system').

Milk and milk foam

Your S8 prepares hot milk and milk foam. To do this, turn the setting wheel of the Professional fine foam frother to the 'Milk Foam' or 'Milk' position.

i **8 minutes** after preparation, the milk system is **automatically** rinsed. Therefore

always place a receptacle under the fine foam frother after preparing milk.

Americano and lungo

For the americano and lungo, the S8 blends the coffee with hot water using a special preparation method. This results in a full-bodied specialty coffee which is particularly easy to digest. You can change the amount of this additional water (see chapter 4 'Preparation – Adjusting the product settings').

Espresso doppio

'Doppio' is Italian for 'double'. When you select espresso doppio, two espressi are prepared one after the other. The result is an extra full-bodied and aromatic specialty coffee.

Ground coffee


You can choose to use a second coffee variety, for example decaffeinated coffee, with the filter funnel for ground coffee.

- Never add more than two level measuring spoons of ground coffee.
- Use ground coffee which is not ground too finely. Very fine coffee can block up the system so that the coffee only comes out in drips.
- If you did not fill the machine with a sufficient amount of ground coffee, 'Not enough ground coffee' is displayed and the S8 stops the operation.
- The desired specialty coffee must be prepared within approximately one minute after filling with the ground coffee. Otherwise the S8 stops the operation and is once more ready for use.

Example: espresso with ground coffee

- ▶ Place an espresso cup under the coffee spout.

- ▶ Swipe across the display from top to bottom to open the Specialty Selection.

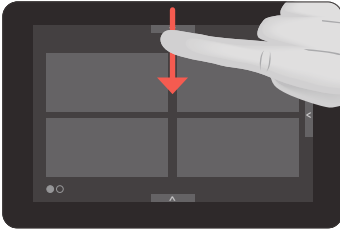

- ▶ Touch .
- ▶ Touch 'Espresso'.
- ▶ 'Please add ground coffee'
- ▶ Open the cover of the filler funnel for ground coffee.



- ▶ Add the desired amount of ground coffee to the filler funnel (max. 2 level measuring spoons).

i The amount of ground coffee determines the intensity and aroma of the beverage, so you can adjust it to your personal preferences.

- ▶ Close the cover of the filler funnel.
 - ▶ Touch 'Next'.
- The preset amount of water for espresso flows into the cup.

Hot water

CAUTION

There is a danger of scalding from hot water splashes.

- ▶ Avoid direct contact with the skin.

- ▶ Place a cup under the hot-water spout.



- ▶ Swipe across the display from right to left to open the product selector view.
 - ▶ Go to position 14/14.
 - ▶ Touch the picture of the hot water to start preparation.
- The preset amount of water flows into the cup.

Adjusting the product settings

Touch a product for **approximately 2 seconds** to access the settings:

- 'Product settings': specify individual settings such as coffee strength, amount of water, etc.
- 'Product name': change the name of the product.
- 'Permanent preselection': specify a permanent preselection (Specialty Selection).
- 'Product position': position a product on the start screen as a favorite ('Replace product') or move it to a different position ('Change position').

Example: proceed as follows to change the coffee strength for one coffee.

- ▶ Touch 'Coffee' for **approximately 2 seconds**.
- ▶ Touch 'Product settings'.

i Depending on the selected product, there will be different settings available which are represented by symbols on your display.

5 Daily operation

- ▶ Touch the  symbol.
The  symbol appears in white.
- ▶ Swipe across the coffee beans with your finger to change the coffee strength setting.
- ▶ Touch 'Save'.
- ▶ Touch 'Back' to return to the start screen.

5 Daily operation

Switching the machine on and off

- ▶ Place one receptacle under the coffee spout and another under the fine foam frother.



- ▶ Press the On/Off button .
 - ▶ 'Machine is rinsing'
 - ▶ Your S8 is switched on or off.
- i** When the machine is switched off, the system is only rinsed if a specialty coffee has been prepared.
- i** If milk has been prepared before switching off, you will be prompted to carry out milk system cleaning ('Clean the milk system'). After 30 seconds the switch-off process continues automatically.

Filling the water tank

Daily maintenance of the machine and hygiene when handling milk, coffee and water are key to a perfect coffee result in the cup every time. You should therefore change the water **daily**.

CAUTION

Milk, sparkling mineral water or other liquids can damage the water tank or the machine.

- ▶ Only fill the water tank with fresh, cold water.
- ▶ Remove the water tank and rinse it with cold water.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.

Maintenance actions

Optimal coffee quality depends on many factors. One important prerequisite is regular maintenance of your S8. Carry out the following steps:

Maintenance action	Daily	If necessary	Note
Empty the drip tray and coffee grounds container and rinse with warm water. (The insert for the drip tray, including the drip tray itself, and the coffee grounds container are dishwasher-safe)	▪		Always empty the coffee grounds container when the machine is switched on. This is the only way of resetting the coffee grounds counter.
Clean the milk system (if heavily soiled, also dismantle and rinse it)		▪	See chapter 7 'Maintenance – Cleaning the milk system'. We recommend that you dismantle and rinse the professional fine foam frother once a week (see chapter 7 'Maintenance – Dismantling and rinsing the professional fine foam frother').
Rinse the milk pipe	▪		
Rinse the water tank	▪		
Wipe the surface of the machine with a clean, soft, damp cloth (e.g. microfiber cloth)	▪		
Changing milk pipe with connector HP3		approx. every 3 months	
Change the interchangeable milk spout CX3		approx. every 3 months	
Clean the inside of the water tank with a brush		▪	
Clean the top and bottom of the cup platform		▪	
Thoroughly clean the drip tray and coffee grounds container		▪	

i You will find more information about the maintenance of your S8 in the 'Maintenance'  area in the program item 'Maintenance information'.


en

es

fr

6 Machine settings

To go to the JURA Cockpit, swipe across the start screen from bottom to top.

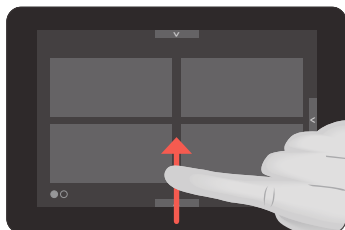

In the ‘Machine settings’ area , you can save the following settings:

Program item	Explanation
Page ‘1/2’	
‘Product name’	Display product images with/without product names on the start screen
‘Number of start screens’	Define number of start screens (1–5)
‘Wi-Fi connection’	Wirelessly connect the S8 to the JURA app (J.O.E.®) or disconnect again (see chapter 3 ‘Preparing and using for the first time – Establishing a WiFi connection’)
‘Switch off after’	Set the automatic switch-off time to save energy (switch-off after 15 minutes, 30 minutes or 1 – 9 hours after the last action on the machine)
‘Choose language’	Set language
‘Factory setting’	Reset your S8 to factory settings (the machine then switches off)
‘Water hardness’	Set the hardness of the water used (1 °dH to 30 °dH) to prevent limescale building up in your machine
‘Units’	Set the unit for the amount of water (ml or oz)
Page ‘2/2’	
‘Accessory’	Establish a wireless connection between your S8 and the Cool Control milk cooler or disconnect it again
‘Display’	Change display brightness (in 10% increments)
‘Product counter’	View product counter
‘Maintenance counter’	View the maintenance counter
‘Operating instructions’	Show instructions for using the syrup attachment and professional fine foam frother and switching between milk and milk foam
‘Rinse the milk system’	Set whether milk system rinsing takes place automatically or needs to be started manually
‘Empty system’	Empty the system to protect the S8 from frost damage during transport
‘Information’	View software version

7 Maintenance

⚠ WARNING

Use of maintenance products that are harmful to health and discharge of liquids during maintenance program. Harmful if swallowed. Irritating to eyes and skin.

- ▶ Keep children AWAY.
- ▶ Keep children away from the machine while it is performing a maintenance program.
- ▶ Avoid contact with skin and eyes.
- ▶ Avoid generation of dust. Do not inhale dust.
- ▶ When using do not eat or drink.
- ▶ Keep maintenance products away from food, drink and animal food.
- ▶ Keep container tightly closed and dry. Keep in a cool place.

Basic information about maintenance:

- To go to the JURA Cockpit, swipe across the start screen from bottom to top. This area consists of a 'Maintenance status'  section and a 'Machine setting'  section. You can manage the maintenance of your S8 in the  section.
- The Cockpit shows maintenance programs that need to be carried out in the form of messages with red backgrounds. Touch a message to go straight to the corresponding maintenance program. Maintenance programs that are due imminently are indicated on your S8 by means of a bar display within the message.
- Carry out each maintenance program when you are prompted to do so.

Rinsing the machine


You can start coffee system rinsing manually at any time.

Precondition: the start screen is displayed.

- ▶ Place one receptacle under the coffee spout and another under the fine foam frother.



- ▶ To go to the JURA Cockpit, swipe across the start screen from bottom to top.

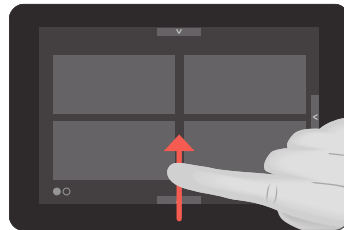

- ▶ Touch the 'Maintenance' symbol .
- ▶ Touch 'Rinse the coffee system' to start the rinse operation.

'Machine is rinsing'

The rinse stops automatically. The start screen is displayed.

Rinsing the milk system

After each milk preparation, the S8 prompts you to perform a milk system rinse.

In the machine settings you can define whether milk system rinsing takes place automatically or needs to be started manually (see chapter 6 'Machine settings').


Precondition: the start screen is displayed.

7 Maintenance

- ▶ Place a receptacle under the professional fine foam frother.



- ▶ To go to the JURA Cockpit, swipe across the start screen from bottom to top.

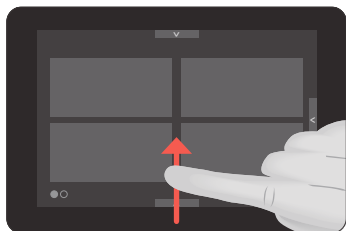

- ▶ Touch the 'Maintenance' symbol .
- ▶ Touch 'Rinse the milk system' to start the rinse operation.

'Milk system is being rinsed'

The rinse stops automatically. The start screen is displayed.

Cleaning the milk system

To ensure that the milk system always works properly, you must clean it **daily** when you have been preparing milk.

WARNING

Non-recommended cleaning agents will not optimally remove milk residues. This may cause the cappuccino frother to become blocked and fly off the machine. Discharge of hot steam.

- ▶ Use only original JURA milk system cleaner.

WARNING

Harmful and irritating cleaning agent. Harmful if swallowed. Irritating to eyes and skin.


- ▶ Keep children AWAY.
- ▶ Avoid contact with skin and eyes.
- ▶ After contact with skin, wash immediately with plenty of water. In case of skin irritation, seek medical advice.
- ▶ After eye contact, immediately flush eyes with plenty of water and seek medical advice.
- ▶ If swallowed, rinse mouth immediately and drink large quantities of water. Do not induce vomiting. Seek medical advice immediately and show label.

 JURA milk system cleaner is available from specialized dealers.

 Use the container supplied for milk system cleaning.

Precondition: the start screen is displayed. 'Clean the milk system' is displayed in the Cockpit.

- ▶ To go to the JURA Cockpit, swipe across the start screen from bottom to top.

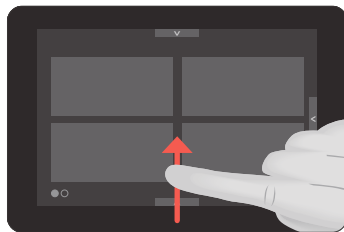


- ▶ Touch 'Clean the milk system'.
- ▶ Touch 'Next'.
- ▶ 'Cleaning agent for milk system' / 'Connect the milk tube' / 'Milk Foam position'
- ▶ Remove the milk pipe from the milk container or milk cooler.


- ▶ Pour one dosing unit of milk system cleaner into the container for milk system cleaning.



- ▶ Place the container under the coffee spout and the professional fine foam frother.
- ▶ Push the professional fine foam frother down as far as it will go to connect it firmly to the container.

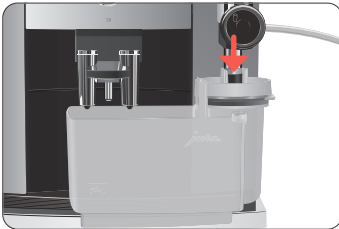

- ▶ Connect the milk pipe to the container.

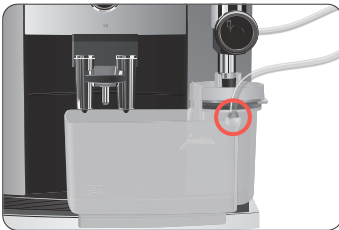


- i** To connect the milk pipe to the container correctly, the pipe must be fitted with a connector HP3.
- ▶ Turn the setting wheel of the Professional fine foam frother to the 'Milk Foam' position.
- ▶ Touch 'Start'.
The Professional fine foam frother and the milk pipe are cleaned.
The operation stops automatically.


Dismantling and rinsing the professional fine foam frother

If insufficient foam is produced when the milk is frothed or milk sprays out of the professional fine foam frother, the frother may be dirty. If this happens, dismantle and rinse the professional fine foam frother.

- ▶ Remove the milk pipe and rinse it thoroughly under running water.
- ▶ Remove the professional fine foam frother.

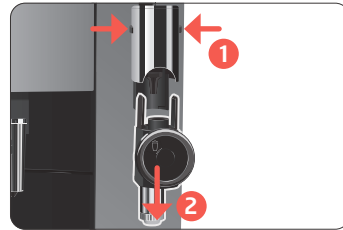


- ▶ Dismantle the fine foam frother into its individual parts.

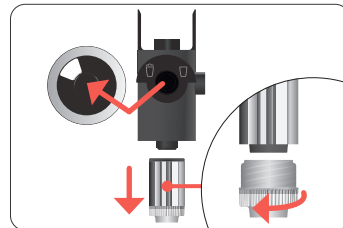

- ▶ Rinse all the parts under running water. If there are severely dried-on milk residues, firstly immerse the individual parts in a solution of 8.5 oz (250 ml) water and one dosing unit of JURA milk system cleaner. Then rinse the individual parts thoroughly.


7 Maintenance

- ▶ Re-assemble the professional fine foam frother.

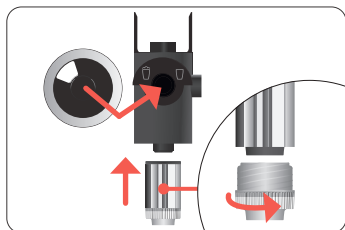

- i** Ensure that all individual parts are correctly and firmly connected to ensure optimum operation of the professional fine foam frother.

- ▶ Re-fit the professional fine foam frother on the milk system.

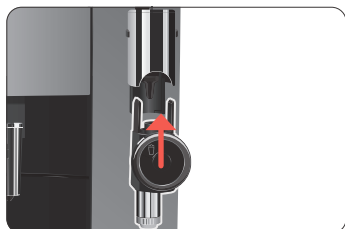

Inserting/changing the filter

Once the filter cartridge stops working (depending on the water hardness setting), the S8 will prompt you to change the filter.

- i** Your S8 no longer has to be descaled if you are using the CLEARYL Smart+ filter cartridge.
- i** CLEARYL Smart+ filter cartridges are available from specialized dealers.

Precondition: the start screen is displayed. (Alternatively, 'Change the filter' is displayed in the Cockpit if the filter's capacity has been exhausted.)

- ▶ Remove and empty the water tank.
- ▶ Turn the filter cartridge anticlockwise and remove it along with the extension from the water tank.
- ▶ Remove the old CLEARYL Smart+ filter cartridge.
- ▶ Fit the filter cartridge extension on top of a **new** CLEARYL Smart+ filter cartridge.



- ▶ Insert the filter cartridge with its extension into the water tank.
- ▶ Turn the filter cartridge clockwise until it audibly clicks into place.



- ▶ Fill the water tank with fresh, cold water and reinsert the tank.
The machine automatically detects that you have just inserted/changed the filter cartridge.
'Filter is being rinsed', water flows directly into the drip tray.
'Empty drip tray' / 'Empty coffee grounds container'
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
The start screen is displayed.

Cleaning the machine

After 180 preparations or 80 switch-on rinses, the S8 will prompt you to clean it.

WARNING

Non-recommended (e.g. liquid) cleaning agents may contain substances that could damage the machine or leave residues.

- ▶ Use only original JURA cleaning tablets. These are formulated especially for your machine.

WARNING

Harmful and irritating cleaning agent. Harmful if swallowed. Irritating to eyes and skin.


- ▶ Keep children AWAY.
- ▶ Avoid contact with skin and eyes.
- ▶ Avoid generation of dust. Do not inhale dust.
- ▶ After contact with skin, wash immediately with plenty of water. In case of skin irritation, seek medical advice.
- ▶ After eye contact, immediately flush eyes with plenty of water and seek medical advice.
- ▶ If swallowed, rinse mouth immediately and drink large quantities of water. Do not induce vomiting. Seek medical advice immediately and show label.

-  The cleaning program lasts approximately 20 minutes.
-  Do not interrupt the cleaning program. The quality of cleaning will be impaired if you do so.
-  JURA cleaning tablets are available from specialized dealers.

Precondition: 'Clean' is displayed in the Cockpit.

- ▶ Fill the water tank.

- ▶ To go to the JURA Cockpit, swipe across the start screen from bottom to top.

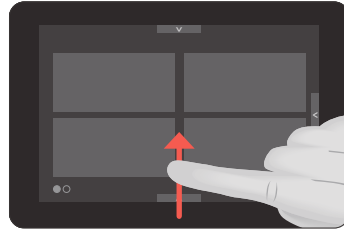

- ▶ Touch 'Clean'.
- ▶ Touch 'Start'.
- ▶ 'Empty coffee grounds container' / 'Empty drip tray'
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
- ▶ Place one receptacle under the coffee spout and another under the fine foam frother.



- ▶ Touch 'Next'.
- ▶ 'Machine is being cleaned'
- The operation is interrupted, 'Add cleaning tablet'.
- ▶ Open the cover of the filler funnel for ground coffee.
- ▶ Insert a JURA cleaning tablet into the filler funnel.



- ▶ Close the cover of the filler funnel.
- ▶ Touch 'Next'.
'Machine is being cleaned'
'Empty coffee grounds container' /
'Empty drip tray'
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.

Descaling the machine

The S8 builds up deposits of limescale over time and automatically prompts you to descale it when necessary. The degree of calcification depends on the hardness of your water.

- i** If you are using a CLEARYL Smart+ filter cartridge, you will not be prompted to descale.

⚠ WARNING

Non-recommended descaling agents (e.g. vinegar) may contain substances that could damage the machine or leave residues.

- ▶ Use only original JURA descaling tablets. These are formulated especially for your machine.

⚠ WARNING

Harmful and irritating descaling agent. Harmful if swallowed. Irritating to eyes and skin.

- ▶ Keep children AWAY.
- ▶ Avoid contact with skin and eyes.
- ▶ Avoid generation of dust. Do not inhale dust.
- ▶ After contact with skin, wash immediately with plenty of water. In case of skin irritation, seek medical advice.
- ▶ After eye contact, immediately flush eyes with plenty of water. Remove contact lenses. Seek medical advice.
- ▶ If swallowed, rinse mouth immediately and drink large quantities of water. Do not induce vomiting. Seek medical advice immediately and show label.

NOTICE


If the descaling operation is interrupted, there may be damage to the machine.

- ▶ Allow the descaling program to run to the end.

- i** The descaling program lasts approximately 20 minutes.
- i** JURA descaling tablets are available from specialized dealers.
- i** If the descaling agent comes into contact with sensitive surfaces (e.g. marble), damage cannot be ruled out. Clean up any splashes immediately.


Precondition: 'Descale' is displayed in the Cockpit.

- ▶ To go to the JURA Cockpit, swipe across the start screen from bottom to top.

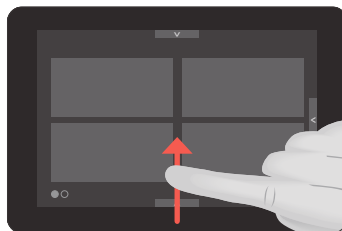

- ▶ Touch 'Descale'.
- ▶ Touch 'Start'.
'Empty drip tray' / 'Empty coffee grounds container'
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
'Pour descaling agent into water tank'
- ▶ Remove and empty the water tank.

- ▶ Completely dissolve 3 JURA descaling tablets in a receptacle holding 17 oz (500 ml) of water. This may take several minutes.

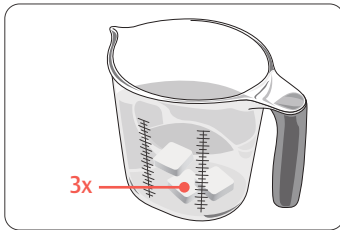

- ▶ Pour the solution into the **empty** water tank and insert it into the machine.
- ▶ Place one receptacle under the coffee spout and another under the fine foam frother.



- ▶ Touch 'Next'.
'Machine is being descaled', water flows repeatedly out of the hot-water spout and fine foam frother straight into the drip tray.
'Empty drip tray' / 'Empty coffee grounds container'
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
'Rinse the water tank' / 'Fill water tank'
- ▶ Empty the receptacles and place them back under the coffee spout and the fine foam frother.



- ▶ Remove the water tank and rinse it thoroughly.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.
- ▶ Touch 'Next'.

Water flows repeatedly out of the hot-water spout and fine foam frother straight into the drip tray.

'Empty drip tray' / 'Empty coffee grounds container'

- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.

i If the descaling operation stops unexpectedly, rinse the water tank thoroughly.

Descaling the water tank

Limescale deposits may form in the water tank. To ensure correct function of the machine, descale the water tank from time to time.

- ▶ Remove the water tank.
- ▶ If you use a CLEARYL Smart+ filter cartridge, remove this.
- ▶ Completely fill the water tank and dissolve 3 JURA descaling tablets in it.
- ▶ Leave the water tank with the descaling solution for several hours (e.g. overnight).
- ▶ Empty the water tank and rinse it thoroughly.
- ▶ If you use a CLEARYL Smart+ filter cartridge, insert this again.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.

Cleaning the bean container

Coffee beans may be covered with a slight oil film which remains on the walls of the bean container. These traces may negatively affect the coffee result. For this reason clean the bean container from time to time.

Precondition: 'Fill bean container' is displayed.

- Switch the machine off with the On/Off button .
- Remove the aroma preservation cover.
- Clean the bean container with a soft, dry cloth.
- Fill the bean container with coffee beans and close the aroma preservation cover.

8 Display messages

Messages on the start screen

Message	Cause/Result	Action
'Fill water tank'	The water tank is empty. You cannot prepare any products.	▸ Fill the water tank (see chapter 5 'Daily operation – Filling the water tank').
'Empty coffee grounds container' / 'Empty drip tray'	The coffee grounds container is full. / The drip tray is full. You cannot prepare any products.	▸ Empty the coffee grounds container and the drip tray (see chapter 5 'Daily operation – Maintenance actions').
'Drip tray not fitted'	The drip tray is not inserted correctly or is not inserted at all. You cannot prepare any products.	▸ Fit the drip tray.
'Fill bean container'	The bean container is empty. You cannot prepare any specialty coffees, but you can prepare hot water and milk.	▸ Fill the bean container (see chapter 3 'Preparing and using for the first time – Filling the bean container').
'Not enough ground coffee'	There is insufficient ground coffee in the machine; the S8 stops the operation.	▸ The next time you prepare a beverage, add more ground coffee (see chapter 4 'Preparation – Ground coffee').

Messages in the Cockpit

Message	Cause/Result	Action
The filter symbol  lights up red. 'Change the filter'	The filter cartridge no longer works.	▸ Replace the CLEARYL Smart+ filter cartridge (see chapter 7 'Maintenance – Inserting/ changing the filter').

Message	Cause/Result	Action
'Clean'	The S8 is prompting you to clean it.	▸ Perform cleaning (see chapter 7 'Maintenance – Cleaning the machine').
'Descale'	The S8 is prompting you to descale it.	▸ Perform descaling (see chapter 7 'Maintenance – Descaling the machine').
'Clean the milk system'	The S8 prompts you to clean the milk system.	▸ Perform milk system cleaning (see chapter 7 'Maintenance – Cleaning the milk system').

9 Troubleshooting

Problem	Cause/Result	Action
Insufficient foam is produced when the milk is frothed or milk sprays out of the fine foam frother.	The fine foam frother is dirty.	▸ Clean the fine foam frother (see chapter 7 'Maintenance – Cleaning the milk system'). ▸ Dismantle and rinse the fine foam frother (see chapter 7 'Maintenance – Dismantling and rinsing the professional fine foam frother').
Coffee only comes out in drips when it is being prepared.	The coffee is ground too finely and obstructs the system.	▸ Put the grinder on a coarser setting or use coarser ground coffee.
	The water hardness may not have been correctly set.	▸ Perform descaling (see chapter 7 'Maintenance – Descaling the machine').
There is dry ground coffee behind the coffee grounds container.	The beans used are resulting in an above-average volume of ground coffee.	▸ Reduce the coffee strength or choose a finer grinder setting (see chapter 4 'Preparation – Adjusting the product settings').
'Fill water tank' is not displayed although the water tank is empty.	There is a lot of limescale in the water tank.	▸ Descale the water tank (see chapter 7 'Maintenance – Descaling the water tank').
Grinder is making a very loud noise.	There are foreign objects in the grinder.	▸ Contact customer support in your country (see chapter 13 'JURA contact details / Legal information').
'Error 2' or 'Error 5' is displayed.	If the machine has been exposed to the cold for a long period of time, heating may be disabled for safety reasons.	▸ Warm the machine at room temperature.

Problem	Cause/Result	Action
Other 'Error' messages are displayed.	–	▶ Switch the S8 off with the On/Off button . Contact customer support in your country (see chapter 13 'JURA contact details / Legal information').

i If you were unable to solve the problem, contact customer support in your country (see chapter 13 'JURA contact details / Legal information').

10 Transport and environmentally friendly disposal

Transport / Emptying the system

Keep the packaging for your S8. It should be used to protect the machine during transport.


In order to protect the S8 from frost during transport, the system must be emptied.

Precondition: the start screen is displayed.

- ▶ Remove the milk pipe from the fine foam frother.
- ▶ Place a receptacle under the fine foam frother.



- ▶ To go to the JURA Cockpit, swipe across the start screen from bottom to top.

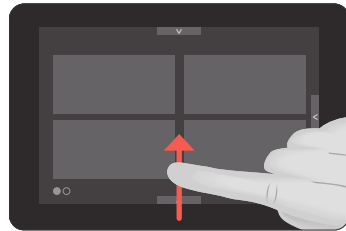

- ▶ Touch the 'Machine setting'  symbol.
 - ▶ Switch to the '2/2' page.
 - ▶ Touch 'Empty system'.
 - ▶ Remove and empty the water tank.
 - ▶ Touch 'Next'.
- Steam will continue to be discharged from the fine foam frother until the system is empty.
Your S8 is switched off.

Disposal

Please dispose of old machines in an environmentally neutral way.



11 Technical data

Voltage	120 V ~, 60 Hz
Power	1450 W
Conformity mark	
Pump pressure	static, max. 15 bar
Holding capacity of water tank (without filter)	64 oz (1.9 l)
Holding capacity of bean container	10 oz (280 g)
Holding capacity of coffee grounds container	max. 16 portions
Cord length	approx. 47 in. (1.2 m)
Weight	21.6 lb (9,8 kg)
Dimensions (W × H × D)	11 × 13.7 × 17.6 in. (28 × 34.8 × 44.6 cm)
Milk system with connector	HP3
CLEARYL Smart+ filter cartridge (RFID technology)	Frequency band 13.56 MHz Max. transmission power < 1 mW
JURA Wi-Fi Connect (Wi-Fi connection)	Frequency band 2.4 GHz Max. transmission power < 100 mW
JURA type	788

Directives

The machine complies with the following directives:

- Standard UL 1082
- Canadian Standard CSA C22.2 No. 64

FCC Rules

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules.

12 Index

A

- Addresses 34
- Adjusting the product settings 17
- Americano 16
- Aroma preservation cover
 - Bean container with aroma preservation cover 9

B

- Bean container
 - Bean container with aroma preservation cover 9
 - Cleaning 27
 - Filling 10
- Bus bar
 - Technical data 31
- Button
 - On/Off button 9

C

- Cappuccino 15
- Cleaning
 - Bean container 27
 - Machine 25
- CLEARYL Smart+ filter cartridge
 - Changing 24
 - Inserting 24
- Cockpit 12, 20, 21
- Coffee 14
- Coffee grounds container 9
- Coffee spout
 - Height-adjustable coffee spout 9
- Connecting an accessory 13
- Consistency of grind
 - Grinder adjustment switch 9
- Contact details 34
- Cover
 - Filler funnel for ground coffee 9
 - Water tank 9
- Cup platform 9
- Customer support 34

D

- Descaling
 - Machine 26
 - Water tank 27

- Display
 - Cockpit 12
 - Touch display 9
- Display messages 28
- Disposal 30
- Drip tray 9
 - Insert 9

E

- Emptying the system 30
- Errors
 - Troubleshooting 29
- Espresso 14
- Espresso doppio 16

F

- Filler funnel
 - Filler funnel for ground coffee 9
- Filling
 - Bean container 10
 - Water tank 18
- Filter
 - Changing 24
 - Inserting 24
- Fine foam frother
 - Professional fine foam frother 9
- First-time use 11
- Flat white 15

G

- Grinder adjustment switch 9
- Ground coffee 16
 - Measuring spoon for ground coffee 9

H

- Height-adjustable coffee spout 9
- Hotline 34
- Hot water 17
- Hot-water spout 9

I

- Important safeguards
 - Safety 4
- Insert for drip tray 9
- Instant coffee
 - Ground coffee 16

J

- JURA
 - Contact details 34

L

- Latte macchiato 15
- Lungo 16

M

- Machine
 - Cleaning 25
 - Descaling 26
 - Rinsing 21
 - Setting up 10
- Machine settings 20
- Maintenance 21
- Maintenance actions 19
- Measuring spoon for ground coffee 9
- Messages, display 28
- Milk 16
 - Connecting milk 12
- Milk foam 16
- Milk system 31
 - Clean 22
 - Professional fine foam frother 9
 - Rinsing 21
 - Syrup attachment 9, 15
- Milk system rinsing 21

P

- Power cord 9
- Preparation 13, 15
 - Americano 16
 - Cappuccino 15
 - Coffee 14
 - Espresso 14
 - Espresso doppio 16
 - Flat white 15
 - Ground coffee 16
 - Hot water 17
 - Latte macchiato 15
 - Lungo 16
 - Macchiato 15
 - Milk 16
 - Milk foam 16
 - Specialty Selection 14
 - Sweet latte 15
- Problems
 - Troubleshooting 29
- Product settings
 - Adjusting 17

- Professional fine foam frother 9
 - Dismantling and rinsing 23

R

- RFID 31
- Rinsing
 - Machine 21

S

- Safety
 - Important safeguards 4
- Service socket 9
- Setting up
 - Setting up the machine 10
- Specialty Selection
 - Extra Shot 14
 - Ground coffee 14
- Spout
 - Hot-water spout 9
- Sweet latte 15
- Switching off 18
- Switching on 18
- Syrup attachment 9, 15

T

- Technical data 31
 - Milk system 31
- Tel 34
- Touch display 9
- Transport 30
- Troubleshooting 29

U

- Use, First-time 11

W

- Water hardness
 - Determining the water hardness 10
- Water tank 9
 - Descaling 27
 - Filling 18
- Wi-Fi 31
- Wi-Fi Connect 9, 13
- Wi-Fi connection 13
- Wireless connection 13, 24, 31

en

es

fr

13 JURA contact details / Legal information

JURA Elektroapparate AG
Kaffeeweltstrasse 10
CH-4626 Niederbuchsiten
Switzerland

	USA: JURA Inc.	Canada: FAEMA
Customer Service		
Phone	1-800-220-5701	1-(855)-544-8600
E-Mail	info@us.jura.com	info@juracanada.ca
Opening Hours (EST)	Mon – Fri 8 am – 8 pm, Sat 9 am – 5 pm	
Distributor Address	20 Craig Road Montvale, NJ 07645	115 Matheson Boulevard East Mississauga, Ontario, L4Z 1X8
Phone	001 (201) 767-3999	1-(905)-501-8600
Fax	001 (201) 767-9684	
Internet	us.jura.com	ca.jura.com

i You will find additional contact details for your country at **jura.com**.

Technical changes

We reserve the right to make technical changes. The diagrams used in these instructions for use are for illustration purposes only and do not represent the original colors of the machine. Some details of your S8 may vary.

Feedback

Your opinion is important to us! Use the contact details at **jura.com**.

Copyright

The instructions for use contain information which is protected by copyright. It is not permitted to photocopy these instructions for use or translate them into another language without the prior written consent of JURA Elektroapparate AG.