

Important Notice for Network Security: Default Login Password Change

06

The default password for managing machine settings can be one of the following:

- **access**
- **initpass**
- the password located on your machine and marked "Pwd"

If your machine does not have a default password, leave the password field blank.

Change the Default Password

We strongly recommend changing the default password in order to protect your machine from unauthorized access, and to make the following features and software* more secure:

- Web Based Management
- BRAdmin Light/Professional

** Features and software may vary depending on your model*

To change the default password for your model, see the instructions:

1. RJ Series	2
2. TD and TJ Series.....	3
3. VC Series.....	5
4. QL-810Wc/QL-820NWBc/QL-1110NWBc/ PT-P900Wc	6
5. Other Mobile and Label Printers.....	7

1. RJ Series

1. Type `http://printer_IP_address` in your web browser's address bar, where `printer_IP_address` is the printer's IP address or the print server name.

For example, if the printer's IP address is 192.168.1.2, type
`http://192.168.1.2`

2. If the machine prompts you for a password, type the default password (**access**, **initpass**, or the password located on your machine and marked "Pwd").

 To confirm the default password, print the printer settings/information and check the **Default Password** field. For more information, go to support.brother.com and view the *User's Guide* on your model's **Manuals** page.

3. Click the **Administrator** tab.
4. Type the password you want to use.
5. In the **Confirm New Password** field, retype the new password.
If necessary, write down the password and store it in a secure place.
6. Click **Submit**.

2. TD and TJ Series

1. Type `http://printer_IP_address` in your web browser's address bar, where `printer_IP_address` is the printer's IP address or the print server name.

For example, if the printer's IP address is 192.168.1.2, type
`http://192.168.1.2`

2. If required, enter the following User ID:

Model	User ID
TD-4100N	admin
TD-4420DN/4520DN/4550DNWB	initpass
TD-4420TN/4520TN/4650TNWB/4650TNWBR/ 4750TNWB/4750TNWBR	root
TJ-4005DN/4010TN/4020TN/4120TN/4021TN/ 4121TN/4021TNR/4121TNR	
TJ-4420TN/4520TN/4620TN/4422TN/4522TN	

3. If the machine prompts you for a password, type the default password (**access**, **initpass**, or the password located on your machine and marked "Pwd").

 (Not applicable for models TD-4420TN/4520TN/4650TNWB/4650TNWBR/4750TNWB/4750TNWBR, TJ-4005DN/4010TN/4020TN/4120TN/4021TN/ 4121TN/4021TNR/4121TNR and TJ-4420TN/4520TN/4620TN/ 4422TN/4522TN) To confirm the default password, print the printer settings/information and check the **Default Password** field. For more information, go to support.brother.com and view the *User's Guide* on your model's **Manuals** page.

4. Click the **Administrator** or **Password** tab.

 If your web browser displays an additional security dialog box, type the default ID and password and click **[OK]**.
User ID: admin
Default Password: The password located on your machine and marked "Pwd"

5. Type the password you want to use.
6. In the **Confirm New Password** field, retype the new password.
If necessary, write down the password and store it in a secure place.
7. Click **Submit** or **Set**.

3. VC Series

1. Type `http://printer_IP_address` in your web browser's address bar, where `printer_IP_address` is the printer's IP address or the print server name.

For example, if the printer's IP address is 192.168.1.2, type
`http://192.168.1.2`

2. The machine's Web Based Management page appears. Go to **AirPrint Option > Administrator Login Password**.
-

 If **Administrator Login Password** does not appear, click **Admin Login** > type the default password > click **Login**.

3. In the **Enter New Password** field, type the password you want to use. If necessary, write down the password and store it in a secure place.
4. In the **Confirmed Password** field, retype the new password.
5. Click **Submit**.

4. QL-810Wc/QL-820NWBc/QL-1110NWBc/ PT-P900Wc

1. Type `https://printer_IP_address` in your web browser's address bar, where `printer_IP_address` is the printer's IP address or the print server name.

For example, if the printer's IP address is 192.168.1.2, type `https://192.168.1.2`

2. Type the default login password located on your machine and marked "Pwd", and then click **Login**.
-

 To confirm the default password, print the printer settings/information and check the **Default Password** field. For more information, go to support.brother.com and view the *User's Guide* on your model's **Manuals** page.

3. Go to the navigation menu, and then click **Administrator > Login Password**.
-

 Start from  if the navigation menu is not shown on the left side of the screen.

4. Following the on-screen **Login Password** guidelines, type your password in the **Enter New Password** field.
5. Retype the password in the **Confirm New Password** field.
6. Click **Submit**.

5. Other Mobile and Label Printers

PT-E550W users

To check and change your printer's default password, go to support.brother.com and view the *Important Notice for Network Security: Model PT-E550W only* on your model's **Manuals** page.

1. Type `http://printer_IP_address` in your web browser's address bar, where `printer_IP_address` is the printer's IP address or the print server name.

For example, if the printer's IP address is 192.168.1.2, type
`http://192.168.1.2`

2. If the machine prompts you for a password, type the default password (**access**, **initpass**, or the password located on your machine and marked "Pwd").
-

 To confirm the default password, print the printer settings/information and check the **Default Password** field. For more information, go to support.brother.com and view the *User's Guide* on your model's **Manuals** page.

3. Click the **Administrator** tab.
4. Type the password you want to use.
5. In the **Confirm New Password** field, retype the new password.
If necessary, write down the password and store it in a secure place.
6. Click **Submit**.