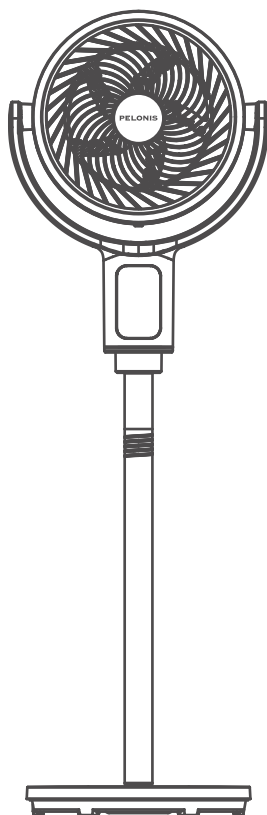 


# HYUNDAI

## OWNER'S MANUAL

DC PEDESTAL CIRCULATION FAN  
Model:HYDCPCFANMA



***READ AND SAVE THESE INSTRUCTIONS***

Attention: Pictures in the IM are for reference only.



# CONTENTS

SAFETY INSTRUCTIONS .....	02
SPECIFICATIONS .....	05
PRODUCT OVERVIEW .....	06
PRODUCT INSTALLATION .....	07
OPERATION INSTRUCTIONS .....	08
CLEANING AND MAINTENANCE .....	11
TROUBLESHOOTING .....	12

# SAFETY INSTRUCTIONS

## Intended Use

The following safety guidelines are intended to prevent unforeseen risks or damage from unsafe or incorrect operation of the appliance. Check the packaging and appliance on arrival to make sure everything is intact to ensure safe operation. If you find any damage, contact **help.Kogan.com**. Modifications or alterations to the appliance are not allowed for your safety. Unintended use may cause hazards.

## Explanation of Symbols



### **Danger**

This symbol indicates that there are dangers to the life and health of persons due to extremely flammable gas.



### **Warning of electrical voltage**

This symbol indicates that there is a danger to life and health of persons due to voltage.



### **Warning**

The signal word indicates a hazard with a medium level of risk which, if not avoided, may result in death or serious injury.



### **Caution**

The signal word indicates a hazard with a low degree of risk which, if not avoided, may result in minor or moderate injury.



### **Attention**

The signal word indicates important information (e.g. damage to property), but not danger.



### **Observe instructions**

This symbol indicates that a service technician should only operate and maintain this appliance in accordance with the operating instructions.

Read these operating instructions carefully and attentively before using/commissioning the unit and keep them in the immediate vicinity of the installation site or unit for later use!


 
## **Caution**

- . Read Rules for Safe Operation and Instructions Carefully.
- . This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and maintenance shall not be performed by children without supervision.
- . Keep electrical appliances out of reach from children. Do not let them use the appliances without supervision.
- . Never insert fingers, pencils, or any other object through the grille when the fan is running.
- . Disconnect the fan when moving from one location to another.
- . Ensure the fan is on a stable surface when operating to avoid overturning.
- . DO NOT use fan in a window, as rain may create an electrical hazard.

## Warning

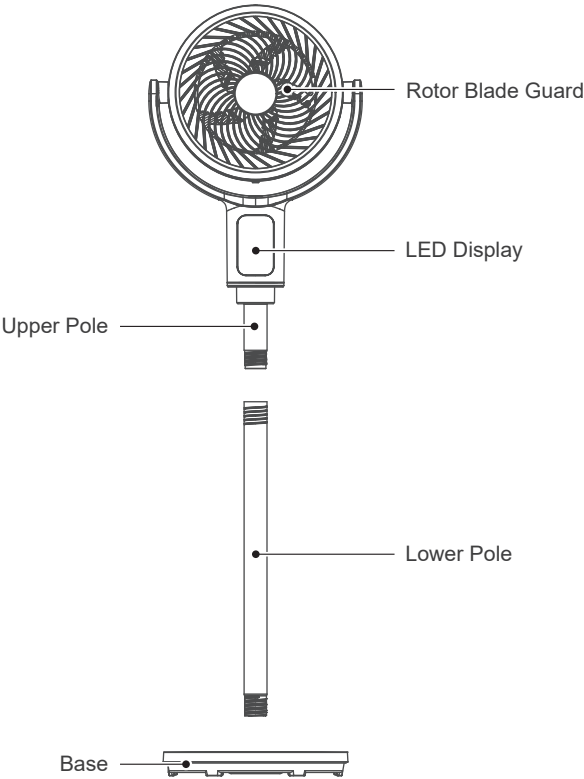 
- . If the power cord is damaged, it must be replaced by manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- . To protect against the risk of electrical shock, do not immerse the unit, cord or plug in water or other liquid.
- . When the appliance is not in use and before cleaning, unplug the appliance from the outlet.
- . Indoor and household use only.
- . When the fan was assembled, the rotor blade guard must not be taken off anymore.
  - Prior cleaning unplugs the fan.
  - The rotor guard shall not be disassembled/opened to clean the rotor blades.
  - Wipe the fan enclosure and rotor blade guard with a slightly damp cloth.

# SPECIFICATIONS


Product Model	HYDCPCFANMA
Rated Voltage	24V 
Rated Power	24W
Adapter Input	100-240V~ 50/60Hz 1.5A
Adapter Output	24  1.5A

# PRODUCT OVERVIEW

## Component name




## Accessories

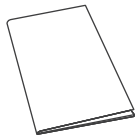 

User Manual x1



 Adaptor x1



Remote control x1



Battery x2

### NOTE

All the pictures in this manual are for explanation purpose only. Any discrepancy between the real object and the illustration in the drawing shall be subject to the actual product.



# PRODUCT INSTALLATION

## Installation

### 1 Lower Pole mounting

Align the lower pole with the base interface, and rotate clockwise to tighten it.

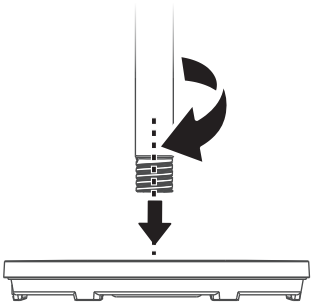 


Figure 1

### 2 Upper Pole mounting

Align the upper pole with the lower pole interface and insert. Then, rotate clockwise and tighten it.

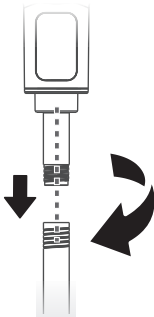 
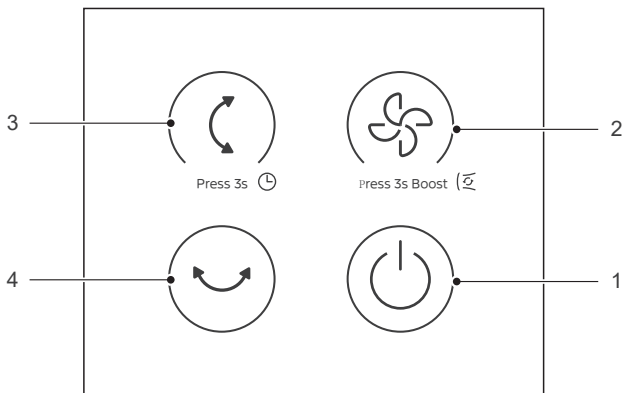 








Figure 2


# OPERATION INSTRUCTIONS
 
## Control panel operations



No	Button	Function Description
1	 Power On/Off	<ul style="list-style-type: none"><li>Press this button to turn the unit on/off.</li></ul>
2	 Long Press 3s Boost  Fan Speed	<ul style="list-style-type: none"><li>Press this button to change the fan speed (cycle through 1-2-3-...9)</li><li>Press and hold this button for 3 seconds to turn circulation mode On/Off. Circulation mode turns both vertical/horizontal oscillation on with max fan speed.</li></ul>
3	 Long Press 3s  Vertical Oscillation	<ul style="list-style-type: none"><li>Press this button to select vertical oscillation (cycle between 30°, 60°, 135° and Off)</li><li>Press and hold this button for 3 seconds to turn the timer on/off. Then, press the vertical oscillation button to select the desired time. The display will cycle between (0-1-2-...-9). Selecting the timer when the unit is powered on will schedule the shut down time. Selecting the timer while the unit is off will schedule the start-up timer.</li></ul>
4	 Horizontal Oscillation	<ul style="list-style-type: none"><li>Press this button to turn horizontal oscillation on/off.</li></ul>

## Display Panel Description

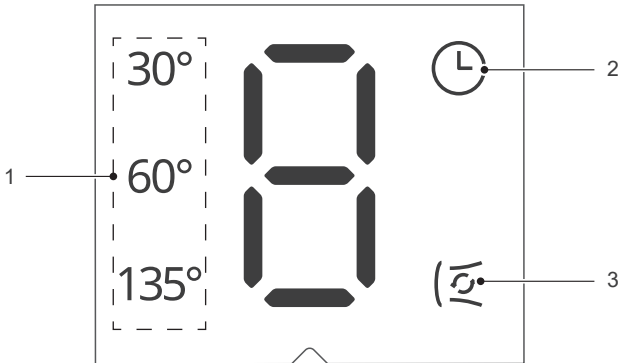 


No	Indicators	Function Description
1	30° 60° 135°	• Vertical Oscillation Enabled - displays the degree of vertical oscillation selected between 30°, 60° and 135°.
2		• Timer Enabled.
3		• Circulation Mode Enabled - fan will oscillate both horizontally/vertically and fan speed set to max.

## Additional features and maintenance

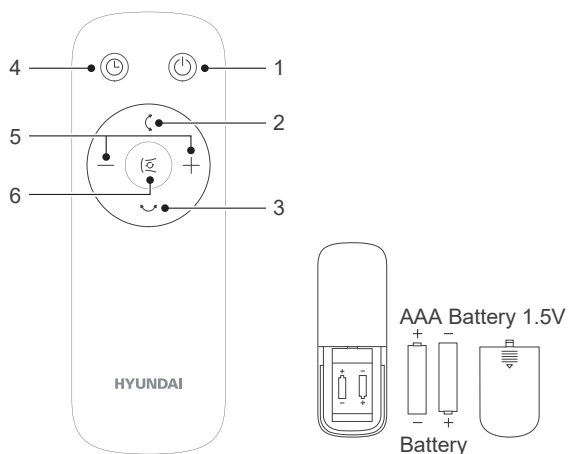 When the power is connected and the device turned is turned on, if there is no operation or input to the fan, it will automatically shut off after 24 hrs.

## Remote Control Button Description

The remote control can be used in front of the product within 5m.



No	Button	Function Description
1		• Power on/off.
2		• Press this button to select vertical oscillation (cycle between 30°, 60°, 135° and Off).
3		• Press this button to turn horizontal oscillation on/off.
4		• Press this button to turn the timer on/off.
5		• Press this button to increase/decrease the fan speed or if the timer light is flashing press this button to increase/decrease the timer value.
6		• Press this button to turn circulation mode on/off.

#### NOTE

- Use a manganese or alkaline AAA battery and do not use a non-recyclable battery.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc.) batteries.

# CLEANING AND MAINTENANCE

1. Be sure to unplug from the electrical supply source before cleaning.
2. Use a damp cloth or sponge for general cleaning.
3. To remove more persistent dirt, use a cloth dampened with warm soapy water. Then, use a dampened cloth with water only to remove soap film. Do not use any solvents (such as thinners), as they may damage the plastic housing.
4. Do not allow water or other liquids to enter inside the fan motor.

# TROUBLESHOOTING

Operation of your appliance can lead to errors and malfunctions. The following table contains possible causes and notes for resolving an error message or malfunction. It is recommended to read the table below carefully.

Problem	Cause	Solution
The machine does not work properly after installed	• The power cable is not plugged in or has poor contact.	Make sure the plug is properly inserted into the outlet.
	• The switch on the body is not turned on.	Turn on the switch on the body.
The remote does not work	• The battery needs replacing.	Replace the battery.
	• The remote is being used more than 5m. away from the machine.	Use the remote closer to the machine and make sure it is pointing directly at the display panel.



# **HYUNDAI**

Imported/Distributed by Kogan Australia Pty Ltdc  
Licensed by HYUNDAI Corporation Holdings, Korea