

TOUCH

小翘68三模机械键盘

OE912 Triple Mode Connection Mechanical Keyboard

产品规格

按键: 68键, 可插拔机械轴
 多媒体键数量: 12个
 材质: 主体ABS, 键帽PBT
 接口: Type-C
 模式: 2.4G/蓝牙/有线模式
 蓝牙名称: Touch68@Lofree
 尺寸: 310x109x51.5mm

产品图解

① 电量指示灯

• 有线模式
 电量指示灯由灯常亮
 • 蓝牙/2.4G接收器连接模式
 电量低于20%, 电量指示红灯慢闪
 电量低于3%, 电量指示红灯快闪至关机

② 大写锁定指示

状态指示灯常亮, 表示大写模式开启
 状态指示灯熄灭, 表示大写模式关闭
 • 蓝牙配对指示 (白灯)
 启动蓝牙配对时, 状态指示灯呈闪烁状态
 配对成功后此灯常亮3S, 随后恢复此前对应状态
 切换设备时, 状态指示红灯快闪至关机

③ 2.4G接收器配对指示

启动2.4G接收器配对时, 状态指示灯快闪3S
 配对成功后此灯常亮3S, 随后恢复此前对应状态

④ 状态切换开关

2.4G/BT/2.4G和蓝牙模式 ON: 有线模式 OFF: 关闭
 ⑤ Type-C接口
 有线连接接口
 ⑥ 电池盒盖

详细操作

2.4G 接收器连接模式:

① 向右拨动, 取下电池盒盖

② 取出 2.4G 接收器

③ 将电池盒盖安装还原

④ 将 2.4G 接收器插入电脑 USB 接口中

⑤ 将状态切换开关切换到 2.4G/BT 档位

⑥ 按住 Fn+R 键启动 2.4G 连接模式

⑦ 状态指示灯呈持续快闪状态, 直至配对成功

⑧ 配对成功后, 此灯常亮 3S, 随后恢复此前对应状态

蓝牙连接模式:

① 将状态切换开关切换到 2.4G/BT 档位

② 长按 Fn+Q/ Fn+W/ Fn+E 直至状态指示灯慢闪

③ 打开手机蓝牙功能, 并在蓝牙设备列表中查找并点击连接 "Touch68@Lofree"

④ 状态指示灯常亮 3S 后熄灭, 表示蓝牙模式连接成功

有线连接模式:

① 将状态切换开关切换到 "ON" 档位

② 短按 Fn+Q/ Fn+W/ Fn+E 为切换蓝牙连接设备

③ 取出本产品附带 Type-C 数据线将键盘与电脑进行连接, 即可完成有线连接模式

系统切换

Fn 右上角 Fn+N 为触发 windows 对应系统功能键值

右上角 Fn+M 为触发 Mac 对应系统功能键值

多媒体键及功能键

Fn 右上角 Fn+ESC.....= 为触发多功能键

功能标识	Mac	Windows
Fn+1	亮度减小	亮度减小
Fn+2	亮度增大	亮度增大
Fn+3	多屏显示	多屏显示
Fn+4	搜索	搜索
Fn+5	/	开启/Cortana
Fn+6	/	睡眠模式/开启
Fn+7	上一曲	上一曲
Fn+8	播放/暂停	播放/暂停
Fn+9	下一曲	下一曲
Fn+0	静音	静音
Fn+-	音量减小	音量减小
Fn+=	音量增大	音量增大
Fn+Opt/Ctrl	菜单键	菜单键

系统切换

Fn 左下角 Fn+1.....= 为触发多媒体键

多媒体标识	Mac	Windows
Fn+1	亮度减小	亮度减小
Fn+2	亮度增大	亮度增大
Fn+3	多屏显示	多屏显示
Fn+4	搜索	搜索
Fn+5	/	开启/Cortana
Fn+6	/	睡眠模式/开启
Fn+7	上一曲	上一曲
Fn+8	播放/暂停	播放/暂停
Fn+9	下一曲	下一曲
Fn+0	静音	静音
Fn+-	音量减小	音量减小
Fn+=	音量增大	音量增大
Fn+Opt/Ctrl	菜单键	菜单键

产品中有毒物质的名称及含量

有害物质	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBBs)	多溴二苯醚 (PBDEs)
塑料件 (件)	0	0	0	0	0	0
电路板组件	0	0	0	0	0	0
橡胶件 (件)	0	0	0	0	0	0
金属零件	0	0	0	0	0	0

警告:

• 如果电池更换不当, 有可能存在泄露或爆炸及造成人身伤害的危险。
 • 切勿在电池出现泄露、变色、变形或出现任何其他异常的情况下使用。
 • 切勿将电池长时间处于放电或不使用状态。
 • 切勿将产品短路。
 • 电池寿命随使用情况而异, 已报废电池应依据当地法律进行弃置, 或弃置在用于回收电子设备的垃圾桶中。
 • 若有任何液体不小心进入产品内部时, 请立即断开电源并移开此产品继续使用可能会引起起火或触电, 请及时联系代理商或最近的客服中心检查维修。

SPECIFICATIONS:

Number of keys: 68 (Hot-swappable Mechanical Switch)
 Number of Multimedia Keys: 12
 Materials: ABS Body, PBT Keycaps
 Interface: Type-C
 Mode: 2.4G & Bluetooth & Wired
 Device Name: Touch68@Lofree
 Dimensions: 310mm*109mm*51.5mm

FEATURE DESCRIPTION:

① Battery Indicator

• Wired Mode

the indicator light is steady white.

Bluetooth Mode/2.4G Wireless USB mode.

When the power is lower than 20%, the indicator light flashes slowly in red.

When the power is lower than 3%, the indicator light flashes quickly then automatically turn off.

② Status indicator (White light)

• Caps Lock Indicator

Solid LED light = The uppercase mode is turned on;

LED light off = The uppercase mode is turned off;

• Bluetooth Pairing Indicator (white light)

Flashing LED light = The device is in Bluetooth pairing mode.

When successfully paired, the Pairing Indicator turns on for 3 seconds, and then turns off again;

During each switch to a new device, the Pairing Indicator flashes quickly for 3 seconds, and then turns off again

• 2.4G Wireless USB Pairing Indicator

When the 2.4G receiver is started for pairing, the Pairing indicator flashes quickly for 3 seconds

③ Status switch

2.4G/BT:

key Bluetooth mode / ON: Wired mode / OFF: Off

④ Type-C interface

Wired mode interface.

⑤ Battery cover

Detailed user guide

2.4G Wireless USB mode

① Swipe to the right to remove the battery cover

② Take out the 2.4G receiver

③ Install the battery cover

④ Insert the 2.4G receiver into the USB port of the computer

Bluetooth mode:

① Switch the status to 2.4G/BT gear

② Long press Fn+Q/ Fn+W/ Fn+E until the status indicator flashes slowly

③ Turn on the Bluetooth function of your device, search for "Touch68@Lofree" and connect

④ When successfully paired, the Pairing Indicator turns on for 3 seconds, and then turns off again

Wired mode

① Switch the status to the ON

② Short press Fn+Q/ Fn+W/ Fn+E to switch Bluetooth connected devices

③ connect the keyboard to computer with Type-C cable to complete the wired connection

System Switch

Fn+N in the upper right corner is the key to trigger the corresponding system function of windows

Fn+M in the upper right corner is the key to trigger the corresponding system function of Mac

Multimedia and function keys

Fn+N in the upper right corner...= the function keys

Function sign	Mac	Windows
Fn+1	亮度减小	亮度减小
Fn+2	亮度增大	亮度增大
Fn+3	多屏显示	多屏显示
Fn+4	搜索	搜索
Fn+5	/	ON/Cortana
Fn+6	/	Sleep Mode/ON
Fn+7	Previous Track	Previous Track
Fn+8	Play/Pause	Play/Pause
Fn+9	Next Track	Next Track
Fn+0	Mute	Mute
Fn+-	Volume Down	Volume Down
Fn+=	Volume Up	Volume Up
Fn+Opt/Ctrl	Menu Button	Menu Button

NAME AND CONTENT OF HAZARDOUS SUBSTANCES IN PRODUCT:

Hazardous Elements	Hazardous substances					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (Cr(VI))	Polybrominated Biphenyls (PBBs)	Polybrominated Diphenyl Ethers (PBDEs)
Plastic	0	0	0	0	0	0
Circuit Board Assembly	0	0	0	0	0	0
Structure Components	0	0	0	0	0	0
Key Parts	0	0	0	0	0	0

ENVIRONMENTAL PROTECTION INSTRUCTIONS:

The hazardous substances contained in the electronic parts of this product will not leak or change under normal use conditions for a period of years. During the use period, the electronic components of this product will not cause serious environmental pollution or serious damage to human health or property. These limits are designed to provide reasonable protection against harmful interference in a residential installation. According to the Chinese electronic industry standard SJ/T 11364-2014 and related Chinese government regulations, this product and some of its internal or external components may have an environmentally friendly use period mark, depending on the component and component manufacturer, the mark lifespan on the product and its components may vary. The expiration

Warning

• If the battery is not replaced properly, there may be leakage or explosion and personal injury hazards. • Do not use the battery when there is leakage, discoloration, deformation, or any other abnormality. • Do not leave the battery in a discharged or unused state for a long time. • Do not short-circuit the product. • Battery life varies with usage. Used batteries should be disposed of in accordance with local laws or thrown away in trash cans for recycling electronic devices. • If any liquid accidentally enters the product, please immediately disconnect the power supply and remove the product. Continue to use the product may cause fire or electric shock. Please contact the agent or the nearest customer service center for inspection and maintenance.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can

be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

– Reorient or relocate the receiving antenna.
 – Increase the separation between the equipment and receiver.
 – Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 – Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Lofree

深圳市洛斐尔文化有限公司
 Shenzhen Lofree Culture Co., Ltd.
 深圳市宝安区西乡街道宝源路1065号518时尚创意园8栋202
 202-F8, F518 Idea Land, 1065 Bao Yuan Road, Shenzhen

Service Hotline/服务热线: 4006020083

www.lofree.com.cn www.lofree.co
 @lofree @lofree @lofree