 
 


KNOW YOUR PRODUCT

 
 
Front view:

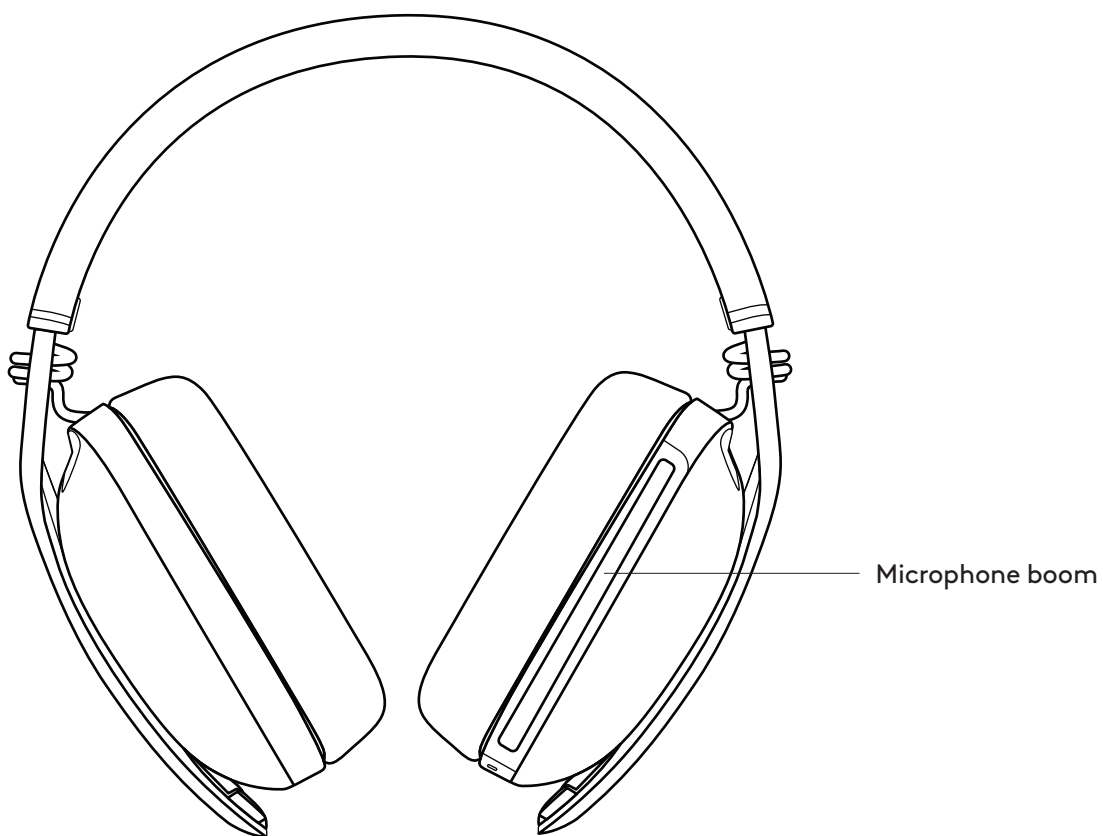

Back view:

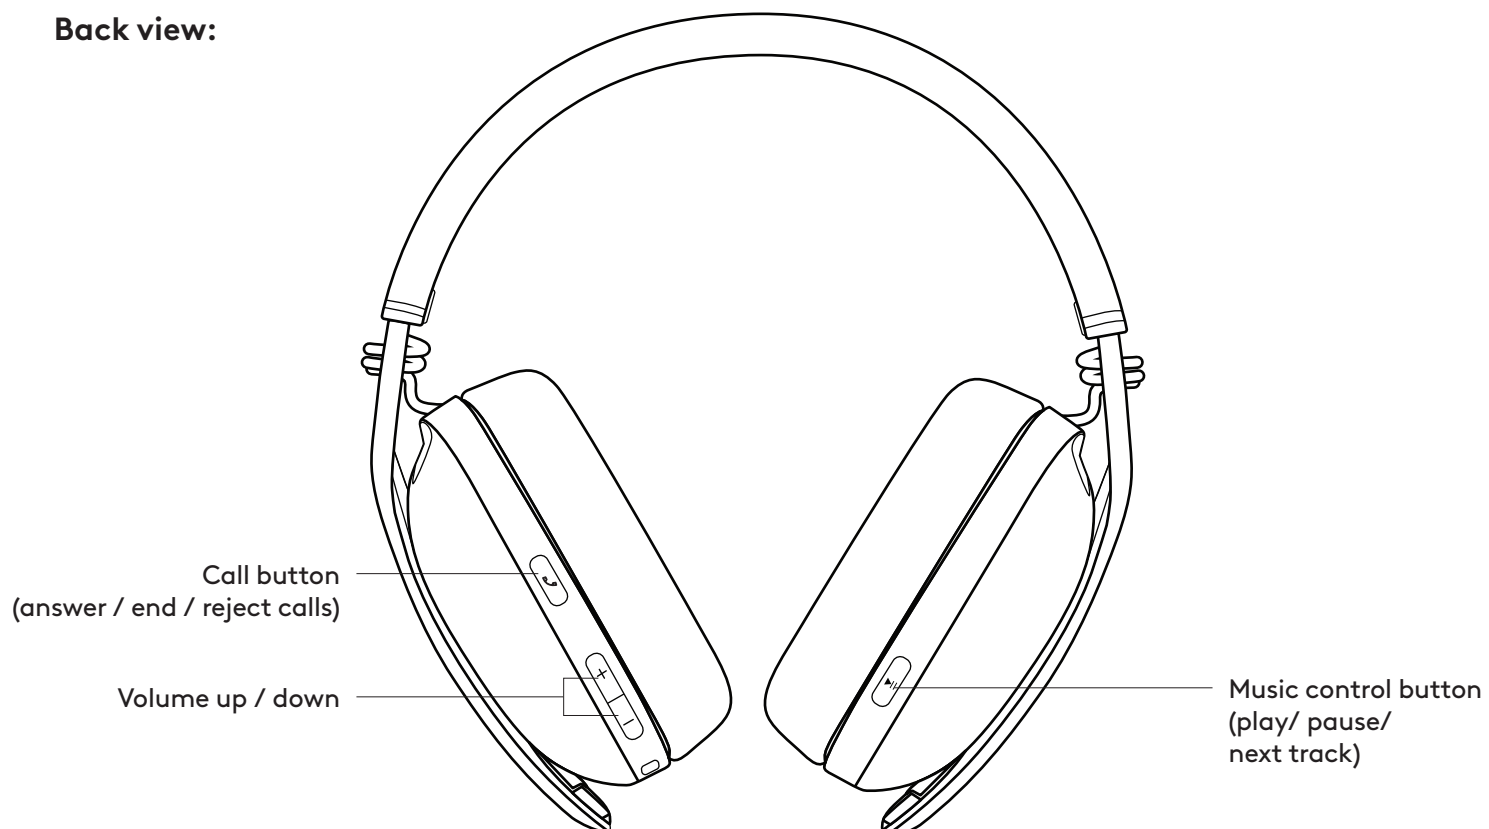


Bottom view:

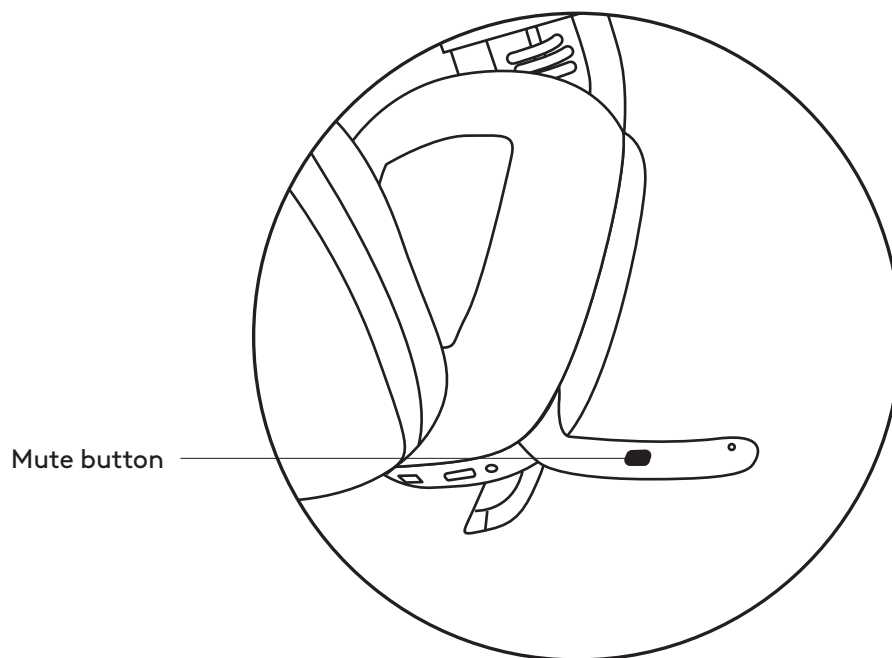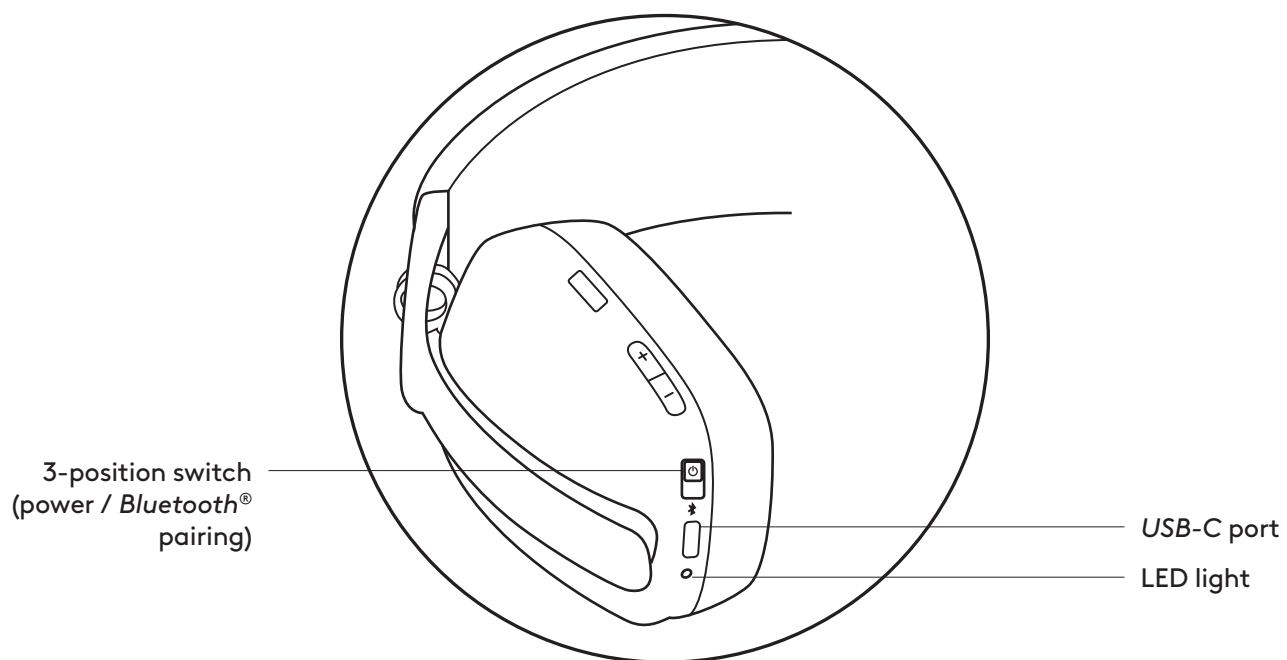


BOX CONTENT

 1. Zone Vibe 100 wireless headphones
2. Charging cable
3. Travel bag
4. User documentation




POWER ON / OFF

 1. Slide the switch in the arrow's direction to the middle to power on the headphones.

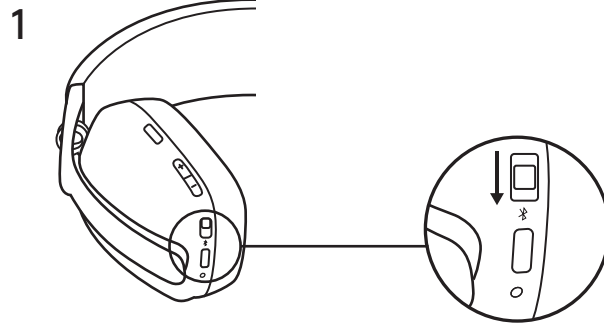

 
2. Once powered on, the LED light will slightly turn white.
3. There will be a voice prompt that tells you the battery status.

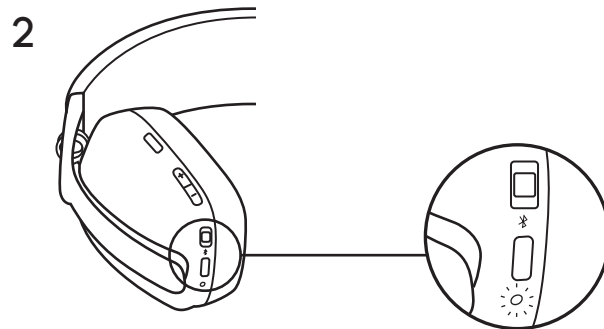

CONNECT YOUR HEADPHONES


Connect via **BLUETOOTH®**

1. Slide the switch to the bottom in the arrow's direction for 2 seconds to initiate pairing.
2. The LED light will flash white rapidly.
3. Open *Bluetooth®* settings on your device.
4. Select Logi Zone Vibe 100 in discoverable devices.
5. Once successfully paired, the LED light will turn solid white.

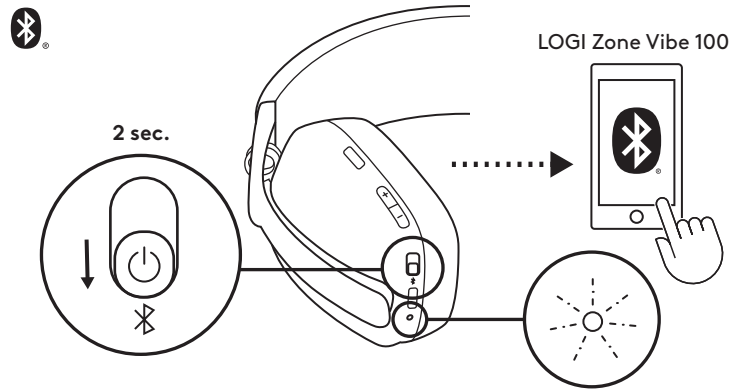

ADJUSTING HEADPHONES

1. Adjust the headphones by sliding earcups up and down the extended part of the headband.
2. It may be easier to adjust the headphones on your head. Slide the earcups up and down the headband until they sit comfortably on your ears.

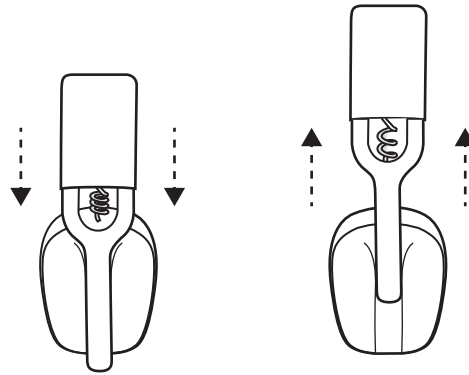


HEADPHONES CONTROLS

For UC controls:			
	Usage	Button	Action
Call controls	Answer / End call	Call button	Short press
	Reject call		2 sec. press
Music controls	Play / Pause	Music control button	Short press
	Track forward		Double press
Volume	Volume up	"+"	Short press
	Volume down	"_"	
Connectivity	Bluetooth® pairing	Power button	2 sec. press


- Note:**
- Media control functionality depends on the type of application.
 - Call activities are always the first priority. When two *Bluetooth®* devices are connected, the last active device will override the other.
- Tip:** Music EQ controls available on Logi Tune.

MUTE

There are 2 ways to mute your microphone.

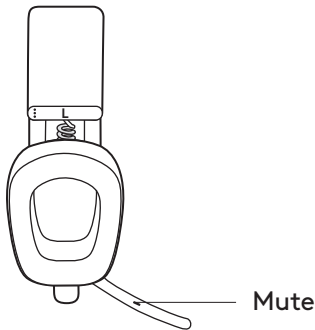

Press the button to mute.

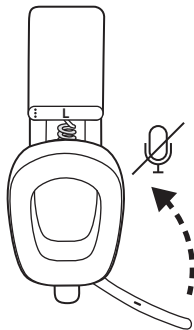

Flip up or down the mic boom to mute or unmute.



Voice notifications indicate when the microphone is on / off mute.

HEADPHONES LIGHT INDICATOR

	Category	Status	Light
White	Power	Power ON	Turn solid white and then dim
		Battery charging	Breathing
		Battery fully charged	Solid and then off
	Connectivity	Bluetooth® pairing	Fast blinking
		Bluetooth® connected	Turn solid white and then dim
	Calls	Active call	Solid
		Incoming call	Slow blinking
Red	Calls	Mute	Solid
	Power	Low battery (< 10%)	Slow blinking
		Factory reset	Fast blink from red to white for three times then LED turn off

Note:


- User-triggered behaviors, such as *Bluetooth®* pairing, will be prioritized then revert back to its previous status once the behavior is completed.

CHARGING

To conserve battery life, headphones automatically power off after 30 minutes without usage.

Sleep timer could be adjusted in Logi Tune.

The LED light on the headphones will blink slowly in RED when the battery is low.

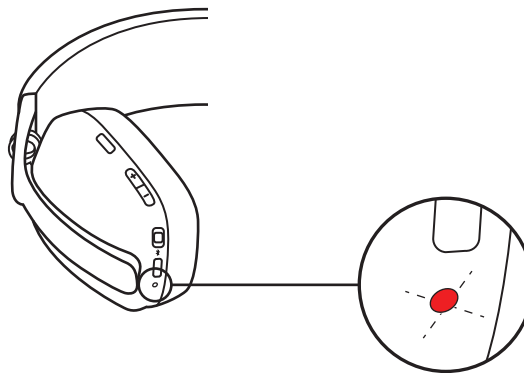

Charging via USB cable

1. Plug one end of the cable to the *USB-C* port on the bottom of the earcup and the other end into the *USB-C* charging port on your computer.
2. The LED light will start breathing white when charging.
3. The LED light will turn solid white when fully charged.
 - 2 hours will fully charge the battery.
 - 5 minutes will give you 1 hour of playback.
4. The headphones can be used with *Bluetooth®* paired while charging.

LOGI TUNE

Logi Tune helps boost your headphones performance with periodic software and firmware updates.

It is recommended to update your headphones. To do so, download Logi Tune from www.logitech.com/tune



Logi Tune



ADJUSTING SIDETONE

Sidetone lets you hear your own voice during conversations so you are aware of how loud you are talking. In Logi Tune, select the sidetone feature, and adjust the dial accordingly.

- A higher number means you hear more external sound.
- A lower number means you hear less external sound.

AUTO SLEEP TIMER

By default, your headphones will automatically power off when not in use for 30 minutes. Adjust the sleep timer in Logi Tune. To wake up your headphones, try sliding off/on the power switch again.

RESET YOUR HEADPHONES

1. Power the headphones on.
2. Press and hold the call button and volume '-' button for 5 seconds.
3. The LED light will quickly blink from red to white for 3 times and then turns off when your headphones are successfully reset.
4. The headphones will turn off after reset.

DIMENSIONS

Headphones:

Height x Width x Depth: 183.03 x 169.68 x 73 mm

Weight: 0.185 Kg

Earpad:

Height x Width x Depth: 98.6 x 75.44 x 19.3 mm

SYSTEM REQUIREMENTS

Works with common calling applications across almost all platforms and operating systems.

Works with *Windows*, *Mac*, or *Chrome*-based computers via *Bluetooth®* and *iOS* or *Android* Bluetooth-enabled devices.

TECHNICAL SPECIFICATIONS

Microphone Type: Dual omni-directional MEMS mics with directional beamforming and DSP

Frequency response (Speaker): 20-20kHz (music mode), 100-8kHz (talk mode)

Frequency response (Microphone): 100-8kHz

Talk time up to 18 hrs

Listen time up to 20 hrs

Bluetooth® version: 5.2

 
Wireless range: Up to 30 m / 100 ft (open field line of sight)

Cable length (*USB-C* charging cable): 4.9 ft (1.5 m)

www.logitech.com/support/zonevibe100

PRÉSENTATION DU PRODUIT

Vue avant:

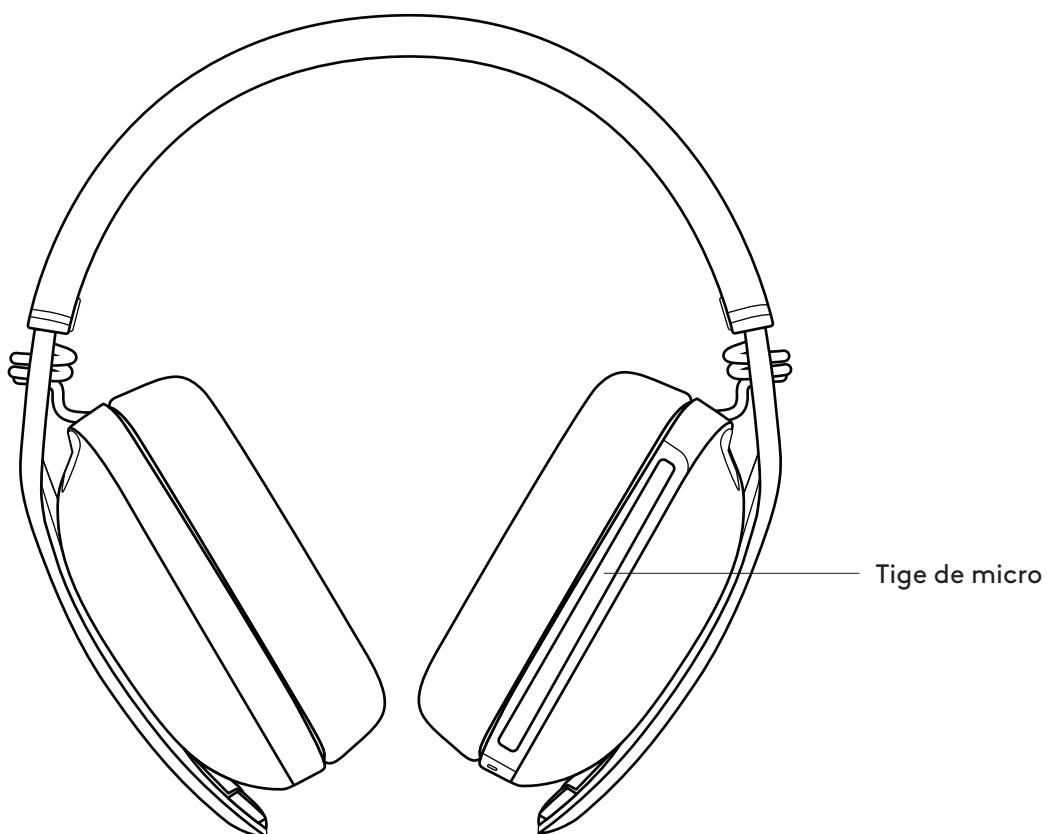

Vue arrière:

