

**Green Lion**

## **AUDIONIX Home Soundbar**

 
SKU: GNAUDNXSPBK

Model No: GL-SP17

## Table of Contents

Safety Precautions	2
Important Safety Instructions	3
Package Contents	3
Button Function Guide	4
Connection Diagram	4
Unit Operation Guide	5
Features	6
AC Power Precautions	6
Remote Control Description	7
Specifications	8
Disposal	8
Warranty	9
Contact Us	9

## Safety Precautions

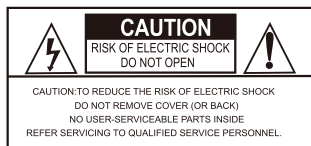

### WARNING:

To prevent fire or shock, do not expose the unit to rain or moisture.

**Note:** This product is for indoor use only.



The lightning flash with an arrow symbol, within an equilateral triangle, alerts the user to the presence of uninsulated "dangerous voltage" inside the product's enclosure that may cause electric shock.



The exclamation point within an equilateral triangle warns the user about the presence of important operating and maintenance instructions in the literature accompanying the product.

No naked flame sources, such as lit candles, should be placed on the apparatus.

Attention should be drawn to the environmental aspects of battery disposal.

The batteries should not be exposed to excessive heat, such as direct sunlight or fire.

## Important Safety Instructions

 
1. Read all instructions and warnings before use.
2. Follow all instructions carefully.
3. Do not use the apparatus near water.
4. Clean with a dry cloth only.
5. Do not block ventilation openings; install according to manufacturer's instructions.
6. Avoid placing the speaker system near heat sources like radiators, stoves, or amplifiers.
7. Protect the power cord from being pinched or walked on, especially at plug points.
8. Use only manufacturer-approved attachments and accessories.
9. Use only with specified carts, stands, tripods, or tables; be cautious when moving them.
10. Unplug during lightning storms or if unused for extended periods.
11. Refer servicing to qualified personnel if damaged, exposed to moisture, or not working properly.

## Package Contents

- |                   |         |
|-------------------|---------|
| 1. Soundbar       | :1 Unit |
| 2. User Manual    | :1 Unit |
| 3. Remote Control | :1 Unit |
| 4. AUX Cable      | :1 Unit |



## Button Function Guide

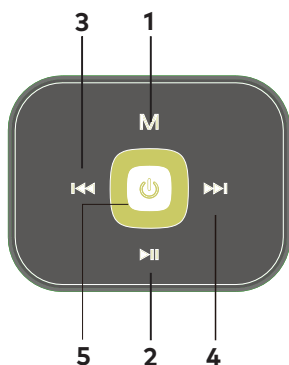

### 1. INPUT M

Select an audio source.

### 2. ►||

Pause or resume play.

### 3. ◀◀ / VOL-

Click once to select the previous music file.

Long press to reduce volume.

### 4. ▶▶ / VOL+

Click once to select the next music file.

 
Long press to increase volume.

### 5. Additional Controls: ⏻

Long press to turn ON/OFF.

Short press to select input mode (BT/USB/AUX/OPTICAL/HDMI(ARC)).

## Connection Diagram

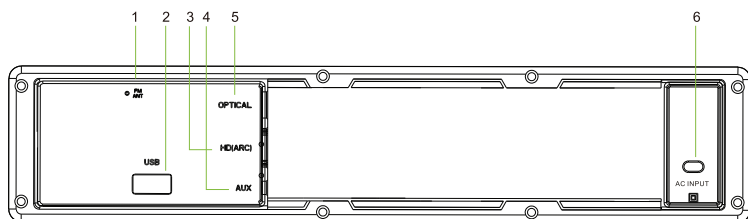

1. FM Antenna

2. USB

3. HD (ARC)

4. AUX

5. Optical

6. AC Input

## Unit Operation Guide

**1.** Connect the device to an AC power source and turn it on by pressing the INPUT button on the soundbar.

**Remark:** Audio modes can be changed by pressing the MODE button, with a voice prompt for each mode.

**Tip:** Turn off the device when not in use to save energy. The device prompts "Together We Can Save Electricity For Future."

**2.** When a USB card is inserted, it will automatically play from the last device inserted.

**Remark:** Ensure the USB is properly inserted for seamless playback.

**3.** When the USB card is working, press the **▶||** button to temporarily stop the music.

Press the **▶||** button again to resume music.

**Remark:** This allows you to pause and resume the audio playback easily.

**4.** When the USB card is playing, press the MODE button to cycle through LINE IN, USB card, and Bluetooth modes.

**Tip:** Use this button to switch between different input sources.

**5.** When the USB card is working, press the **◀◀ / VOL-** button to choose the previous song.





Press the **▶▶ / VOL+** button to choose the next song.

**Remark:** The **◀◀ / VOL-** button allows you to go back to a previous track, while the **▶▶ / VOL+** button moves forward to the next track. Press **VOL-** and **VOL+** to adjust the volume.

**6.** After stopping the unit, turn off the power switch and unplug the power cord.

**Remark:** Always power off and disconnect when not in use to prevent unnecessary energy consumption.

## Features

- ➡ Analog audio input
- USB** Support USB card
-  Built-in 2-channel power amplifier
-  Optical function
- AUX** Aux-in function
-  Bluetooth
-  FM radio
- HD** HD-ARC function

## AC Power Precautions

- Make sure the power supply is proper and never handle the power cord or its plug with wet hands when plugging into, or unplugging from, an outlet.
- Ensure that the main power switch is in the "OFF" position before connecting the AC power cord to the power supply to avoid damage to the unit.
- A damaged power cord can easily cause an electric shock or fire hazard; never use a power cord after it has been damaged.



# Remote Control Description

## 1. POWER

Switch the product on or to standby.

## 2. MODE

Select an audio source.

## 3. MUTE

Switch the product on or silent.

## 4. ►||

Pause or resume play.

## 5. ◀◀ ▶▶

Select the previous/next music file.

## 6. VOL+ / VOL-

Adjust the volume of all the connected speakers.

## 7. MOVIE

Select movie mode.

## 8. MUSIC

Select music mode.

## 9. NEWS

Select news mode.

## 10. DIS

Disconnect the paired Bluetooth device.

## 11. LED

Switch for screen control.

## 3.12D

Select 3D mode.

## 13. SW+ / SW-

Adjust the bass intensity.

## 14. TREB+ / TREB-

Adjust the treble intensity.

## 15. ◀◀ ▶▶

 
Search fast forwards and backwards.

## 16. REP

Select a play mode (for USB play only): repeat one or repeat all.

## 17. RESET

Reset all settings.

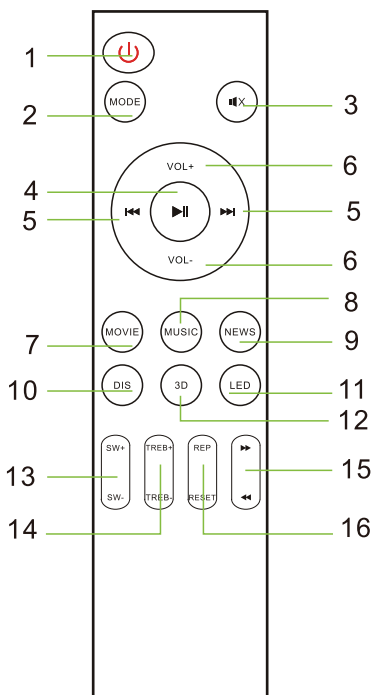



## Specifications

Model No	GL-SP17
Material	ABS+Covered Black
Rated Power	120W
Rated Voltage	110-240V
Rated Frequency	50Hz
Bluetooth	V5.0
Transmission Range	10 m
Speaker	(44*80) *2* ("3) ,2
Input Ports	USB/AUX/OPTICAL/HDMI(ARC)/FM
Power Plug	BS Plug 1.3 m
Product Weight	4.2 kg
Product Dimensions	990*75*130 mm

## Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.



## Warranty

Products that you buy directly from our **Green Lion** website or shop come with a 24-month warranty.

When you buy **Green Lion** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **<https://www.greenlion.net/warranty>** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:  
**<https://www.greenlion.net/warranty>**

## Contact Us

If you have any questions about this Privacy Policy, please contact us at:

Website: **<https://www.greenlion.net/>**

Sales: **[sales@greenlion.net](mailto:sales@greenlion.net)**

Service Support: **[Support@greenlion.net](mailto:Support@greenlion.net)**

Telegram: **[@greenlion\\_global](https://t.me/greenlion_global)**

Instagram: **[@greenlion\\_global](https://www.instagram.com/greenlion_global)**