

 
Alice-98键盘中英文说明书

128g铜板纸 双面单色印刷 四折全尺寸:594* 210 mm 折后尺寸:148.5*210 mm

	型号	ALICE 98	名称	Alice-98键盘中英文说明书
	料号	B-BT-CU-9800001	材质	128g铜板纸 双面单色印刷 四折全尺寸:594* 210 mm 折后尺寸:148.5*210 mm
	版本	2023.3.27		

FEKER


User Manual

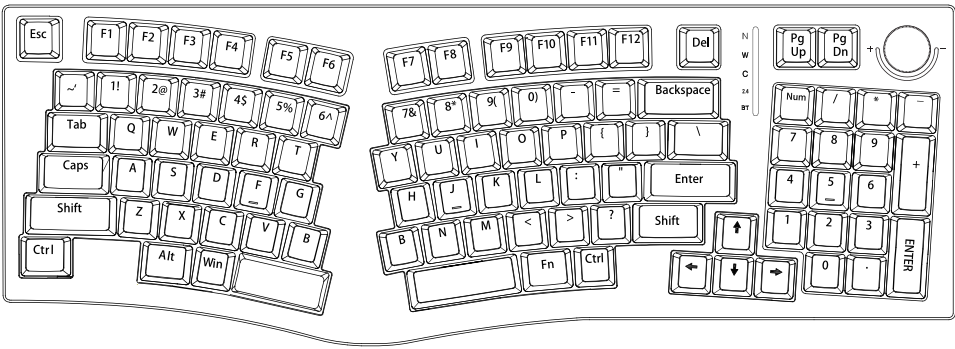

Alice-98

Alice Ergonomic Gasket Full Size Keyboard

 Swtich & USB Function

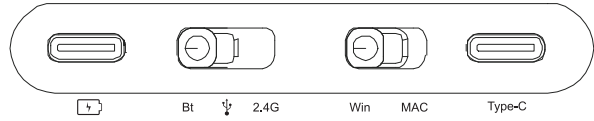

- Mac** For Mac system used , key-function switch to Mac computer or iPad;
- Win** For Windows system used , key-function switch to standard Windows computer;
- 2.4G** For Wireless 2.4g version used, please insert the USB receiver to port of computer.
- Bt** For Wireless bluetooth version used, please check the bluetooth state of computer.
- Type-C** Type-C cable insert here and USB connect to computer for connect to computer ;
-  USB fast charge port.

Interface Connected Function

- USB Version** ----- Push the mode switch  to  state.
1: Connect the USB-A port to computer USB port and Connect the Type-C port to keyboard;
- 2: Push the mode switch to  state for enter to wired USB device mode.
- Wireless 2.4G Version** ----- Push the mode switch  to **2.4G** state.
1: Switch the device to 2.4G mode;
- 2: If your want used this 2.4g device , you need connect the receiver  to USB port of computer first, that's important ;


- Wireless BT Version** ----- Push the mode switch  to **Bt** state.
1: Press the Fn and 1/2/3 key for enter to BT device Alice98-1/2/3 mode, one by one;
- 2: Long press 3 seconds for pairing to new device by bluetooth;
- 3: Press 1 time for re-connected to paired device by bluetooth ;
- 4: Press the Fn + 1/2/3 1 time, You can switch between Alice98-1/2/3 device;

FN+ Keys Function

Fn+	Windows		Mac	
	Function Key	Function	Function Key	Function
	ESC	Factory data reset (press 3S)	ESC	Factory data reset (press 3S)
	F1	Open my computer	F1	Screen luminance decrease
	F2	Open web home	F2	Screen luminance increase
	F3	calculator	F3	Multi-controller
	F4	Open default player	F4	Program listing
	F5	Previous track		
	F6	Next track		
	F7	Play/pause	F7	Previous track
	F8	Stop	F8	Play/pause
	F9	Mute	F9	Next track
	F10	Volume down	F10	Mute
	F11	Volume up	F11	Volume down
	F12	Open mail box	F12	Volume up
Fn+	Win-L	Win function lock & unlock		
	L	Backlight on /off switch	L	Backlight colour switch
	Volume key	Mute	Volume key	Mute
	Volume scroll to left	Volume down	Volume scroll to left	Volume down
	Volume scrolto right	Volume up	Volume scroll to right	Volume up
	Space	Backlight colour switch	Space	Backlight colour switch
	Page up	State lighting decrease	Page up	State lighting decrease
	Page down	State lighting increase	Page down	State lighting increase
	--	Speed up of backlight	--	Speed up of backlight
	==	Speed down of backlight	==	Speed down of backlight
	➤	Backlight colour switch	➤	Backlight colour switch
	➤	Backlight direction switch	➤	Backlight direction switch
	▲	State lighting decrease	▲	State lighting decrease
	▼	State lighting increase	▼	State lighting increase
	11	FEKER Alice98-1device	11	FEKER Alice98-1device
	2@	FEKER Alice98-2device	2@	FEKER Alice98-2device
	3#	FEKER Alice98-3device	3#	FEKER Alice98-3device
	4\$	2.4G device paired	4\$	2.4G device paired
	Del	Backlight mode switch	Del	Backlight mode switch
	-(Num)	Backlight reduce of trim strip	-(Num)	Backlight reduce of trim strip
	+(Num)	Backlight lighten of trim strip	+(Num)	Backlight lighten of trim strip

Battery status indicator Function

 On keyboard , the right side of lighting bar is for indicator of battery status



- Low battery** the right side of lighting bar's LED will lighting RED flash.
- Charging** the right side of lighting bar's LED will lighthing orange flash.
- Full charge** the right side of lighting bar's LED will lighthing orange of full.
- Battery data** Press FN+Ctrl-R, the lighting bar will showing the battery status current.

Device name description

- USB Version** FEKER Alice98
- 2.4G Version** Wireless Gaming Keyboard
- BT Version** FEKER Alice98-1
FEKER Alice98-2
FEKER Alice98-3

Electrical Specifications (for reference only)


Version	Item	Current(data)
USB	Wired constant lighting mode	≤350mA
	Wired constant Un-lighting	≤10mA
2.4 G	2.4G constant lighting mode	≤320mA
	2.4G sleep mode	≤0.03mA
Bluetooth	BT constantlighting mode	≤320mA
	BT sleep mode	≤0.03mA
Charge	Recharging mode	≤450mA

System Requirement

Compatible with Windows 2000 and above and Mac system.

FEKER

 
用户手册

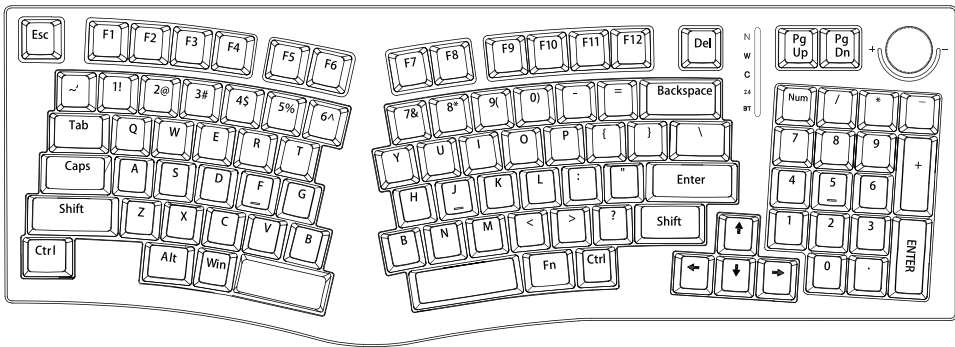

Alice-98

Alice布局人体工程学Gasket键盘

 波动开关与USB接口功能

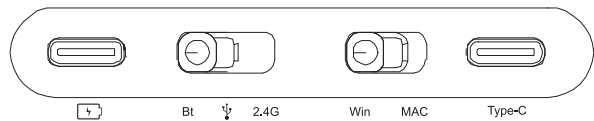

- Mac** 拨动此开关, 实现苹果 MAC 或 IOS 作系统功能;
- Win** 拨动此开关, 实现 Windows 操作系统功能;
- 2.4G** 拨动此开关, 实现切换至无线2.4G工作模式, 请注意此时需要插入USB接收器到USB端口;
- Bt** 拨动此开关, 实现切换至无线蓝牙工作模式, 请注意所用电脑是支持蓝牙联接的;
- Type-C** USB 线材正常的连接到键盘和电脑端, 可以实现USB 键盘工作(波动开关至位置)与仅给键盘电池充电(波动开关至0N位置)功能
-  USB 快充专用接口, 请注意你的线材是否支持快充功能

三种模式的连接功能

- USB 模式** ----- 模式开关  拨动至  位置

- 将USB线材的USB头插入到电脑端的USB接口上, 同时, 将Type-C插头插入到本键盘的Type-C接口上;
- 键盘USB接通后, 将拨动开关至  位置, 将键盘的工作模式切换至USB 模式下工作。

- 无线 2.4G 模式** ----- 模式开关  拨动至 **2.4G** 位置

- 将键盘的工作模式切换至无线2.4G模式下工作;;
- 使用无线2.4G模式, 首先需要将随机配送的USB接收器  正确的插入到电脑的USB接口上;

- 无线蓝牙模式** ----- 模式开关  拨动至 **Bt** 位置


- 键盘USB接通后, 同时按下FN和1/2/3键,将键盘的工作模式切换至无线蓝牙模式下的 ALICE 98 -1/2/3三个频道下工作 (最多可以同时蓝牙连接3台设备) ;
- 长按3秒 FN 和 1/2/3 键, 可以实现与新的设备间的蓝牙连接, 配对;
- 按压一次 FN 和 1/2/3 键, 可以实现与已蓝牙连接、配对的设备进行回联
- 按压 FN 和 1/2/3 键, 可以实现与已蓝牙连接、配对的设备间进行来回切换;

FN+复合键功能

Fn+	Windows系统		Mac系统	
	功能键	实现功能	功能键	实现功能
	ESC	恢复出厂设置 (长按3S)	ESC	恢复出厂设置 (长按3S)
	F1	打开我的电脑	F1	屏幕亮度降低
	F2	打开主页	F2	屏幕亮度增加
	F3	计算器	F3	多任务控制器
	F4	播放器	F4	程序列表
	F5	上一曲		
	F6	下一曲		
	F7	播放/暂停	F7	上一曲目
	F8	停止	F8	播放与暂停
	F9	静音	F9	下一曲目
	F10	音量降低	F10	静音
Fn+	F11	音量增加	F11	音量降低
	F12	打开邮箱	F12	音量增加
	Win-L	Win 锁定与解锁		
	L	键盘背光开/关	L	键盘背光颜色切换
	音量旋钮键	静音	音量旋钮键	静音
	音量旋钮轮向左	音量减小	音量旋钮轮向左	音量减小
	音量旋钮轮向右	音量增加	音量旋钮轮向右	音量增加
	Space	背光颜色切换	Space	背光颜色切换
	Page up	装饰条亮度增加	Page up	装饰条亮度增加
	Page down	装饰条亮度降低	Page down	装饰条亮度降低
	--	背光灯效速度加快	--	背光灯效速度加快
	+=	背光灯效速度降低	+=	背光灯效速度降低
	➤	背光颜色调节	➤	背光颜色调节
	➤	背光流动方向切换	➤	背光流动方向切换
	▲	背光亮度的增加	▲	背光亮度的增加
	▼	背光亮度的降低	▼	背光亮度的降低
	11	切换至蓝牙FEKER Alice98-1设备	11	切换至蓝牙FEKER Alice98-1设备
	2@	切换至蓝牙FEKER Alice98-2设备	2@	切换至蓝牙FEKER Alice98-2设备
	3#	切换至蓝牙FEKER Alice98-3设备	3#	切换至蓝牙FEKER Alice98-3设备
	4\$	切换至 无线2.4G 键盘	4\$	切换至 无线2.4G 键盘
	Del	背光模式切换	Del	背光模式切换
	-(Num)	饰条背光亮度的降低	-(Num)	饰条背光亮度的降低
	+(Num)	饰条背光亮度的增加	+(Num)	饰条背光亮度的增加

电量状态指示功能

 键盘右上角状态指示灯条, 将作为电量状况指示灯使用;



- 电量低** 当键盘的电量为低电量时, 灯条将作红灯慢闪烁, 提示需要充电;
- 充电中** 当键盘正在充电时, 灯条将闪/亮起橙色光, 并展示充电进度条;
- 充电完成** 当键盘充电完毕, 灯条全部亮起橙色光;
- 电量数据** 按压FN+CTRL-R, 灯条将显示当前电量, 每一个灯光代表20%电量, 显亮3秒/次;

三种模式下设备名称

- USB模式** FEKER Alice98
- 2.4G模式** Wireless Gaming Keyboard
- 蓝牙模式** FEKER Alice98-1
FEKER Alice98-2
FEKER Alice98-3

基本电性规格参数

模式	项目	电流(数据)
USB	USB亮灯工作模式下	≤350mA
	USB关灯工作模式下	≤10mA
2.4G	2.4G亮灯工作模式下	≤320mA
	2.4G待机模式下	≤0.03mA
蓝牙	蓝牙亮灯工作模式下	≤320mA
	蓝牙待机模式下	≤0.03mA
充电	充电模式	≤450mA

工作系统要求

- Windows** 要求在Windows2000或以上的版本系统下工作
- Mac** 要求在 Mac 10.5.1 或以上的版本系统下工作
IOS 10.1 或以上的版本系统下工作效果更佳