
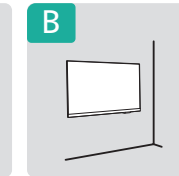
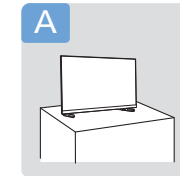
 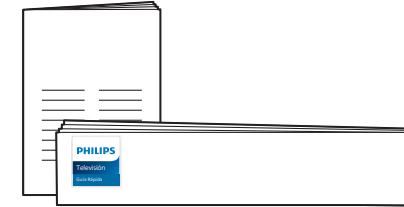

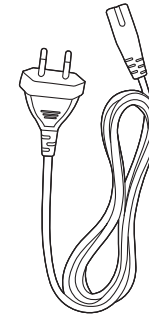
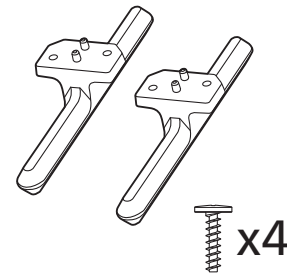


PHILIPS

 
 
Television

Quick Start Guide

6918 series



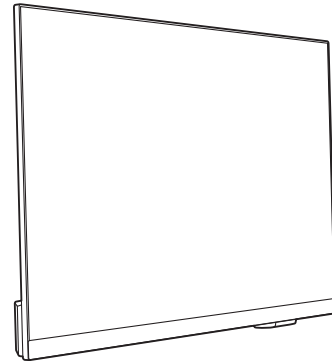


Register to find out more and get support
www.philips.com/TVsupport





A

 
32"/43"

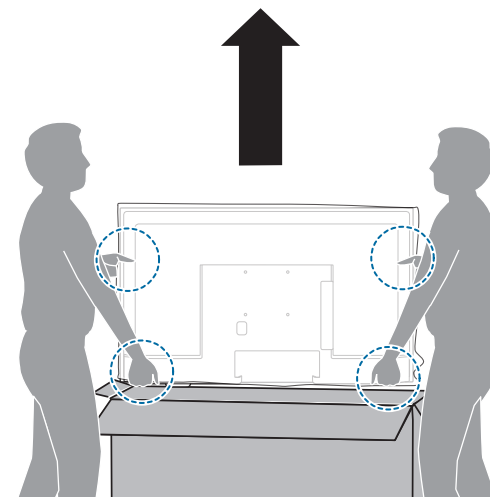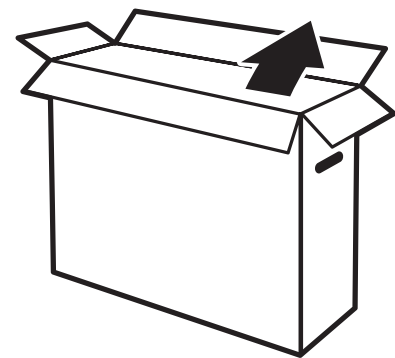


1

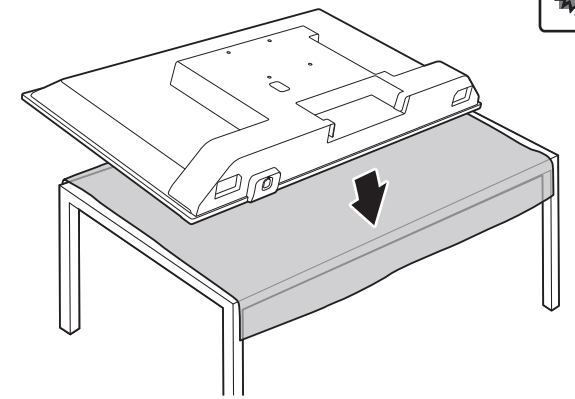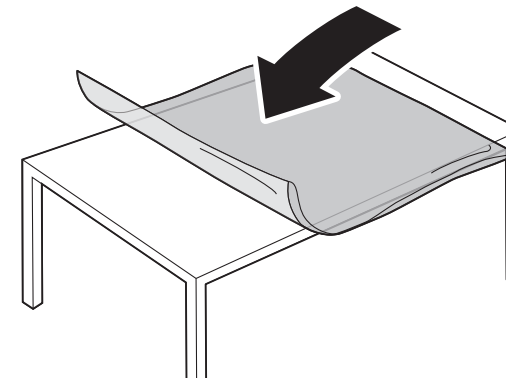


2

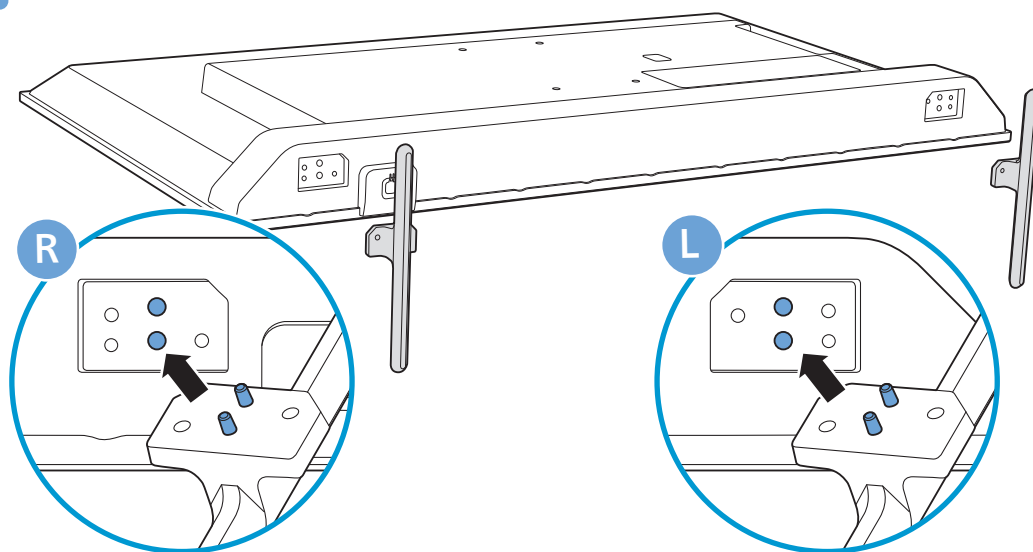

3

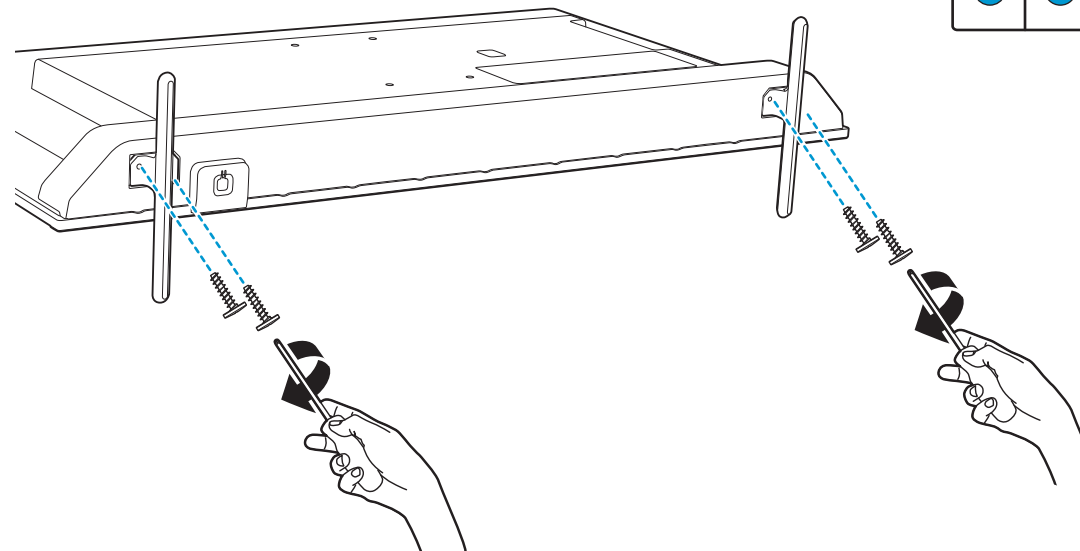

4

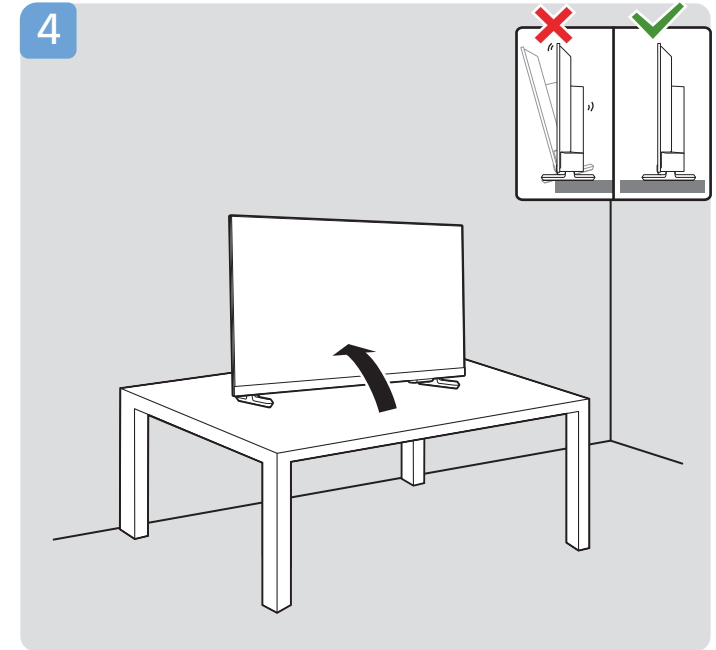

B


Diagram B shows a whiteboard placed against a wall. The distance from the left edge of the whiteboard to the left wall is 20 cm. The distance from the right edge of the whiteboard to the right wall is 20 cm. A red circle with an exclamation mark is on the left side.



80 cm







108 cm

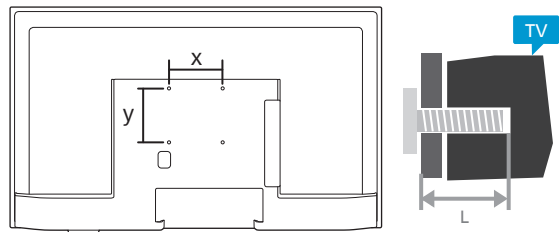

A diagram showing a rectangular block with a smaller rectangular piece being removed from its right end. An arrow points to the removed piece, which is labeled 'd'.



Click

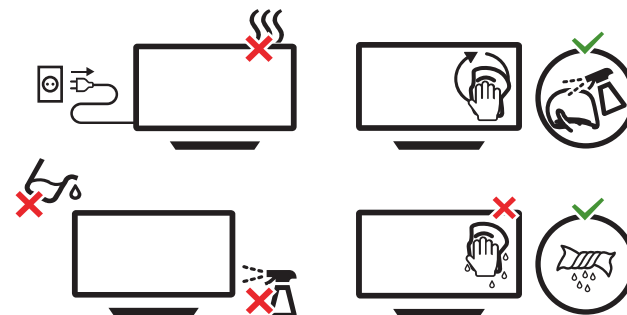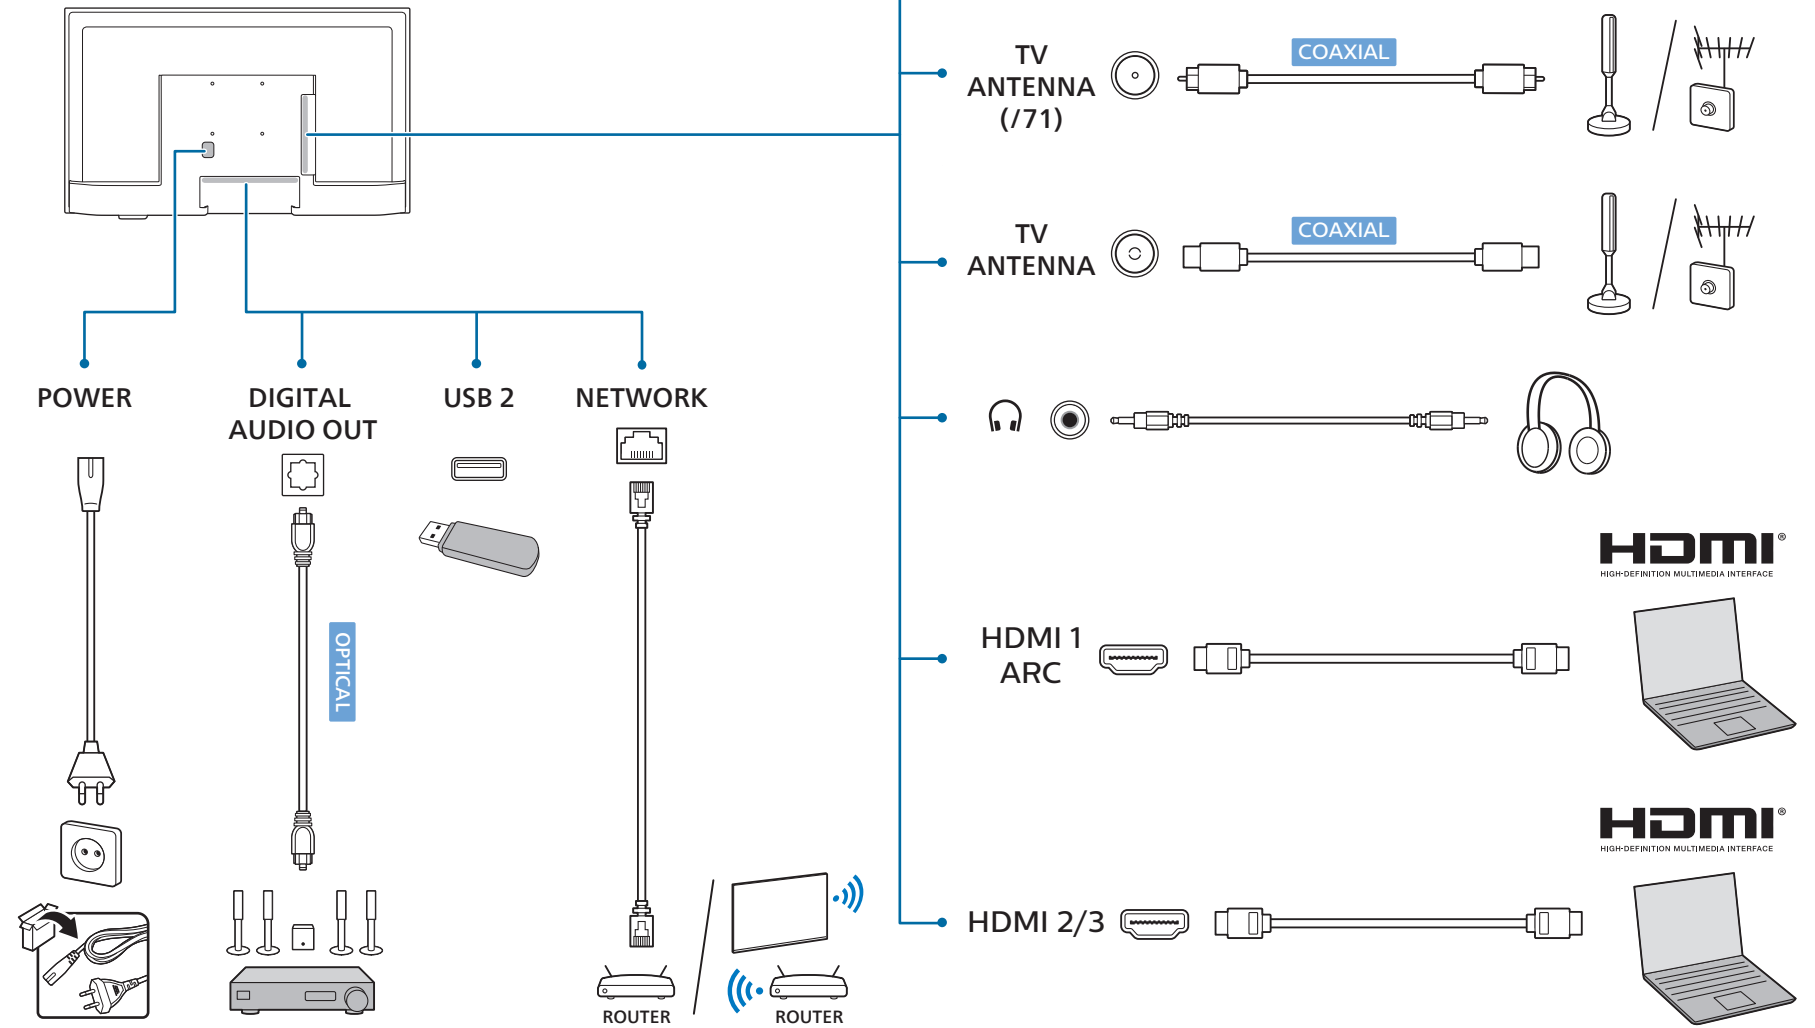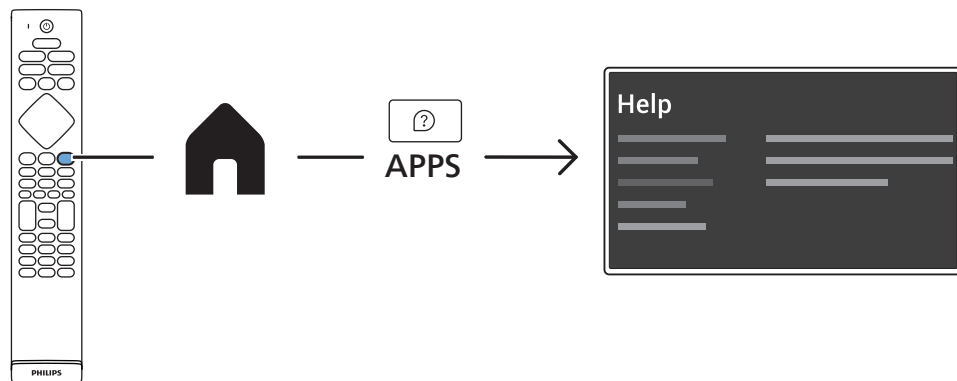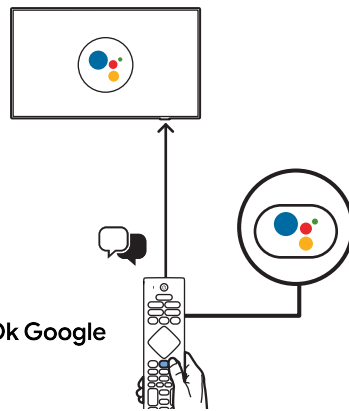

All registered and unregistered trademarks are property of their respective owners. Specifications are subject to change without notice. Philips and the Philips' shield emblem are trademarks of Koninklijke Philips N.V. and are used under license from Koninklijke Philips N.V. This product has been manufactured by and is sold under the responsibility of TP Vision Europe B.V., and TP Vision Europe B.V. is the warrantor in relation to this product. 2023 © TP Vision Europe B.V. All rights reserved.
www.philips.com/welcome