

 


User Manual of Mi Router 4A.

All images are for illustration purposes only and may differ from the actual product by model and region.

# List

 
 
 
English	3
Deutsche	9
Italiano	15
Español	21
Français	27
Русский	33
Українська	39
Português brasileiro	45
Türkçe	51
Polski	57

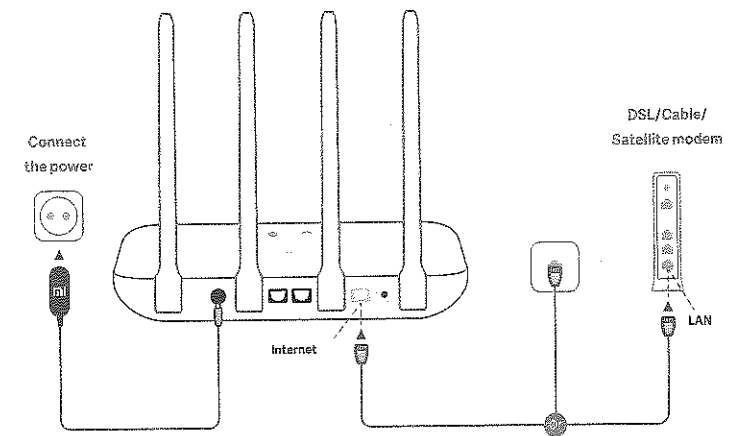**Step 1: Connect the cables**

**Power on the router, then connect the Internet (WAN) port to the DSL/Cable/satellite modem**

\* If your Internet network is connected by a network cable via the Internet wall socket, connect the cable directly to the router's WAN port

## Step 2: Set up the network connection

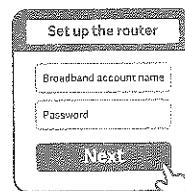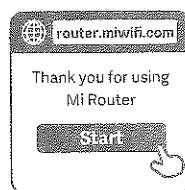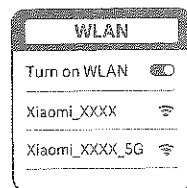

1

Connect to the Wi-Fi using a phone or computer (no password). Refer to the information on the bottom of the router for the Wi-Fi name

\* Wait until the system indicator light turns blue. Search for the Wi-Fi network and connect

2

 
 
 
Once the Wi-Fi is connected, you will be directed to the configuration page. If the configuration page is not present, open the browser and go to "router.miwifi.com" or "192.168.31.1" to complete the configuration

\* Mi Router EULA is available at  
-<http://www.miwifi.com/router/eula/20191230.html>

3

Enter the account name and password provided by your broadband provider, then click/tap Next (It depends on the Internet Service Provider you selected, whether your account name and password are required or not)

\* If you have forgotten your broadband account name or password, please contact your broadband provider

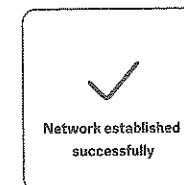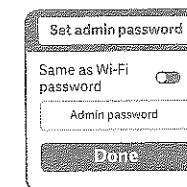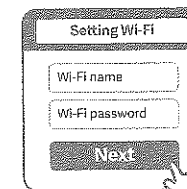

4

Set a new Wi-Fi and administrator password. You can choose to use your Wi-Fi password as your administrator password as well

\* Please wait until the indicator light turns blue and stops flashing, then reconnect to the Wi-Fi

## Manage Mi WiFi

The web management website is [router.miwifi.com](http://router.miwifi.com) and supports basic Internet functions

Scan the QR code, download the Mi WiFi app, and manage your router anytime, anywhere



QoS



Unauthorized access prevention



Wi-Fi optimization



More features

**I have finished setting up my network. Why can't I connect to the Internet?**

**Step 1:** Use your phone to search for the Wi-Fi network set by your router.

If you can't find it, make sure that the router is connected to the power and starts working normally.

**Step 2:** Connect your phone to your router's Wi-Fi network, go to "router.miwifi.com", and try to fix the problem based on the network diagnostics results.

**I've forgotten the administrator password for my router. What should I do?**

 
If you haven't set a specific password, your administrator password will be the same as your Wi-Fi password, so try using this to log in. If the problem persists, it is recommended that you restore your router to the factory settings, then set up the network again.

**How do I restore my router to the factory settings?**

First make sure that the router starts working normally, then hold down the Reset button at the base of the router for more than 5 seconds and let go when the system status light turns orange. When the router finishes restarting, the reset was successful.

**What do the different indicator lights mean on the router?**

There should be two indicator lights on the front panel, which are the network status light (blue light) and the system status light (three colors: blue, orange, and purple).

**Network status light**

Off

On

Flashing

**System status light**

Off

Orange

blue

purple

**Light with one color (blue)**

Nothing is plugged into the external Internet port or there is a problem with the connection.

Network connection normal

Sending or receiving data

**three colors (blue, orange, and purple)**

Switched off or not connected to the power

System updating (flashing), system booting up (on, not flashing)

Functioning normally (on, not flashing)

Safe mode (flashing), system failure (on, not flashing)

**Specifications:**

**Name:** Mi Router 4A

**Model:** R4AC

**Operating Temperature:** 0-40°C

**Input:** 12V, 0.6A

**Operating Frequency:** 2400MHz~2483.5MHz(≤20dBm), 5150MHz~5250MHz(≤23dBm)

**Note:** The network standby power consumption is 3.9 W. If all wired network ports are connected and all wireless network ports are activated.

**Certifications:**

Hereby, Xiaomi Communications Co., Ltd declares that the radio equipment type R4AC is in compliance with Directive 2014/53/EU, Directive 2011/65/EU and Directive 2009/125/EC. The full text of the EU declaration of conformity is available at the following internet address:

<http://www.mi.com/global/service/support/declaration.html>



All products bearing this symbol are waste electrical and electronic equipment (WEEE as in directive 2012/19/EU) which should not be mixed with unsorted household waste. Instead, you should protect human health and the environment by handing over your waste equipment to a designated collection point for the recycling of waste electrical and electronic equipment, appointed by the government or local authorities. Correct disposal and recycling will help prevent potential negative consequences to the environment and human health. Please contact the installer or local authorities for more information about the location as well as terms and conditions of such collection points.



**Caution:**

The product can be used within all European Union countries (BE/FR/DE/IT/LU/NL/DK/IE/GB/GR/PT/ES/AT/FI/SE/CY/CZ/EE/HU/LV/LT/MT/PL/SK/SI/BG/RO/HR).

To comply with CE RF exposure requirements, the device must be installed and operated 20cm (8 inches) or more between the product and all person's body.

The adapter shall be installed near the equipment and shall be easily accessible.

You can activate or deactivate the Wi-Fi network in the "Settings" of the management page (router.miwifi.com).

Manufactured by: Xiaomi Communications Co., Ltd  
#019, 9th Floor, Building 6, 33 Xierqi Middle Road, Haidian District, Beijing, China, 100085