


PERFORMANCE OPTIX

Setup Guide

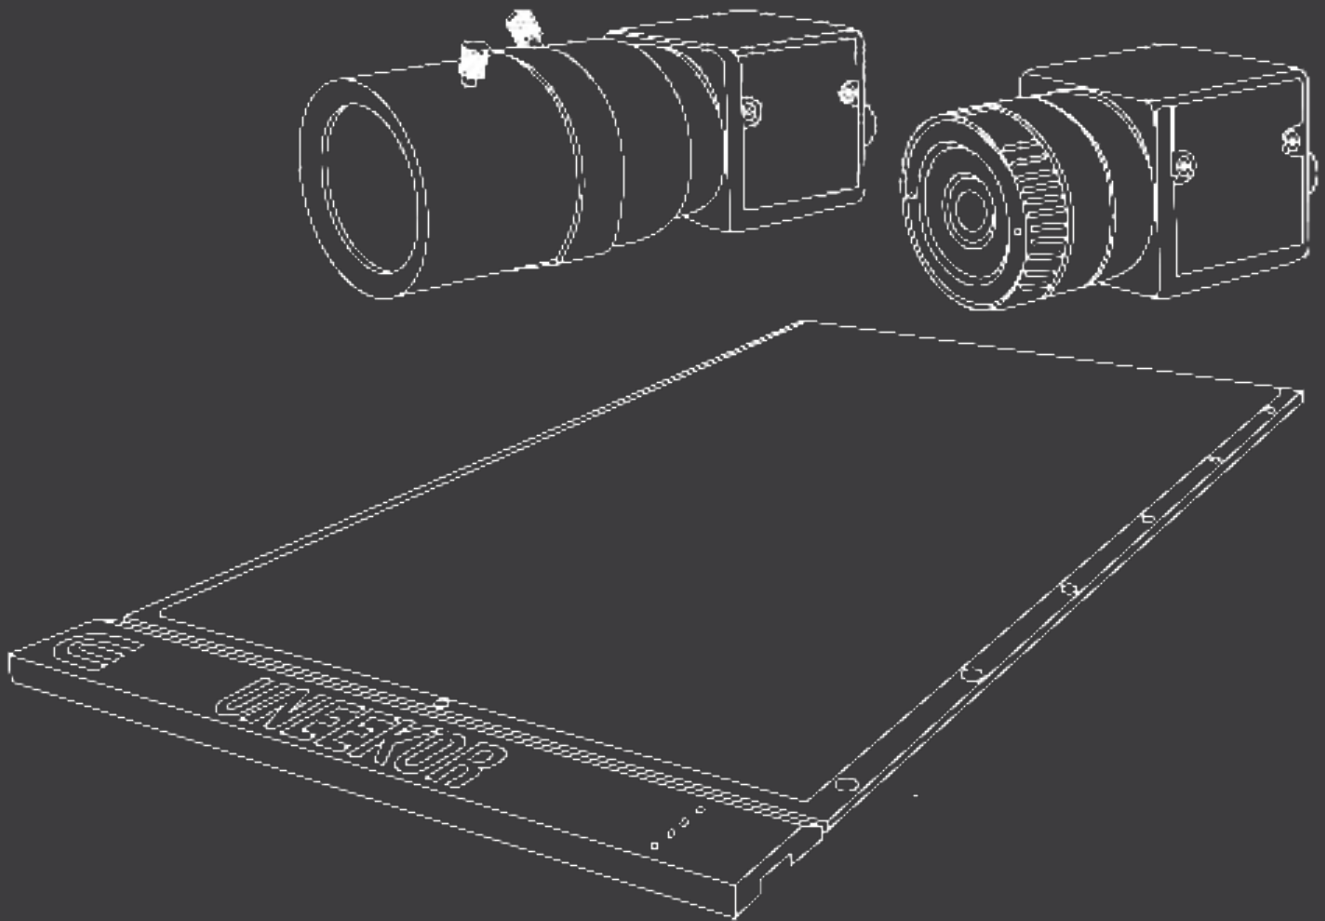

U UNEEKOR

Table of Contents

1. What's Included	4
2. Layout Recommendation	6
3. Swing Optix Installation	8
4. Balance Optix Installation	10
5. Product Activation	12
6. Swing Optix Focus	14
7. Additional Resources	16
8. Safety Information	18

What's Included?



Visit our support page
for more support options.



What's Included?

Swing Optix

- A. Camera Base (x2)
- B. Camera Bracket (x2)
- C. Telephoto Lens
- D. Fisheye Lens
- E. Screws x12
- F. 21' Micro USB 3.0 Cable
- G. 15' Micro USB 3.0 Cable
- H. 9' Micro USB 3.0 Cable

*Tripods not included.



Balance Optix

- A. Balance Optix Mat
- B. USB Cable
- C. Ethernet Cable
- D. USB to Ethernet Adapter
- E. Power Block




Layout Recommendation



Visit our support page
for more support options.



Layout Recommendation

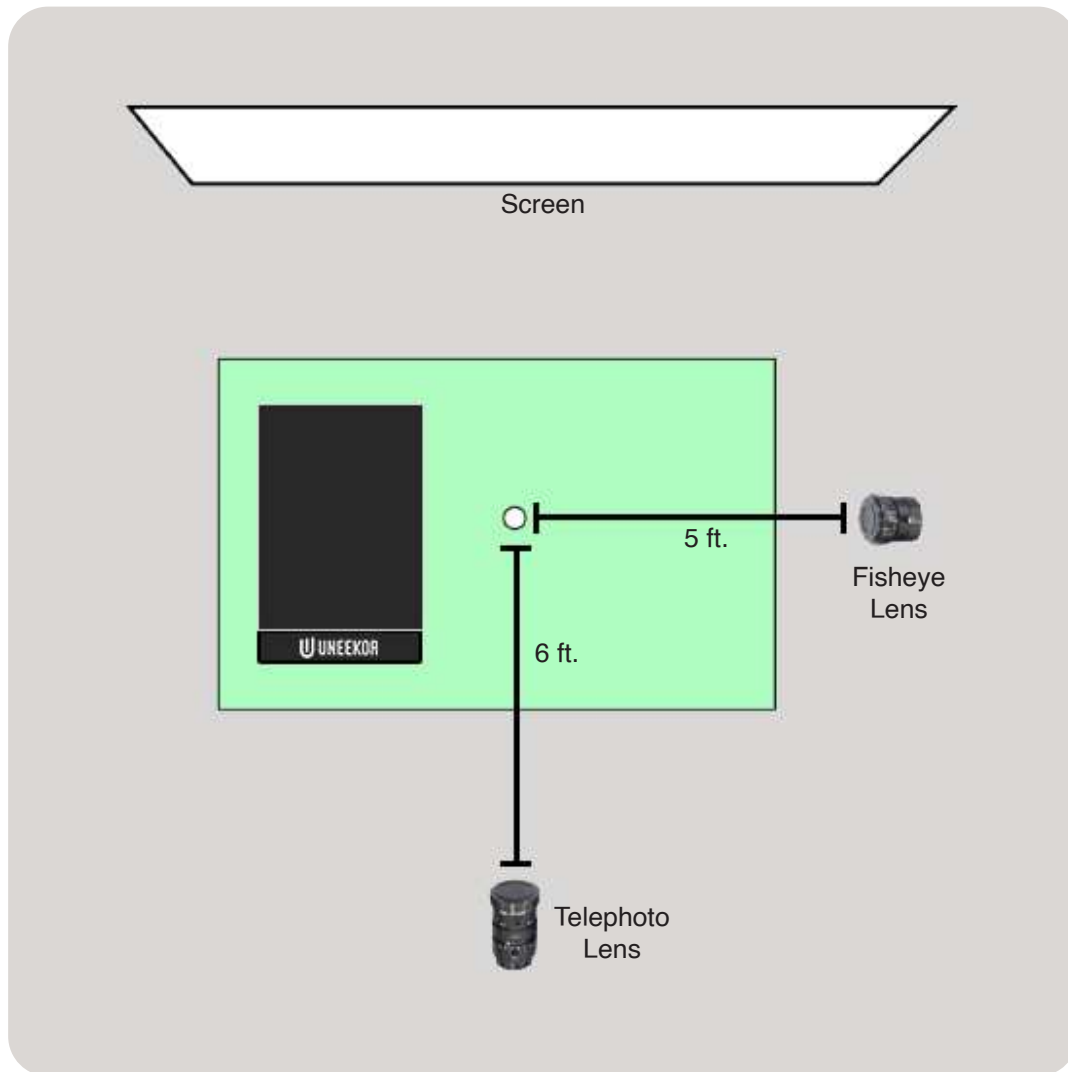

IMPORTANT:

- We recommend setting the cameras at hip height for optimal performance.
- Ensure that your entire body and club are visible.
- The 15' and 21' USB 3.0 cables cannot be extended as they already have a repeater.
- We recommend using an LED or Laser projector to prevent flickering in Swing Optix.
- Bulb Requirements: Light Appearance - 2700K to 3000K, Projector Lumens - 750-1000.
- Use flicker free bulbs if possible.

Swing Optix Installation



Visit our support page
for more support options.



Swing Optix Installation

1. Secure each camera base to their brackets by fastening four screws through each bracket into the camera bases.
2. Mount each camera onto their tripod stands. The camera must be oriented at 90 degrees to the left as shown in the photo.



3. Connect the appropriate USB 3.0 power cables to each camera and plug the other ends into USB 3.0 ports on your PC.
4. Please confirm that a blue light is on next to the 'Power' text on the cameras. If the light is red, please check your USB connection or try a different USB port.

USB 3.0 ports will have an "SS" on them or be blue, red, or orange.



Balance Optix Installation



Visit our support page
for more support options.



Balance Optix Installation

1. Connect both the USB and Ethernet cables to the end of the Balance Optix mat.



2. Connect USB power cable to an outlet using the provided power block.



3. Connect Ethernet cable to your PC using the USB to Ethernet adapter provided. Please make sure to use USB 2.0 or higher.

If you do not have a second Ethernet port, you must use the provided USB adapter.



4. Once powered, the four lights on the Balance Optix mat will illuminate.

All four lights on the Balance Optix mat indicate proper power. If they are not illuminated, there may be a power issue.



Product Activation



Visit our support page
for more support options.



Product Activation

After connecting your Performance Optix pack, please follow these steps to register and activate the devices.

1. Create or login to your account at my.uneekor.com.
2. Download and install Uneekor Launcher. [Launcher Install File](#).
3. Please ensure that your Uneekor Swing Optix cameras and Balance Optix mat are connected.
4. Navigate to 'Devices' in Launcher.
5. Launcher will automatically detect your Swing Optix cameras and Balance Optix mat.
6. Select both Swing Optix cameras and the Balance Optix mat and press 'Register.'
7. Once both products are registered, launch View.

Swing Optix Focus



Visit our support page
for more support options.



Focusing Swing Optix

1. The telephoto lens (down the line) features 3 action points.

1. Zoom (Outermost Cylinder): Adjust this cylinder to zoom in or out.
2. Aperture (Middle Cylinder): Use this cylinder to control the amount of light entering the lens.
3. Focus (Innermost Cylinder): Rotate this cylinder to focus the lens.



2. First, adjust the middle cylinder to set the aperture, allowing the right amount of light into the lens.

Next, use the outermost cylinder to zoom in or out, ensuring your entire body and club are visible.

Finally, rotate the innermost cylinder to focus the lens for a sharp and clear image.



3. To configure the brightness and access additional settings, navigate to the 'Swing' tab in View and select 'Settings'.

You can adjust the camera's exposure, gamma, brightness, and contrast in this menu.



Additional Resources



Visit our support page
for more support options.



Additional Resources

Below are additional links that you may find useful.

Unekor Launcher - [link](#)

my.unekor.com - [link](#)

Warranty Policy - [link](#)

FAQ - [link](#)

Safety Information



Visit our support page
for more support options.



Safety Information

Improper handling or operation of this machine may result in injury or damage to property. Points which must be observed to prevent injury or damage are described as follows.

Used for instructions intended to alert the user to the risk of injury or material damage should the unit be used improperly. Material damage refers to damage to home, furnishing, or anything within the unit's vicinity.

Install in a level and stable location. Failure to do so may result in falling, leading to injury.

Never attempt to disassemble, repair, or modify. Entrust repairs to a trained technician.

Never use outside or in any location where exposure to water or high humidity may occur. Do not touch the power cord or electrical outlet with wet or dirty hands. Doing so may result in electrical shock.

Conduct play in a clean and brightly lit location. Operating in a dark or cluttered space may lead to accidents.

Be aware of your surroundings and use cautiously with children around. Swinging the club during play without being aware will result in serious injury or death.

