

YOUR NEW WIRELESS GENIE® MINI IS HERE!



Here's how to connect and activate your Wireless Genie Mini so you can enjoy the best in video entertainment.

1

Connect

2

Setup

3

Activate

4

Program



1 CONNECT YOUR WIRELESS GENIE® MINI

- Connect the HDMI cable from your TV to your new Genie Mini.
- Plug the power cord into the Genie Mini, then into a power outlet. If it doesn't automatically power up, press the POWER button.
- Turn on your TV. The CONNECTING TO VIDEO BRIDGE screen will appear.

2 SETUP

Go to the Genie 2 Server.

- Press and release the ADD CLIENT button on top. It will start flashing GREEN.

Note: The ADD CLIENT button will time out in 20 minutes. If you need more time, press it again.

Go back to your new Wireless Genie Mini:

- You should see the CONNECT TO VIDEO BRIDGE screen.
- If the signal quality is good or excellent, select CONNECT NOW; otherwise, try moving the Client closer to the Genie® 2 Server or call Customer Care at **800.531.5000**.
- Follow the guided setup instructions.

Note: The new Genie Mini may display a flashing red LED and the screen may flash gray intermittently during this setup step.

- Once the guided setup is complete, select WATCH TV.

3 ACTIVATE YOUR REPLACEMENT GENIE MINI

 Go to directv.com/activate and sign in, then follow the instructions, OR

 Call **800.388.6597** for our automated activation line.

4 PROGRAM YOUR REMOTE CONTROL

If you are prompted to program your remote control, follow the on-screen instructions or go to directv.com/programremote

For more information, go to directv.com/support

Tip: Search "Wireless Genie Mini"



Instructions can be found online at directv.com/equipmentinstall or by scanning the QR code.

