




Original	Replacement	Original	Replacement
	Power		Up
	16: 9 / W de		Left
	Mute		OK
	1		Right
	2		Down
	3		Vol +
	4		Menu
	5		CH+ / Page+
	6		Vol -
	7		Source
	8		CH -
	9		Info
	0		Sleep
	F1		Recall
	Smart S		L / R
	Smart P		Index / Play
	Picture / Format		Index / Play
	Mute / Dimmer		Display / Media
	1		
	2		
	3		
	4		
	5		
	6		
	7		
	8		
	9		
	0		
	Exit / Cancel / Clear		
	D. Menu / Top		
	Sound / Title		
	Shift + Picture / Format		

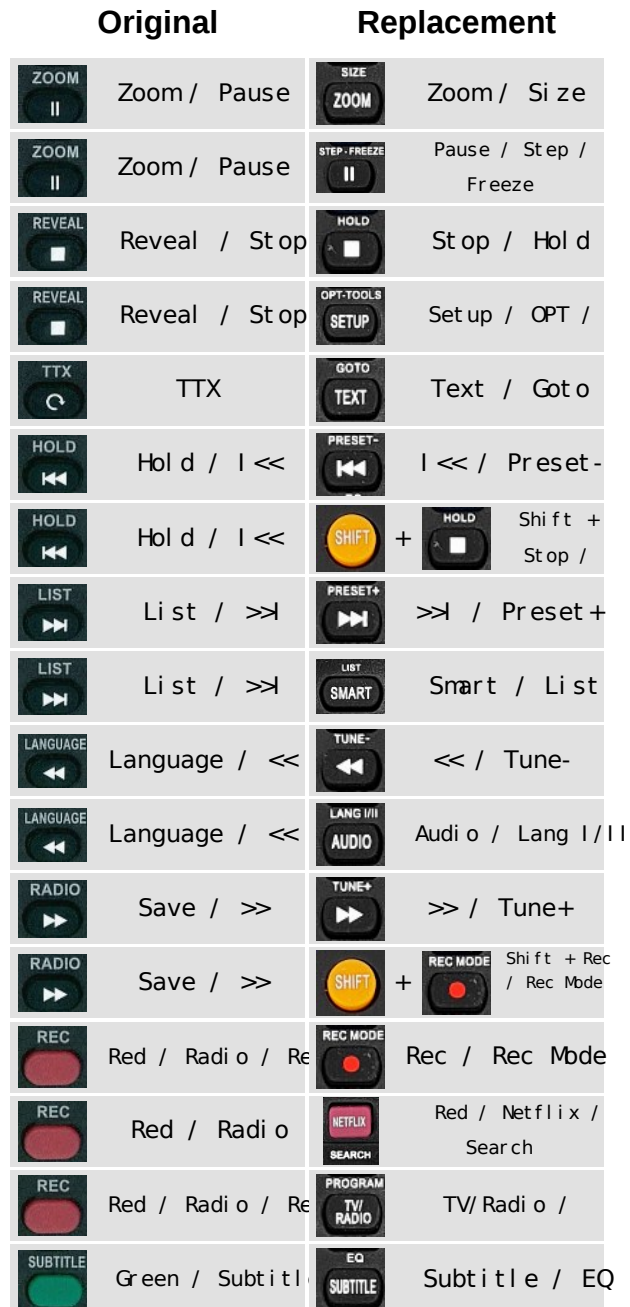

[illegible]