

# 多国语言说明书 Multilingual specification

## LogEt 6



# 目录 Directory

1.	中文说明书	0 1
2.	English instruction manual	02

## 安全说明及注意事项

### 1、安全说明

为确保您正确安装使用本产品,请认真阅读并严格遵守以下条款:

电池  ▲ 请使用原装或符合技术参数的电池,不可使用不符合产品参数的电池,以防损害设备或引起其他故障电池  ▲ 不可私拆、挤压、击打、加热电池,也不可将电池置于火中,不然可能引起电池爆炸,引发火灾  ▲ 需要外部供电时,请使用本设备配置的电源适配器,不可使用其他不符外接合技术规格的电源适配器,否则可能损坏仪器设备,甚至导致引起火灾电源  ▲ 如果长期不使用设备,应切断外部电源,防止烧毁设备、引起火灾,并每月给设备做一次充放电维护,保持锂电池的活性  ▲ 在易燃、易爆气体环境中,谨慎使用该设备,否则可能引起爆炸、火灾设备  ▲ 使用设备过程中,如果设备发出烧焦等异味,应立刻切断设备电源,并及时联系厂家或供应商		
规格的电源适配器,否则可能损坏仪器设备,甚至导致引起火灾电源	电池	备或引起其他故障电池 本不可私拆、挤压、击打、加热电池,也不可将电池置于火中,不然可能引起电池爆
设备 ▲ 使用设备过程中,如果设备发出烧焦等异味,应立刻切断设备电源,并及时联系厂	外接电源	规格的电源适配器,否则可能损坏仪器设备,甚至导致引起火灾电源 ▲ 如果长期不使用设备,应切断外部电源,防止烧毁设备、引起火灾,并每月给设备
	设备	▲ 使用设备过程中,如果设备发出烧焦等异味,应立刻切断设备电源,并及时联系厂

### 2、注意事项 • 设备若长期不使用,应取下存放在包装盒内并存放于干燥、阴凉的环境中。

- 用户不可对本设备做任何未经许可的更改。任何未经许可的更改都可能影响设备的精度、甚至损坏本
- 设备 • 不要将设备置于恶劣环境使用,以免雨水、雷电等恶劣天气导致仪器短路、烧毁等故障。
- 请在记录仪测量范围内使用
- 请误将外置探头直接放置于液体环境中,以免设备损坏
- 请勿用力冲击本记录仪

• 当记录仪处于离线状态时(无数据上传),请确认设备的联网状态;

- 记录仪各测量值可能会受如下因素影响:

- 放置在测量环境中稳定时间太短; • 靠近热源、冷源或直接处于水淋状态下;


- 放置在测量环境中稳定时间太短; • 长期处于蒸汽、水雾、水帘或冷凝环境中;
- 污染

- 处于粉尘或其他污染环境中

-、产品概述及外观 LogEt 6是一款内置探头的一次性干冰记录仪。标配超低温传感器,可整机直接在-85°C环境下进行温度

# 记录。可通过数据中心软件导出报告或者自动生成PDF文件,16000组存储,30天续航,2年货架期,并且支持前后影子数据功能。广泛应用冷冻箱、医药保温箱、实验室等场景。

1 (2)

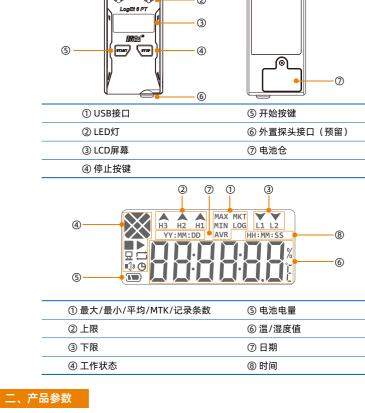

LogEt 6

内置超低温(干冰)

-85°C ~ 50°C

### 产品配置 探头类型

温度测量范围

防护等级

工作环境

产品尺寸(高\*长\*宽)

## 探头线长

产品选型 产品型号

温风水至70四	05 0 50 0
温度测量精度	±0.5℃(-20℃~40℃);±1℃(其他)
温度分辨率	0.1℃
技术参数	
存储容量/条	16000
数据接口	USB A
电池类型	LS14250锂电池
货架期	2年
电池续航	30天(记录间隔5min)
通讯模块/方式	USB接口

IP65

100\*46\*19mm

-85°C ~ 50°C

15. 温度下限

16. 最大湿度

17. 最小湿度

18. 平均湿度

19. 当前日期/时间

20. 传感器异常

21. PDF读取中

22. 无报警

23. 报警

## 物理按键 开启/停止 报警方式 影子数据 前置+后置影子数据 适配软件 精创数据中心 E、操作说明 按键功能: 开始按键:在正常显示模式下,单按开始键显示当前温度,继续按切换温度数据、日期时间、记录条数、 最大值、最小值;长按5s开始记录; 停止按键:长按5s停止记录; 1、图例状态指示: 1. 定时开启/延时开启 14. 湿度上限 28

28

308

16000

588

28

80

80

**60**0

500

400

# 8. 平均温度

2. 未开启

3. 已开启

4. 记录条数

5. 最大温度

6. 最小温度

9. 温度上限3

10. 温度上限2

11. 温度上限1

	(100)
13. 温度下限2	
四、软件操作	
1、下载软件:	
下载并安装《精创数据中心》	软件www.e-elitech

	( <del>-</del>	
12. 温度下限1	24. 标记	
13. 温度下限2	25. USB通讯	
四、软件操作		
1、下载软件:		
下载并安装《精创数据中心》软件www.e-elitech.com/xiazaizhongxin(中国)、www.elitechlog.com/softwares(其他国家)		
2、读取数据		
① 使用USB接口链接电脑。 ② 打开《精创数据中心》等待链接完成。 ③ 直接在我的电脑打开PDF文件或者是打开《精创数据中心》概要/历史数据,查看数据。		
▲ 注意: 无需《精创数据中心》软件亦可直接读取数据 设备从低温环境下拿出来后需要静置一段时间,等待	寺恢复至室温 <i>,</i> LCD屏幕才会显示数据	

无需《精创数据中心》软件亦可直接读取数据 设备从低温环境下拿出来后需要静置一段时间, 3. 异出数据

五、配件列表

# 五、保修及售后服务

点击概要/历史数据,选择导出数据,选择需要导出的格式。

主机\*1、说明书(电子版)、校准证书(电子版)

# 产品质保: 1年 本产品自购买之日起7日内因性能故障,可以选择退货、更换或维修。保修期自购买之日起一年(以有较购买凭证为准),在保修期间,凡属于正常使用情况下产品本身质量问题引起的故障,将予以免费维修。 维修产品的邮寄费用由发送方单向承担。

符合以下情形之一则不在售后保障范围内: 1.因不可抗力造成损坏的,如地震、火灾、洪水、台风等; 2.消费者因使用、维护、保管不当等人为因素造成损坏的;

- 3.非精创服务人员或授权服务商检修、拆卸等造成损坏的; 4.超出保修期限和保修范围;
- 5.产品自然磨损,消耗及老化等(如外壳、线缆等)。

880\*

588

638°

38°

~53B

180606

: 10**5**028

.PdF 88

: USb

保修期自购买之日起一年(以有效

### Safety instructions and precautions

### 1. Safety instructions

To ensure that you install and use this product correctly, please read and strictly comply with the following terms:

A Please use original or technically compatible batteries. Do not use batteries that do not meet product specifications to prevent damage to equipment or other malfunctions. Battery ▲ Do not disassemble, squeeze, hit, or heat batteries privately, and do not place batteries in fire, as this may cause battery explosions and fires ⚠ When external power supply is required, please use the power adapter configured for this device. External ▲ Do not use other power adapters that do not meet the external connection technical power supply: specifications, otherwise it may damage the instrument and equipment, and even cause a fire power supply In flammable and explosive gas environments, please use this equipment in accordance with compliance requirements, otherwise it may cause explosions and fires During the use of the device, if the device emits a burnt or other odor, the power supply Equipment should be immediately cut off and the manufacturer or supplier should be contacted in a timely manner

### 2. Attention: • If the equipment is not used for a long time, it should be removed and stored in the packaging box in a dry

- Users are not allowed to make any unauthorized changes to this device. Any unauthorized changes may
- affect the accuracy of the device and even damage it • Do not use the device in harsh environments to avoid instrument short circuits, burns, and other
- malfunctions caused by adverse weather conditions such as rain and lightning When the recorder is offline (no data upload), please confirm the networking status of the device
- Please use within the measurement range of the recorder Please mistakenly place the external probe directly in a liquid environment to avoid equipment damage
- · Please do not forcefully impact this recorder The measured values of the recorder may be affected by the following factors
- Placed in the measurement environment for too short a stable time • Close to heat sources, cold sources, or directly in a water soaked state

### **Humidity error:** Placed in the measurement environment for too short a stable time

- Long term exposure to steam, water mist, water curtains, or condensation environments
- Pollution:


1.Product Overview and Appearance

• Being in a dusty or other polluted environment

### standard, the entire machine can directly record temperature in an environment of -85 ° C. It can export reports or automatically generate PDF files through data center software, with 16000 sets of storage, 30

days of battery life, 2 years of shelf life, and support for shadow data function before and after. Widely used in freezers, medical insulation boxes, laboratories, and other scenarios. 1 (2)

LogEt 6 is a disposable dry ice recorder with a built-in probe. Equipped with ultra-low temperature sensors as

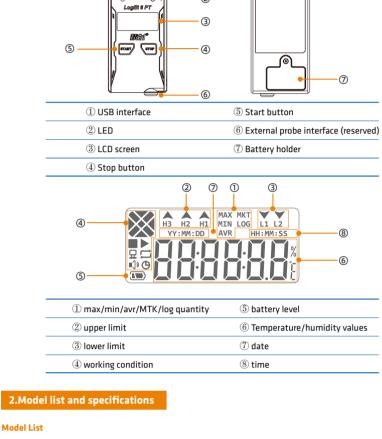

### probe Type Main sensor parameters

Temperature measurement accuracy

# Temperature measurement range

Model

configuration

Temperature resolution	0.1 C		
Specifications			
Storage capacity	16000		
Data interface	USB A		
Battery	LS14250 lithium battery		
Shelf-life	2Years		
Battery life	30Days (log interval5min)		
Communication module/mode	USB interface		
Protection grade	IP65		
Product dimensions (height*length*width)	100*46*19mm		

60g

LED Elitechlog

-85°C~50°C

Start/Stop

15. Low humidity limit

16. Maximum humidity

17. Minimum humidity

18. Average humidity

19. Current date 8 time

21. PDF generation progress

20. Sensor error

22. No alarm

588°

638°

38°

538°

1**8**0606

105028

PdF 88

Err

V1.N

LogEt 6

temperature sensor -85 C ~50 C

Built in ultra-low temperature (dry ice)

±0.5°C (-20°C~40°C); ±1°C (other)

2. Not start

3. Started

7. MKT value

4. Recorded points

5. Maximum temperature

6. Minimum temperature

Weight

Work environment

Adaptation software

3.Operating instructions

Physical buttons

Alarm method

Start button: In normal display mode, press the start button to display the current temperature, and continue  $pressing \ to \ switch \ temperature \ data, \ date \ and \ time, \ number \ of \ records, \ maximum \ value, \ and \ minimum \ value;$ Press and hold for 5 seconds to start recording; Stop button: Long press for 5 seconds to stop recording; 1. Legend status indication: 1. Timed start/Delay start 14. High humidity limit 88.C\* 28

28

308

16000

588

28

80

80

**60**0

**50**0

**40**0

## 8. Average temperature 9. High temperature limit 3

10. High temperature limit 2

11. High temperature limit 1

12. Low temperature limit 1	
13. Low temperature limit 2	<u>2</u> ŏ
46.6	
4.Software operation	
1. Download software:	
Download and install the "Jingch www.elitechlog.com/software (	-

	· · · · · · · · · · · · · · · · · · ·
23. Alarmed	×
24. Marked	Þ¥1
25.USB communicating	:USb
www.e-elitech.com/xiazaizhongxin	(China),
o complete. mmary/historical data of "Jingchuar	ng Data Center" to

### ② Open the "Jingchuang Data Center" and wait for the link to ③ Open the PDF file directly on my computer or open the sur view the data.

2. Read data

3. Export data

After the device is taken out of a low-temperature environment, it needs to be left to stand for a period of time and wait for it to return to room temperature before the LCD screen displays data

① Connect the computer using a USB interface

Click on Summary/Historical Data, select Export Data, and choose the format to export

5. Accessories List Host \* 1, instruction manual (electronic version), calibration certificate (electronic version)

Data can be directly read without the need for the "Jingchuang Data Center" software

6.Warranty and after-sales service Product warranty: 1 year

### This product can be returned, replaced or repaired within 7 days from the date of purchase due to performance failure. The warranty period is one year from the date of purchase (based on valid purchase receipts). During the warranty period, any malfunctions caused by quality problems of the product under

normal use will be repaired free of charge. The shipping cost for repairing the product shall be borne unilaterally by the sender. If any of the following situations are met, it is not within the scope of after-sales guarantee: 1. Damage caused by force majeure, such as earthquakes, fires, floods, typhoons, etc; 2. Damage caused by human factors such as improper use, maintenance, and storage by consumers;

3. Damage caused by maintenance, disassembly, etc. by non precision service personnel or authorized

service providers; 4. Exceeding the warranty period and scope;

5. Natural wear and tear, consumption, and aging of products (such as shells, cables, etc.).