



Originale	Sostituto
 Power	 Power
 123 / keypad	 3D
 Extra	 Media
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 OK	 Ok
 Return	 Back
 Home	 Smart
 Play / Pause	 Shift + Play
 Vol Down	 Vol -
 Vol Up	 Vol +
 CH Down	 Ch -
 CH Up	 Ch +
 Pause	 Pause
 Play	 Play

Originale	Sostituto
 Guide	 Guide
 Source	 AV
 Mute	 Mute
 TTX/MIX	 Text
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 PRE-CH	 Pre Ch
 Exit	 Exit
 Info	 Info





Originale	Sostituto	
Menu		Menu
Red		Red
Green		Green
Yellow		Yellow
Blue		Blue
Tools		Options
Stop		Stop
Rec		Rec
<<		<<
I<<		I<<
>>		>>
>>I		>>I
CH List		List
AD / Subt.		Subt
E-Manual		D. Menu
Sleep		Sleep
Dual I-II		Dual

Originale	Sostituto	
TV / DTV		TV/R
Auto Prog		Eject
P.Size		Format
Add / Del		Shift + Eject
Fav CH		Shift + Pre Ch
Still		Shift + Pause
Media P.		Shift + Media
AD		Shift + Subt
-/--		Shift + Guide
Search		Shift + TV/R
Picture		Shift + Format
S.Mode		Shift + Dual

