 



URC 6820

ENGLISH SIMPLE SET UP GUIDE


WELCOME, PREPARE YOUR REMOTE FOR INSTALLATION

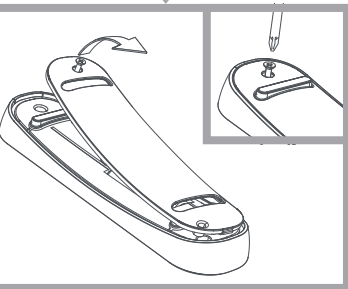

 Open the battery door.

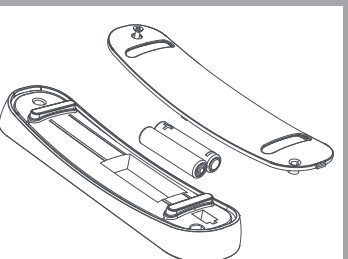

Insert 2 AAA batteries.

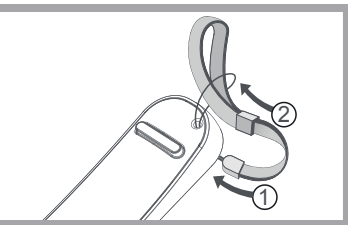 

PRODUCT DISPOSAL

(EUROPEAN DIRECTIVE 2002/96/EC)

The crossed out wheeled bin symbol on this product ensures that this product is manufactured using high quality components that can be recycled and reused according European Directive 2002/96/EC. Please do not dispose this product with your normal household waste but inform yourself about the local separate collection for electrical and electronic products to dispose this product correctly. This will help preventing potential negative effects on the environment and/or human health.

BATTERY DISPOSAL

(EUROPEAN DIRECTIVE 2006/66/EC)

Please do not dispose your batteries with your normal household waste but inform yourself about the local separate collection for empty batteries to dispose them correctly. This will help preventing potential negative effects on the environment and/or human health.

UNIVERSAL ELECTRONICS INC/ONE FOR ALL warrants to the original purchaser that this product will be free from defects in materials and workmanship under normal and correct use for a period of one (1) year from the date of original purchase. This product will be replaced free of charge if it has been proven to be defective within the one (1) year warranty period. This warranty does not cover cartons, carrying cases, batteries, broken or marred cabinets or any other item used in connection with the product. Any further obligation than listed above is excluded. Please notice that we need your purchase receipt so that we may establish your eligibility for service. If you have bought this product for purposes which are not related to your trade, business or profession, please remember that you may have legal rights under your national legislation governing the sale of consumer goods. This guarantee does not affect those rights.

UK
www.oneforall.com

Ireland
www.oneforall.com

South Africa
0861 100551
support@oneforall.co.za
www.connoisseur.co.za
www.oneforall.com

New Zealand
0800 1425569
sales@amber.co.nz
www.amber.co.nz
www.oneforall.com

Australia
1 300 888 298
ofa.support@ambertech.com.au
www.ambertech.com.au
www.oneforall.com



www.ofa.com/urc6820

Universal Electronics BV –
Europe & International
The Netherlands
RDN-1300415
710335

Thank you for purchasing the One For All Zapper+.

The remote features the most commonly used keys for control of your home entertainment devices, which can be customised using the handy learning feature to perform exactly the way you need them to.

You could for example just learn the volume, power and channels of your TV in the kitchen, or combine the control of your TV, Set Top Box and even Sound Bar in the living room. There are also 2 Power keys for combining more than one device together on a single remote.

KEY TABLE

TV Power

Set Top Box Power

TV Guide / EPG

Menu selection

Up, Down,
Left, Right, OK–
Navigate the TV Guide

Mute


Volume Up,
Volume Down

Channel Up,
Channel Down

Digits 0-9

Select the Input
on your TV

 Menu Exit

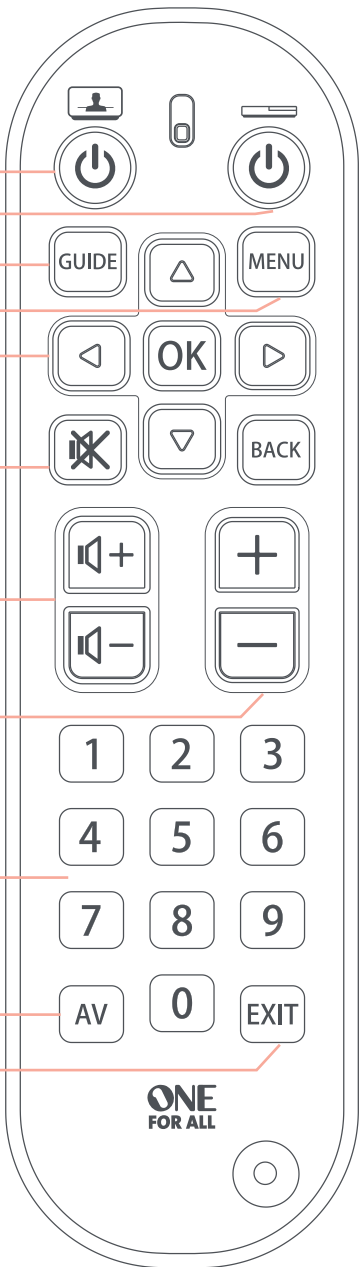


HOW TO SET UP YOUR REMOTE

A - LEARNING

Your One For All remote control can learn any function from any other working remote control. This is a quick and easy one-time setup that will allow you to control one or more of your home entertainment devices, and even combine multiple devices in one easy to use remote control – for example you could teach the volume keys to control your Sound Bar, the TV Power and AV keys to control your TV, and the rest of the keys to control your Set Top Box (Satellite, Cable or Freeview Receiver).

 To do this, firstly make sure you have all your original remote controls to hand, and that they have working batteries in. To learn functions, the original remote should be approximately 3cm from the OFA remote, pointing towards it as shown below:

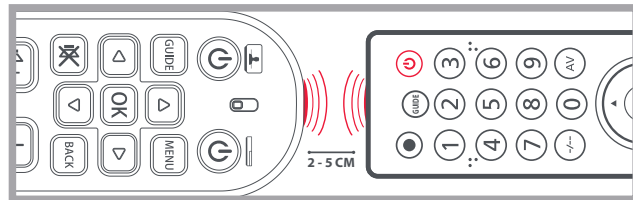

1. Hold down AV and Exit until the red LED blinks twice.
2. Press and release the key you want to learn a function onto (for example the TV Power key) – The red LED will blink continuously.
3. Press and release* the corresponding key on the original remote, for example Power.
4. The red LED will blink twice to indicate the key has been learned correctly.
5. Repeat steps 2 and 3 for each key you want to learn – remember you can learn from multiple remotes, but only one function per key.
6. When you learned all the functions you require, press and hold the OK key until the red LED blinks twice.

Hints

- If the red LED shows one long blink at step 4, the function was not learned correctly, please try again from step 2.
- If you find one or more keys don't work properly after set up, you can re-enter the learning mode at any time by repeating the procedure from step 1.
- To delete a learned function, hold down Guide and Menu until the red LED blinks twice, and press the key to delete twice.
- If one or more of your original remotes aren't working, you can still set up the One For All remote by SimpleSet (B) or Code Set Up (C).

* Some remotes send commands differently. If you find a function cannot be learned, try holding down the key on the original remote instead of pressing and releasing.

HOW TO SET UP YOUR REMOTE

B – SIMPLESET

If the brand of your device is listed below, you can also set up your device using the One For All SimpleSet system:

TV

- 1 **Bush**
- 2 **Grundig**
- 3 **LG**
- 4 **Panasonic**
- 5 **Philips**
- 6 **Samsung**
- 7 **Sharp**
- 8 **Sony**
- 9 **Thomson, TCL**
- 0 **Toshiba**

Set Top Box (Satellite, Cable, Freeview/DVB-T)

- 1 **BSkyB / Sky Ireland / Orange**
- 2 **Canal+ / CanalSat / Digital+**
- 3 **Dream Multimedia / TechniSat**
- 4 **DStv / Multichoice / Foxtel / Sky New Zealand**
- 5 **freebox / Tricolor TV / Vu+**
- 6 **Humax**
- 7 **Samsung**
- 8 **Sky Italia / SFR / Neuf TV**
- 9 **Sky Deutschland / Sky Österreich / T-Home / Deutsche Telekom**
- 0 **UPC / Cablecom / UPC Direct / Virgin Media**

Audio Sound Bars, AV Receivers etc

- 1 **Bose**
- 2 **Denon**
- 3 **LG**
- 4 **Marantz / Philips**
- 5 **Onkyo**
- 6 **Panasonic / Technics**
- 7 **Pioneer**
- 8 **Samsung**
- 9 **Sony**
- 0 **Yamaha**

If the brand of your device is not listed and you cannot learn from the original remote, please proceed to section C – Set Up By Code

HOW TO SET UP YOUR REMOTE

B – SIMPLESET

To set up your device:

1. Turn on your device (not on standby) and point the OFA remote towards it.
2. To set up:

TV

 
hold down TV Power and STB Power until the red LED blinks twice.



STB

(CABLE, SATELLITE, FREEVIEW, DVB-T) -


hold down Volume + and Channel + until the red LED blinks twice.

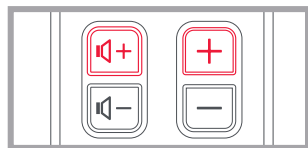

AUDIO

(RECEIVER, SOUND BAR) -

 hold down Volume – and Channel – until the red LED blinks twice.

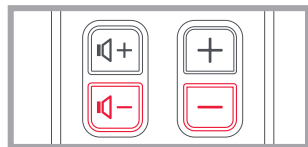

3. Hold down the digit for your brand and device as listed left (e.g. 6 for Samsung TV).
4. The remote will send Power every 3 seconds until your device switches off.
5. As soon as your device switches off, release the digit.
6. The red LED will blink twice and the remote should now operate your device.

- If you find one or more keys do not work as you expect, start again at step 2 – the remote will start with the next code in the memory.
- If you set up a Set Top Box and then an Audio device, to turn the Audio device back on hold the STB Power key for 3 seconds – the key will send STB Power and then Audio Power.

HOW TO SET UP YOUR REMOTE

C – SET UP BY CODE

If your brand is not listed in section B, you can set up your device by trying codes individually. To do this:

1. Turn on your device (not on standby).
2. Locate the brand of your device in the code list (pages 77 - 93). Codes are listed by Device Type and Brand.
3. To set up:

TV

 
hold down TV Power and STB Power until the red LED blinks twice.



STB

(CABLE, SATELLITE, FREEVIEW, DVB-T) -


hold down Volume + and Channel + until the red LED blinks twice.

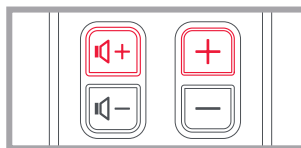

AUDIO

(RECEIVER, SOUND BAR) -

 hold down Volume – and Channel – until the red LED blinks twice.

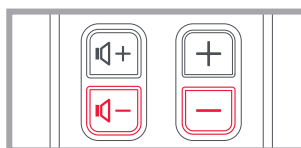

4. Enter the first 4 digit code listed for your brand (e.g. 0556 for Bennett).
5. The red LED will blink twice.
6. Now aim the remote towards your device and press the Power (or Mute*) key.
7. If the device turns off (or mutes*), your remote is ready to use. If not, repeat steps 3-6 with the next code in the list.

* If you have already set up a Set Top Box and you are setting up Audio as well, please try the Mute key during step 6.

AFTER SIMPLESET OR CODE SETUP

Your One For All Zapper+ can operate up to three devices. If you only set up one device, all keys will operate that device.

If you set a TV and Set Top Box, most keys will operate the Set Top Box, with the exception of the TV Power Key, the Volume Up, Down and Mute, and the AV key.

If you set up a TV, Set Top Box and an Audio device such as a sound bar, the Volume Up, Down and Mute keys will control your Audio device. Also if you hold down the Set Top Box Power key for three seconds it will first send Power for the Set Top Box, and then for the Audio Device.

As the AV key is intended to select the input on your TV and most TVs use a menu to select from a list of inputs, when the AV key is pressed and a TV and STB are set up, the Menu Up, Down, Left, Right and OK keys temporarily control the TV. If the OK key is pressed, or no key is pressed for ten seconds, these keys will revert to controlling your Set Top Box.