

JETSON

Echo X

Kids Electric Scooter.

A guide for your ride.

IMPORTANT: READ CAREFULLY AND RETAIN FOR FUTURE REFERENCE.

MODELS: JECHOX-PNK | JECHOX-BLU



**Jetson's top two riding rules:
Be safe. Have fun!**

Table of Contents

Safety Warnings	4
Product Overview	6
Specs & Features	9
Assembling the Handlebar	10
Assembling the Stem	11
Charging the Battery	15
Turning the Echo X On and Off	16
Resetting the Echo X	17
Using the Rear Foot Brake	18
Using the Kickstand	18
Riding the Echo X	19
Using the Thumb Throttle	20
Helmet Safety	21
Care & Maintenance	23

Safety Warnings

1. All safety labels need to be in place and understood by the operator.
 2. Persons with the following conditions shall be cautioned not to operate:
Persons with any mental or physical conditions that may make them susceptible to injury or impair their physical dexterity or mental capabilities to recognize, understand, and perform all of the safety instructions and to be able to assume the hazards inherent in unit use.
 3. Always make sure the battery is full charged before using this electric scooter.
 4. Always inspect all the electric scooter components if they are loose or damaged, tighten loose components or call customer service if parts need to be replaced.
 5. Always test the braking system before using this electric scooter.
 6. Always inspect the tire conditions before using this electric scooter.
 7. Always use vehicle in a safe, secure environment on flat, smooth paved surfaces only.
 8. Only use the battery specified by the manufacturer.
 9. Only use the charger specified by the manufacturer.
- Before use, please read the user manual and safety warnings carefully, and make sure you understand and accept all the safety instructions. The user will be responsible for any loss or damage caused by improper use.
 - Before each cycle of operation, the operator shall perform the preoperation checks specified by the manufacturer: That all guards and pads originally supplied by the manufacturer are in proper place and in serviceable condition; That the braking system is functioning properly; That any and all axle guards, chain guards, or other covers or guards supplied by the manufacturer are in place and in serviceable condition; That tires are in good condition, inflated properly, and have sufficient tread remaining; The area that the product is to be operated should be safe and suitable for safe operation.
 - Components shall be maintained and repaired in accordance with the manufacturer's specifications and using only the manufacturer's authorized replacement parts with installation performed by dealers or other skilled persons.
 - Warning against recharging non-rechargeable batteries.
 - Don't allow hands, feet, hair, body parts, clothing, or similar articles to come in contact with moving parts, wheels, or drive train, while the motor is running.
 - This product should not be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction (IEC 60335-1/A2:2006).
 - Unsupervised children should not play with the product (IEC 60335-1/A2:2006).
 - Adult supervision is required.
 - The rider should not exceed 120 lb.
 - Units shall not be operated to perform racing, stunt riding, or other maneuvers, which may cause loss of control, or may cause uncontrolled operator/passenger actions or reactions.
 - Never use near motor vehicles.
 - Avoid sharp bumps, drainage grates, and sudden surface changes. Scooter may suddenly stop.
 - Avoid streets and surfaces with water, sand, gravel, dirt, leaves, and other debris. Wet weather impairs traction, braking, and visibility.
 - Avoid riding around flammable gas, steam, liquid, or dust that could cause fire.
 - Operators shall adhere to all of the manufacturer's recommendations and instructions, as well as comply with all laws and ordinances: Units without headlights shall be operated only with adequate daylight conditions of visibility, and; Owners shall be encouraged to highlight (for conspicuity) using lighting, reflectors, and for low-riding units, signal flags on flexible poles.
 - Persons with the following conditions shall be cautioned not to operate: Those with heart conditions; Pregnant women; Persons with head, back, or neck ailments, or prior surgeries to those areas of the body; and persons with any mental or physical conditions that may make them susceptible to injury or impair their physical dexterity or mental capabilities to recognize, understand, and perform all of the safety instructions and to be able to assume the hazards inherent in unit use.
 - Do not ride at night.
 - Do not ride after drinking or taking prescription medication.
 - Do not carry items when riding.
 - Never operate the product barefooted.

- Always wear shoes and keep shoelaces tied.
- Make sure your feet are always placed securely on the deck.
- Operators always shall use appropriate protective clothing, including but not limited to a helmet, with appropriate certification, and any other equipment recommended by the manufacturer: Always wear protective equipment such as helmet, knee pads, and elbow pads.
- Always give way to pedestrians.
- Be alert to things in front and far away from you.
- Do not allow distractions when riding, such as answering the phone or engaging in any other activities.
- The product cannot be ridden by more than one person.
- When you ride the product along with other riders, always keep a safe distance to avoid a collision.
- When turning, be sure to maintain your balance.
- Riding with improperly adjusted brakes is dangerous and can result in serious injury or death.
- The brake may become hot while operating, do not touch the brake with your bare skin.
- Applying brakes too hard or too suddenly can lock up a wheel, which could cause you to lose control and fall. Sudden or excessive application of the brake may result in injury or death.
- If the brake loosens, please adjust with the hexagon wrench, or please contact the Jetson Care Team.
- Replace worn or broken parts immediately.
- Check whether all safety labels are in place and understood before riding.
- The owner shall allow the use and operation of the unit after a demonstration that such operators can understand and operate all components of the unit before use.
- Do not ride without proper training. Do not ride at high speeds, on uneven terrain, or on slopes. Do not perform stunts or turn abruptly.
- Recommended for indoor use.
- Prolonged exposure to UV rays, rain and the elements may damage the enclosure materials, store indoors when not in use.

California Proposition 65

WARNING:

This product can expose you to chemicals including Chromium and Cadmium, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to: www.P65Warnings.ca.gov

WARNING:

To reduce the risk of injury, adult supervision is required. Never use in roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water, always wear shoes, and never allow more than 1 rider(s).

MODIFICATIONS

Do not attempt to disassemble, modify, repair, or replace the unit or any components of the unit without instruction from the Jetson Care Team. This will void any warranty, and can lead to malfunctions which may cause injury.

ADDITIONAL OPERATION CAUTIONS

Do not lift the product off the ground while it is on and the wheels are in motion. This can result in freely spinning wheels, which may cause injury to yourself or others nearby. Do not jump on or off the product, and do not jump while using it. Always keep your feet firmly planted on the foot rest while in operation. Always check the battery charge before using.

DISPOSAL OF USED BATTERY

 Battery may contain hazardous substances which could endanger the environment and human health. This symbol marked on the battery and/or packaging indicates that used battery shall not be treated as municipal waste. Batteries should be disposed of at an appropriate collection point for recycling. By ensuring the used batteries are disposed of correctly, you will help preventing potential negative consequences for the environment and human health. The recycling of materials will help to conserve natural resources. For more information about recycling of used batteries, please contact your local municipality waste disposal service.

Product Overview

1. HANDLEBAR
2. THROTTLE
3. STEM
4. BASE CLAMP
5. FRONT WHEEL
6. CHARGING PORT
7. DECK (LED LIGHT-UP)
8. KICKSTAND
9. MOTOR
10. REAR WHEEL
11. REAR FOOT BRAKE
12. CHARGER

TOOLS/HARDWARE (INCLUDED):

BOLT WITH PRE-ATTACHED NUT (2X)



METAL GUARD



ALLEN KEY



DOUBLE-SIDED WRENCH



* ADULTS MUST ASSIST CHILDREN IN THE INITIAL ASSEMBLY OF THE PRODUCT AND ADJUSTMENT PROCEDURES.



Specs & Features

- MAX SPEED: UP TO 9 MPH
- RUN TIME: UP TO 40 MIN (PER FULL CHARGE)
- MOTOR: 80W
- BATTERY: 12V, 4.5AH LEAD-ACID
- CHARGING TIME: UP TO 8 HOURS
- MAX CLIMBING ANGLE: 10°
- PRODUCT DIMENSIONS: 29.5"L × 18.1"W × 35.4"H
- DECK SIZE: 19.9" × 5.7"
- WHEEL SIZE: 5.5"
- PRODUCT WEIGHT: 17 LBS
- RECOMMENDED AGE: 8+
- WEIGHT LIMIT: 120 LBS

1. Getting Started

1.1 Assembling the Handlebar

 
- UNSCREW THE NUTS FROM THE BOLTS.
- THREAD THE THROTTLE CORD THROUGH THE HOLE IN THE STEM UNTIL THE WHITE CONNECTER EMERGES THROUGH THE BOTTOM OF THE STEM.
- POSITION THE HANDLEBAR ON TOP OF THE STEM SO THAT THE THROTTLE IS ON THE RIGHT SIDE OF THE STEM WITH THE HOLE.
- PLACE THE METAL GUARD OVER THE CENTER OF THE HANDLEBAR SO THAT THE HOLES IN THE GUARD ARE ALIGNED WITH THE HOLES IN THE TOP OF THE STEM.
- THREAD THE BOLTS THROUGH THE HOLES AND TWIST THE NUTS ONTO THE ENDS OF THE BOLTS.
- USING THE ALLEN KEY AND WRENCH, TIGHTEN THE NUTS ONTO THE BOLTS UNTIL THE HANDLEBAR IS SECURE.



1.2 Assembling the Stem

- USING THE WRENCH AND ALLEN KEY, LOOSEN THE BOLTS AND NUTS ON THE BASE CLAMP TO WIDEN THE BOLT OPENING.

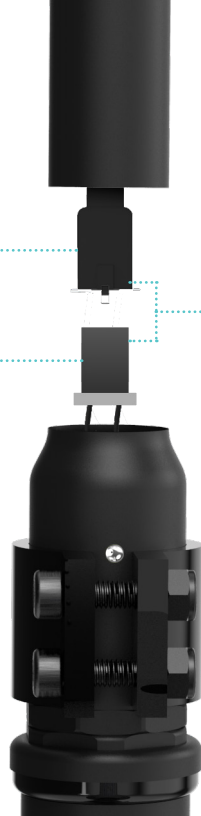

A technical diagram showing the assembly of two electrical connectors. At the top is a long black cylindrical component. Below it is a smaller black piece labeled 'ELECTRICAL CONNECTOR B'. In the middle is a component labeled 'ELECTRICAL CONNECTOR A' which has a grey ring at its top. At the bottom is a larger, more complex black assembly with two visible springs. Dotted lines connect the labels to their respective parts. A text block on the right explains the assembly process.

ELECTRICAL CONNECTOR B

ELECTRICAL CONNECTOR A

WHILE PRESSING DOWN THE EXTENSION ON ELECTRICAL CONNECTOR B, SLIDE CONNECTOR A INTO CONNECTOR B UNTIL THERE IS A "CLICK," SIGNIFYING THAT THE CONNECTORS ARE SECURELY ATTACHED.

 
PIN HOLE



SLIDE DOWN
(DO NOT PINCH THE WIRES)

- TUCK THE EXCESS WIRING INTO THE HANDLEBAR STEM. PRESS IN THE PIN ON THE BASE CLAMP AND SLIDE THE STEM DOWN INTO THE BASE CLAMP UNTIL THE PIN POPS INTO PLACE IN THE PRE-DRILLED HOLE IN THE STEM.

PIN

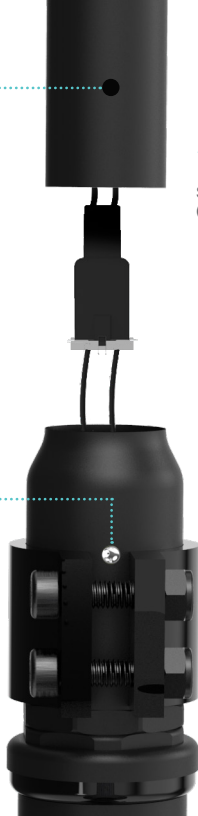

- USING THE ALLEN KEY AND WRENCH,
TIGHTEN THE BOLTS AND NUTS UNTIL THE
CLAMP IS TIGHT AND THE STEM IS SECURE.

TIGHTEN BOLTS

TIGHTEN NUTS



1.3 Charging the Battery

- ONLY USE THE INCLUDED CHARGER.
- PLUG THE CHARGER INTO THE WALL BEFORE THE CHARGING PORT.
- DO NOT TURN ON THE ECHO X WHILE IT IS CHARGING.
- CHARGE THE BATTERY UNTIL IT IS FULLY CHARGED - UP TO 8 HOURS.
- REPLACE THE COVER OVER THE CHARGING PORT WHEN DONE.
- NEVER LEAVE THE ECHO X CHARGING OVERNIGHT.

CHARGING INDICATOR LIGHT ON THE CHARGER:

● - CHARGING

● - CHARGE COMPLETE

INDICATOR LIGHT



CHARGING PORT

IMPORTANT: PRIOR TO THE FIRST USE OF YOUR SCOOTER, LEAVE THE SCOOTER CHARGING FOR AT LEAST 10 TO 12 HOURS, EVEN IF THE CHARGER INDICATOR IS GREEN. AFTER THAT, CHARGE YOUR SCOOTER ONLY UNTIL IT REACHES FULL CHARGE—ABOUT 8 HOURS.

1.4 Turning the Echo X On & Off

- A SINGLE POWER SWITCH ON THE SIDE OF THE SCOOTER DECK CONTROLS BOTH YOUR SCOOTER'S MOTOR AND THE LED DECK LIGHTING.



FLIP THE POWER SWITCH
TO "ON" OR "OFF"

1.5 Resetting the Echo X


- TO PROTECT ITS ELECTRICAL SYSTEM, THE SCOOTER WILL STOP FUNCTIONING WHEN ITS INTERNAL SYSTEM IS OVERWORKED. WHEN THAT HAPPENS, THE RESET BUTTON ON THE SIDE OF THE DECK WILL POP OUT.
- TO RESET THE SCOOTER AND RESTORE FUNCTIONALITY: PUSH THE RESET BUTTON IN. RESTART THE SCOOTER BY TURNING IT OFF AND THEN BACK ON WITH THE POWER BUTTON.
- * IF RESETTING THE SCOOTER DOES NOT CORRECT THE ISSUE, CONTACT THE JETSON CARE TEAM FOR FURTHER ASSISTANCE.



PRESS IN

1.6 Using the Rear Foot Brake

 APPLY PRESSURE ON THE REAR FOOT BRAKE TO SLOW THE SCOOTER DOWN OR BRING IT TO A STOP.

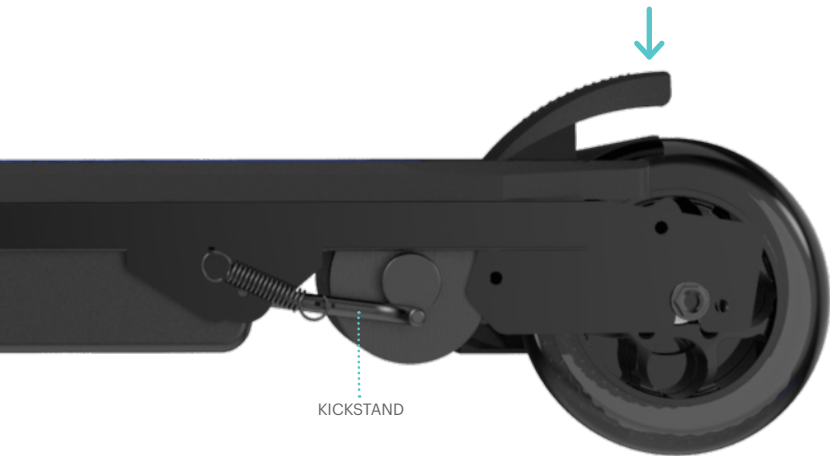

1.7 Using the Kickstand

- TO LOWER THE KICKSTAND, PIVOT IT DOWN FROM THE SIDE OF THE SCOOTER DECK. TILT THE SCOOTER TO REST IT ON THE KICKSTAND.
- TO RAISE THE KICKSTAND, PIVOT THE KICKSTAND UPWARDS TOWARDS THE REAR WHEEL OF THE SCOOTER DECK.

IMPORTANT: ALWAYS REMEMBER TO RAISE YOUR KICKSTAND BEFORE RIDING.

2. Making Moves

2.1 Riding the Echo X

- PLACE ONE FOOT IN FRONT THE DECK.
- PLACE THE OTHER FOOT IN BACK, AT A 70-90° ANGLE.
- TURN THE HANDLEBAR TO THE LEFT OR RIGHT TO MAKE TURNS.

IMPORTANT: THE ECHO X'S MOTOR REQUIRES SOME MOTION ACTIVATION IN ORDER TO START. YOU WILL NEED TO PROPEL THE SCOOTER FORWARD MANUALLY WITH 5 TO 8 CONSECUTIVE FOOT KICKS BEFORE USING THE THUMB THROTTLE TO TAKE OVER MOVEMENT.



2.2 Using the Thumb Throttle

- THE MORE YOU ENGAGE THE THROTTLE, THE FASTER YOUR SCOOTER WILL TRAVEL.
- RELEASING THE THUMB THROTTLE WILL DEACTIVATE THE MOTOR AND THE SCOOTER WILL SLOW DOWN.



2.3 Helmet Safety



PROPER POSITIONING:
THE FOREHEAD IS COVERED
BY THE HELMET.



IMPROPER POSITIONING:
THE FOREHEAD IS EXPOSED.
A FALL COULD RESULT IN SERIOUS INJURY.

* WEAR A HELMET, APPROPRIATE CLOTHING, SHOES, AND SAFETY GEAR. AVOID CLOTHING THAT CAN GET CAUGHT INTO OR UNDER THE WHEELS. CLOSED-TOE, FLAT SHOES ARE RECOMMENDED. WEAR AN ASTM F1492 APPROVED HELMET AND PROTECTIVE GEAR TO PREVENT INJURY IN THE EVENT OF AN ACCIDENT.

Care & Maintenance

RIDING RUN TIME

THE MAXIMUM RUN TIME PER BATTERY CHARGE IS UP TO 40 MINUTES. HOWEVER, MANY FACTORS WILL AFFECT HOW FAR YOU CAN GO PER CHARGE:

- RIDING SURFACE: A SMOOTH, FLAT SURFACE WILL INCREASE RIDING DISTANCE.
- WEIGHT: MORE WEIGHT MEANS LESS DISTANCE.
- TEMPERATURE: RIDE, CHARGE, AND STORE THE ECHO X ABOVE 50°F.
- MAINTENANCE: TIMELY BATTERY CHARGING AFTER EVERY RIDE WILL INCREASE RIDING DISTANCE.
- SPEED AND RIDING STYLE: FREQUENT STARTING AND STOPPING WILL REDUCE RIDING DISTANCE.

CLEANING THE ECHO X

- TO CLEAN THE ECHO X, CAREFULLY WIPE WITH A DAMP CLOTH AND THEN DRY WITH A DRY CLOTH.
- DO NOT APPLY WATER DIRECTLY TO THE ECHO X. THIS CAN CAUSE DAMAGE TO THE ELECTRICAL SYSTEMS, AS WELL AS DETERIORATION OF THE FRAME, WHICH CAN RESULT IN MALFUNCTION THAT LEADS TO PERSONAL INJURY.

BATTERY CONSIDERATIONS

- KEEP AWAY FROM FIRE AND EXCESSIVE HEAT.
- AVOID INTENSE PHYSICAL SHOCK, SEVERE VIBRATION, OR IMPACT.
- PROTECT FROM WATER OR MOISTURE.
- DO NOT DISASSEMBLE THE ECHO X OR ITS BATTERY.
- IF THERE ARE ANY ISSUES WITH THE BATTERY, PLEASE CONTACT THE JETSON CARE TEAM.

STORAGE

- CHARGE THE BATTERY FULLY BEFORE STORING FOR EXTENDED PERIODS OF TIME. WHEN IN STORAGE, CHARGE THE BATTERY ONCE A MONTH.
- COVER THE ECHO X TO PROTECT IT AGAINST DUST.
- STORE THE ECHO X INDOORS AND IN A DRY PLACE.

ONE-YEAR GENERAL LIMITED WARRANTY

All new Jetson products, excluding parts and accessories, are warranted against defects in materials and workmanship for a period of one year from the date of original retail purchase when used in accordance with Jetson's user manuals (refer to ridejetson.com/support).

Under this warranty, you will be able to direct your claims to Jetson even in situations where you purchased the Jetson Product from one of our authorized retailers.

To read the full terms of our warranty, visit ridejetson.com/warranty.

Stay connected.

Be sure to follow **@ridejetson**
on social media to learn about fantastic offers,
giveaways, and all the latest Jetson news.



Loving your ride?

Then be sure to leave a review at ridejetson.com/reviews.
We can't wait to hear from you!

JETSON

#MakeMoves

Questions? Let us know.

ridejetson.com/support
ridejetson.com/chat

To exercise your product's
1-year limited warranty
or inquire about warranty
coverage, contact us directly.

US/CANADA: 1-888-976-9904

MEX: +001 888 976 9904

UK: +44 (0)33 0838 2551

Manufactured in Yongkang, China

Imported by Jetson Electric Bikes LLC.

P.O. Box 320149, 775 4th Ave #2,

Brooklyn, NY 11232

www.ridejetson.com



Made in China

Date Code: 07/2022

Document Edition: v1.0