




HYPER 411 NANO

MANUAL


01. PACKAGE CONTENT

A

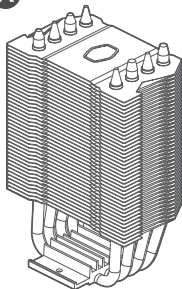


x1

B

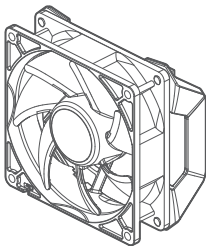


x1

C

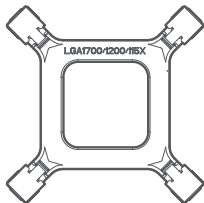


x1

D

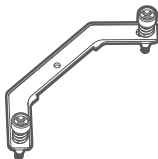

x2

E

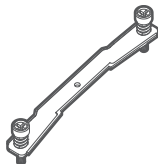


x2

F



x2

 G




x1

02. INTEL & AMD


Intel - LGA 1851/1700/1200/115X: **C D F**

AMD - AM5/AM4: **E F**


C

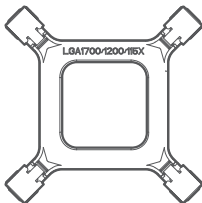

D

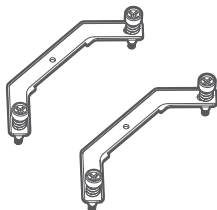


E

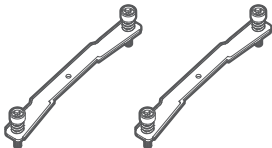


F




03. INTEL & AMD

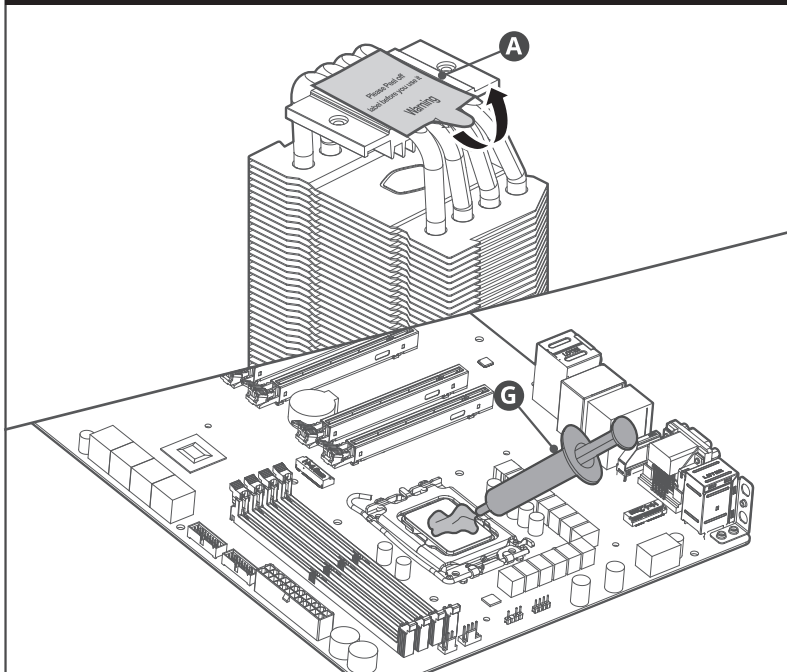


04. INTEL - LGA 1851/1700/1200/115X

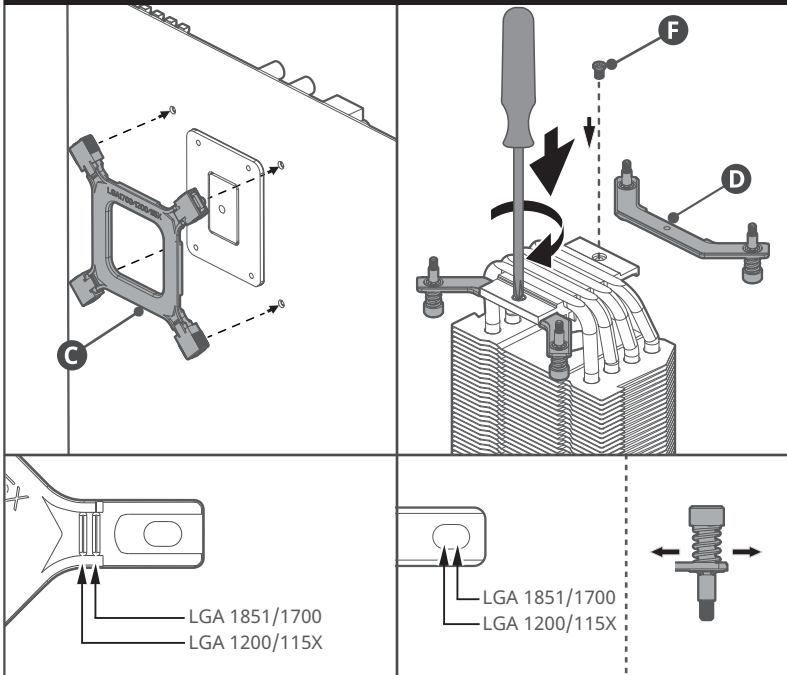



05. INTEL - LGA 1851/1700/1200/115X

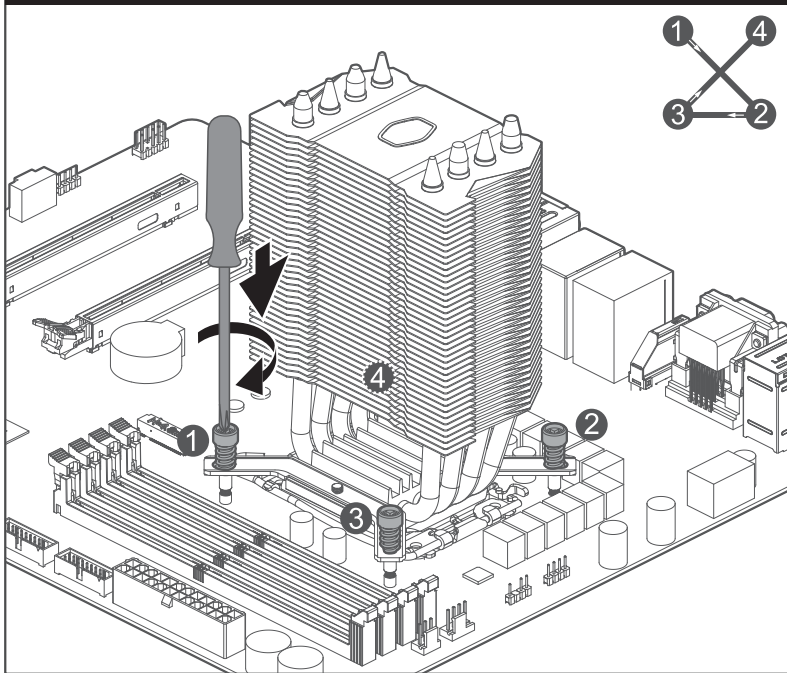


06. INTEL - LGA 1851/1700/1200/115X

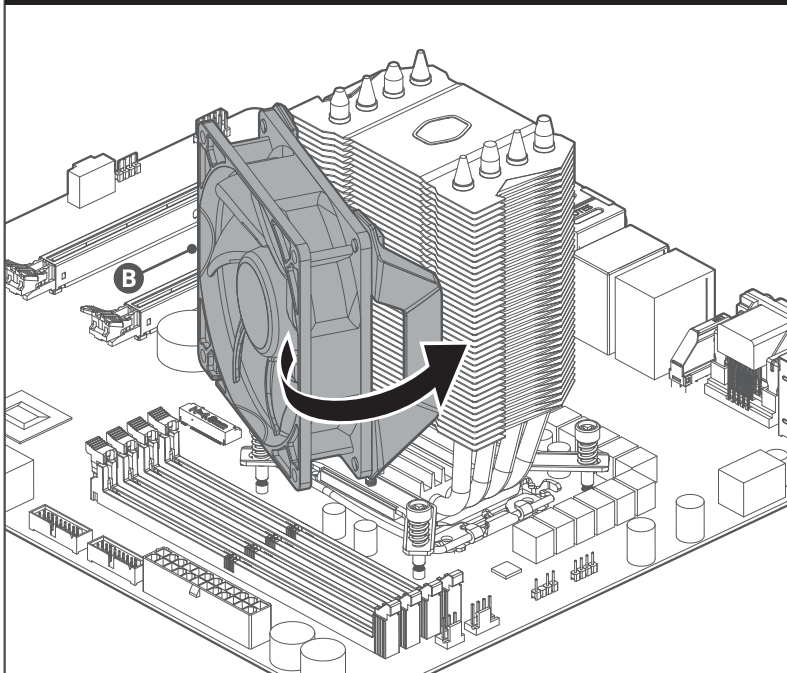


07. AMD - AM5/AM4

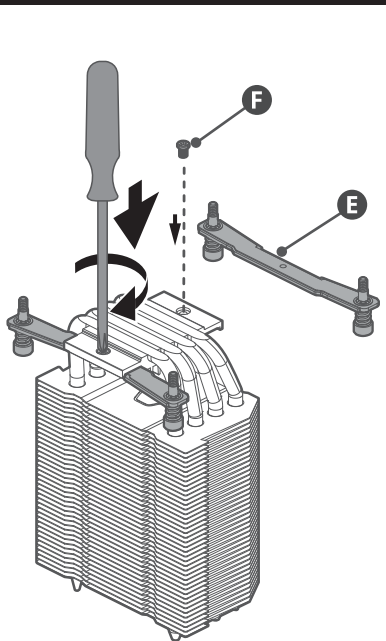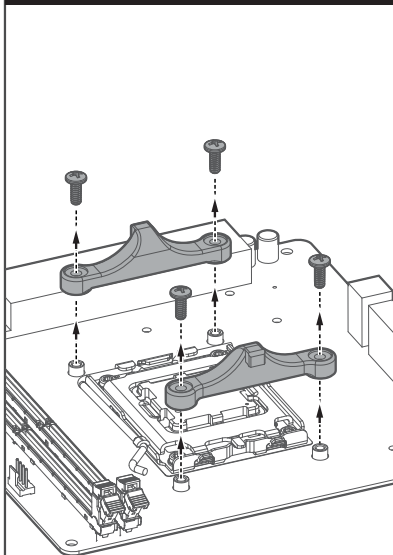


08. AMD - AM5/AM4

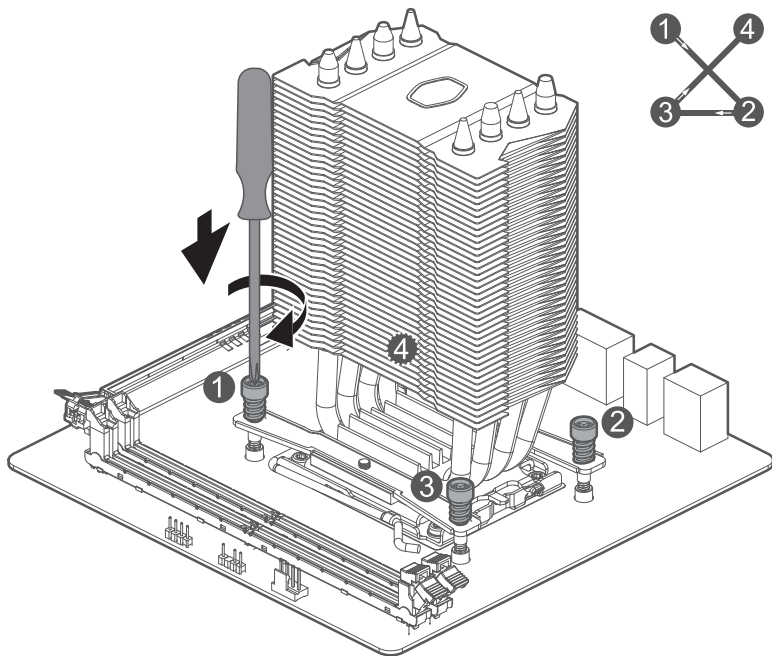

09. AMD - AM5/AM4

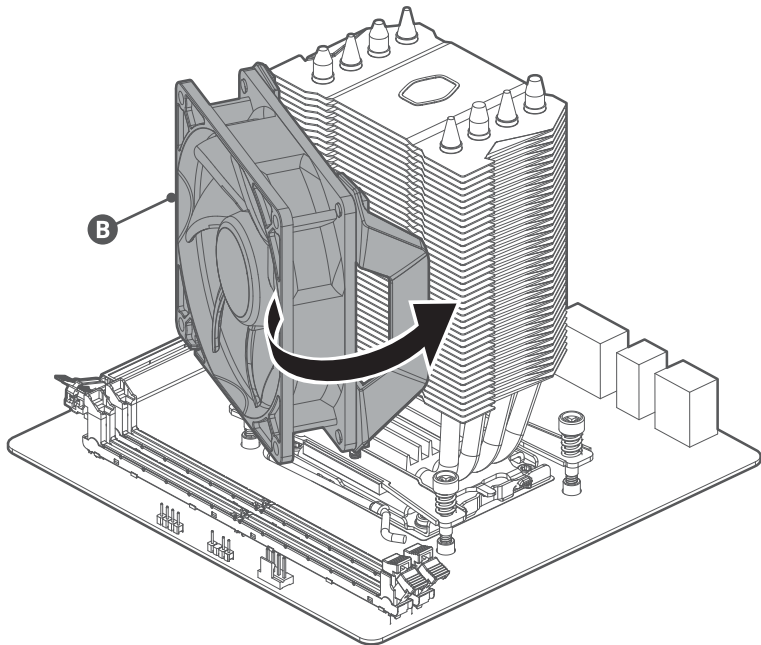

10. PWM CONNECTION

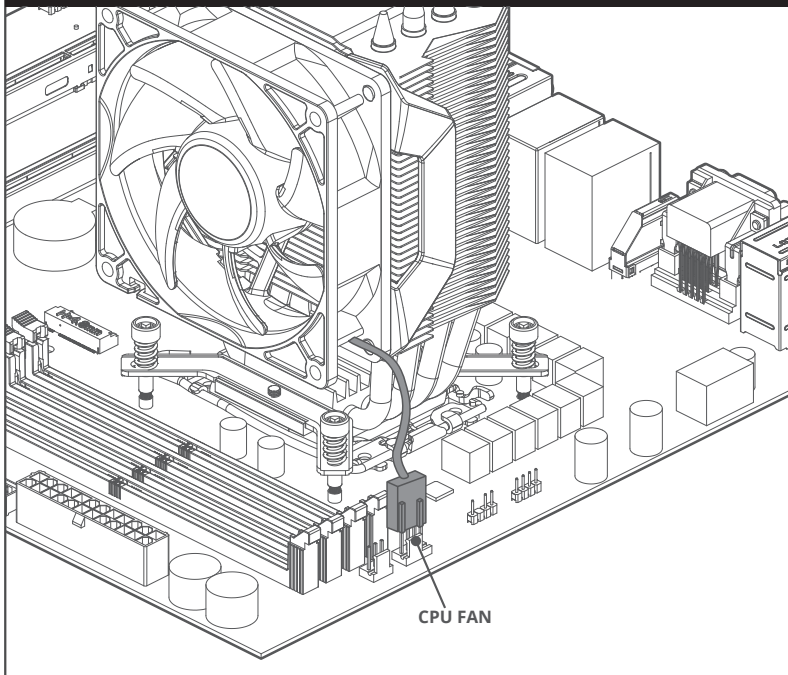

Please visit our website at www.coolermaster.com

China - Cooler Master China

Room 112, Building 9, No. 327, Songjin Road, Jinshanwei Town, Jinshan Dist.,
Shanghai City, China
Tel: +86-21-51872177

Europe - Cooler Master Europe B.V.

Lodewijkstraat 1b, 5652AC Eindhoven, The Netherlands
Tel: +31-(0)40-702-0900

North America – CMI USA, Inc.

1 N Indian Hill Blvd Suite 200, Claremont, CA 91711, USA
Tel: +1-888-624-5099

For the most updated information, please visit our official website: www.coolermaster.com
Cooler Master Support: <https://account.coolermaster.com/>



512006930-GP Ver 1.0 2024/07

©2024 Cooler Master Technology Inc. All Rights Reserved. All trademarks are registered to their respective owners.