



Portable BT Speaker
ZEB PRIMA



User Manual

www.zebronics.com



Thank you for purchasing the **ZEB-PRIMA** Portable BT Speaker. Please read the user manual carefully before usage & save it for future reference.

Note:

- Avoid the usage of this product at high-temperature and high-humidity environments.
- Avoid the self-disassembling of the product or it will result in voiding the Product's warranty.

Caution: There is a risk of explosion if the product is disposed in the fire

To know more about Terms and conditions for warranty policy, please visit

<https://zebronics.com/pages/warranty-policy>

Features:

- BT v5.4
- AUX | USB
- Dual Passive Radiator
- Type-C Charging
- Carry Handle
- Detachable Carry Strap
- Built-in Rechargeable Battery
- Media & Volume Controls
- Deep Bass
- Splash Proof


- Leatherette Finish
- TWS Function
- LED Indicator

Specifications:

Output Power (RMS)	: 90W (45W x 2)
Driver Size	
Full Range	: 11.8cm x 2
Tweeter	: 2cm x 2
Speaker Impedance	
Full Range	: 4Ω
Tweeter	: 8Ω
Frequency Response	: 60Hz-20kHz
S/N Ratio	: ≥72dB
File Format Support	: MP3 (USB)
Line Input	: 3.5mm
Max Supported	
USB Memory Size	: 32GB
Charging Time	: 3h
Playback Time	: 9h*
BT Name	: ZEB-PRIMA
BT Version	: v5.4
Product Dimension	: 34.7 x 13.6 x 22.3 cm (W x D x H)
Net. Weight	: 3.4kg


** at 70% Volume (Default EQ Mode)*

Port & Button Description:

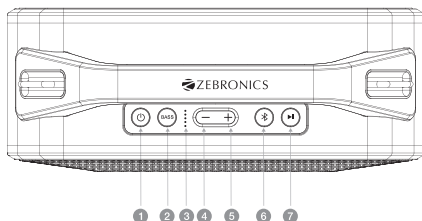

1. **POWER/INPUT** : Long press on/off, and short press to switch mode.
2. **BASS** : Bass enhancement mode (Mode 1 / Mode 2 / Off / loop). Long press this button for 5 seconds to set all functions to manufacturer defaults.
3. **Power Display Light** : 5 LED lights on - power 100%, 4 LED lights on - power 80%, 3 LED lights on - power 60%, 2 LED lights on - power 20%, 1 LED light on - power 20%.
4. **VOL-** : Short press Volume - in all modes, and long press on USB / BT to switch the previous song.
5. **VOL+** : Short press Volume + in all modes, and long press in USB / BT to switch to the next song.
6. **BT** : In USB & AUX mode, short press to quickly switch to BT mode, long press in BT mode, BT will disconnect/connect back. Quickly double-click this button to enter TWS pairing.
7. **PLAY/PAUSE** : Short press to play/pause in USB and BT modes, and short press to mute/unmute in AUX mode.

1. **AUX**
2. **USB**
3. **DC IN**

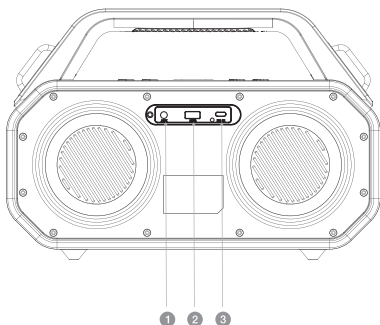

General Instructions

BT Mode:

Switch on the speaker to BT mode, Scan for nearby BT devices in your device. Tap on **“ZEB-PRIMA”** to connect.

USB Mode:

When the USB drive is plugged in, the Speaker automatically switches to USB input mode. A pink LED indicator will indicate that USB mode has been selected.

AUX-IN:

When you turn ON the Speaker and connect a AUX cable to the speaker it changes from its default mode to AUX mode. A green LED indicator will indicate on the power button which will indicate that AUX mode has been selected. Double tap the power button to change the Modes.

TWS Connectivity:

When two speaker are in BT mode, Double press "BT" button of one speaker to enter TWS mode, It will search automatically, when two speakers connected successfully, you can control two speaker at the same time.

Note: Requires two speakers for TWS feature

Charging Instruction:

Connect the charging cable to a DC5V adaptor and connect the other end to the speaker. While charging, a Red LED will glow and White LED indicates the charging and once its fully charged the White LED lights stays ON.

