

LET'S STAY CHARGED

A voice prompt 'Battery low' allows for 2 minutes play time before the headphones power down stating 'Battery low, power off'.

The LED Indicator Light will flash RED once and will then switch off.

Connect the headphones to a suitable USB wall charger, computer USB port or a power bank using the USB-C Charging Cable (13) supplied and connect it to the headphones USB-C Charging Port (3).

While charging, the LED Indicator Light 7 will glow RED.

Once the headphones are fully charged, the LED Indicator Light 7 will turn off. Charging can take up to 2 hours.



1

LET'S CONNECT

First Time Pairing

Press and hold the multi-function button (a) until the headphone says 'Power On' followed by 'Pairing'.

The LED Indicator Light will flash RED and BLUE ready to pair with your audio device.

Go to the Bluetooth settings on your audio device to select 'StreamQ C4' from the list

Once paired successfully you will hear 'Connected' and the LED Indicator Light 7 will switch off.

You can now enjoy your music, watch a video or take a call handsfree.

The headphones will automatically reconnect to the last device they were paired with, confirming 'Connected'.

If there is no Bluetooth connection after 5 minutes, the LED Indicator Light 7 will begin to flash BLUE and RED for 60 seconds. The headphones will then automatically turn off by confirming with 'Power off' and the LED Indicator Light 7 will flash RED once and then switch off.

LET'S GO WIRED

The MIXX StreamQ C4 headphones are suitable for devices with a 3.5mm audio socket.

A 3.5mm audio cable provides the flexibilty to convert these wireless headphones to wired use.

Convenient when watching movies on a plane or when there is no Bluetooth connection

Insert the 3.5mm audio cable into the 3.5mm Audio Port 9 of your headphones and the other end into your phone's 3.5mm socket to start listening to your music or movie.



I FT'S PI AY

First Time Pairing

Press and hold the Multifunction Button 6 until the headphone says 'Power On' followed by 'Pairing'.

Important: the headphones will not enter pairing mode unless you keep the Multifunction Button 6 pressed until you hear 'Pairing'.

Go to the Bluetooth settings on your audio device to select 'StreamQ C4' from the list

Once paired with your device, you will hear 'Connected'.

Play / Pause

Short press Multifunction Button 6



Volume Up / Down

Short press the Volume Up / Down Buttons 4 / 5 to adjust the volume

Skip / Previous Track

Press and hold the Volume Up / Down Buttons 4 / 5 to skip forward to the next track / skip backward to the previous track.

Active Noise Cancellation (ANC) On / Off and

Transparent Mode

Short press the ANC button 11 to cycle through the following modes: TRANSPARENT MODE > ANC ON > ANC OFF.

You will hear a voice announcement telling you which mode you are in: 'Transparent On', 'ANC On' or 'ANC Off', The ANC LED light (12) will glow WHITE while either Transparent mode or ANC mode is being used.

Change the Preset Equalisation (EQ) Settings

Choose from 3 Equalisation (EQ) modes to suit your personal preference. There is no App required.

- Bass boost mode increases the bass sound.
- · Voice mode decreases the bass, the high-frequency tones and increases the speech frequencies.
- Music mode returns you to the optimal EQ for music listening.

Triple press the Multifunction button 6 to cycle through the Music, Bass Boost and Voice modes

Answer / End a call

Short press the Multifunction Button 6 (Audio is picked up via the microphones 10.)

Power On / Off

Press and hold the Multifunction Button 6 on / off. You will hear 'Power on / off'



LET'S USE ANC / TRANSPARENT MODE



How does ANC work?

The innovative technology inside these noise cancelling wireless earbuds monitors the surrounding background noise, and generates an inverted sound wave to cancel out the surrounding noise. This creates a much quieter environment for the user.

How does Transparent Mode work?

Transparent mode effectively does the opposite of ANC – the wireless earbuds amplify the surrounding sound allowing you to stay aware of your environment despite your ears being effectively blocked by the earbuds.

TRAVEL FRIENDLY

For ease of storage while travelling, fold the MIXX StreamQ C4 ear pads in towards the headband 1 then pop them in your bag or, place the headband around your neck and rotate the earpads to rest comfortably on your shoulders.



The headband is adjustable and can be extended 2. It also has soft cushioning 3 for extra comfort on the top of your head.

LET'S BE SAFE

IT IS IMPORTANT THAT YOU PLEASE READ THIS SECTION COMPLETELY

Check with your doctor before use if you are fitted with a medical device such as a pacemaker or a programmable shunt.

Ensure the product is correctly connected using the manufacturer's original accessories included with the product.

Do NOT make unauthorized alterations to this product.

Product may contain small parts which can be a choking hazard. Please keep the product out of reach from children under 6 and animals.

Whilst this product has been made using hypo-allergenic materials, you may suffer some skin irritation after prolonged use.

LISTEN RESPONSIBLY!

Do NOT listen to loud music for a long duration of time. We recommend turning the volume down before placing the device in your ears to avoid hearing damage.

After placing headphones in/on your ears, gradually turn up the volume until you reach a comfortable listening level. Noise levels are measured in decibels (dB), exposure to any noise at or above 85 dB can cause gradual hearing loss. Monitor your use; hearing loss is a function of loudness versus time. The louder it is, the less time you can be exposed to it. The softer it is, the more time you can listen to it.

Do NOT use the product while operating machinery, including cars, trucks or other vehicles.

Do NOT use noise cancelling mode or use your device in areas where the use of hearing is required for safety. e.g., while riding a bicycle, at a construction site or railroad etc.

Clean only with a dry cloth - Wipe off sweat from the earbuds and the charging case before charging.

IMPORTANT!

Do NOT use a non-certified PD or QC3 wall charger as this may damage the product. Only use the cable supplied to charge your device.

If your product has become damaged in any way, does not operate normally or has been dropped, please refer to a qualified person to have the product checked before continuing to use it.

WARNING!

This product contains a Lithium battery. Incorrect disposal of this battery may result in an explosion.

The operating temperature range for this product is 5° - 40° celsius.

Please avoid exposing the product, charging case and cable connectors to prolonged rain, moisture, or liquid spills/splashing.

Do not crush or puncture the product as this may result in fire or explosion.

Please remove your device from your ears immediately if they emit any loud unusual noise or you experience a warming sensation.

Do not adjust the headband whilst wearing as hair may be caught when doing so.

This product contains silicone – if you have a silicone allergy, do not use this product.

If you experience any of the issues listed above, please turn off your device and contact MIXX

Ltd on support@mixx-io.com

