



BENCHTOP DISHWASHER

(8 PLACE SETTINGS)

KABNCTPDW8B


Safety & Warnings	3
Overview	5
Installation	8
Operation	10
Cleaning & Care	16
Troubleshooting	19
Notes	22

SAFETY & WARNINGS

- Read all instructions before using the appliance and retain for reference.
- Handle with care and inspect regularly to ensure the product is in good working condition.
- If this product, power supply cord or plug shows any sign of damage: stop use, unplug the product and contact Kogan.com support.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- This appliance is designed for consumer use: follow directions and use only as described. This appliance is intended to be used in household and similar applications, such as staff kitchen areas in shops, offices and other working environments, farmhouses, by clients in hotels, motels and other residential type environments and bed and breakfast type environments.
- To protect against the risk of electrical shock, do not immerse the unit, cord or plug in water or other liquid.
- Do not abuse, sit on or stand on the door or dish rack of the dishwasher.
- Do not operate your dishwasher unless all enclosure panels are properly in place.
- Open the door very carefully if the dishwasher is operating, there is a risk of water squirting out.
- Do not place any heavy object on or stand on the door when it is open. The appliance could tip forward.
- When loading items to be washed:
 - Locate sharp items so that they are not likely to damage the door seal
 - Warning: Knives and other utensils with sharp points must be loaded in the basket with their points down or placed in a horizontal position
- Check that the detergent powder is empty after completion of the wash cycle. Do not wash plastic items unless they are marked dishwasher safe or the equivalent.
- Use only detergent and rinse additives designed for an automatic dishwasher. Never use soap, laundry detergent or hand washing detergent in your dishwasher.
- Children should be supervised to ensure that they do not play with the appliance.
- The door should not be left open, since this could increase the risk of tripping.
- During installation, the power supply must not be excessively or dangerously bent or flattened.
- Do not tamper the controls.


- The appliance is to be connected to the water mains using new hose sets and that old hose sets should not be reused.
- The maximum number of place settings to be washed is 8.
- The maximum permissible inlet water pressure is 1MPa and the minimum permissible inlet water pressure is 0.04MPa.
- Unplug before cleaning the appliance. Use a soft cloth moistened with mild soap and then use a dry cloth to wipe it again.
- Do not use with an extension cord unless necessary and if so, ensure it is suitably rated and handled safely.
- Do not allow the power cord to be exposed to water, heat, direct sunlight or overhang where it can be pulled or otherwise be damaged or pose a hazard.
- This appliance contains no user-serviceable parts. If it suffers any failure or damage, cease usage and contact help.Kogan.com for support after consulting the Troubleshooting section of this manual.

OVERVIEW

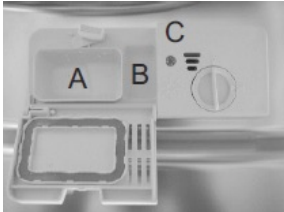
Step 1 Switch on the appliance	Press the Power switch button to switch on the appliance and open the door.
Step 2 Fill the detergent dispenser	<p>Compartment A With each wash cycle.</p> <p>Compartment B For programmes with pre-wash only.</p> 
Step 3 Check the rinse aid level	<p>Mechanical indicator C Electric indicator on control panel.</p>
Step 4 Load the baskets	Scrape off any large amount of leftover food. Soften remnants of burnt food in pans and then load the baskets. It is not necessary to rinse the dishes under running water.
Step 5 Select a programme	Close the door. Press the programme button until the selected programme lights up. (See the “Operation” section)
Step 6 Running the dishwasher	Turn on the water tap and press the Start/Pause button. The machine will start working after about 10 seconds.
Step 6a Changing the programme	<p>A running cycle can only be modified if it has been running for a short time. Otherwise the detergent may have already been released and the water already drained. If this is the case, the detergent dispenser must be refilled.</p> <p>Press the Start/Pause button and then press the programme button for more than 3 seconds to cancel the running programme.</p> <p>Select a new programme.</p> <p>Restart the dishwasher.</p>

<p>Step 6b</p> <p>Add forgotten dishes in the dishwasher.</p>	<p>Press the Start/Pause button to stop the machine. Open the door. Add the forgotten dishes. Close the door, then press the Start/Pause button. The dishwasher will start running again. WARNING! Open the door carefully. Hot steam may escape when the door is opened!</p>
<p>Step 6c</p> <p>If the appliance is switched off during a wash cycle.</p>	<p>If the appliance is switched off during a wash cycle and when switching on again, please re-select the washing cycle.</p>
<p>Step 7</p> <p>Switch off the appliance</p>	<p>When the working cycle has finished, the buzzer of the dishwasher will sound 8 times, then stop. Turn off the appliance using the Power button. Since the appliance is standing by, it will power off automatically after 30 minutes without any operation.</p>
<p>Step 8</p> <p>Turn off the water tap, unload the baskets</p>	<p>Warning: Wait for few minutes (about 15 minutes) before unloading the dishwasher to avoid handling the dishes and utensils while they are still hot and more susceptible to break. They will also dry better. Unload the appliance, starting from the lower basket.</p>

Front view

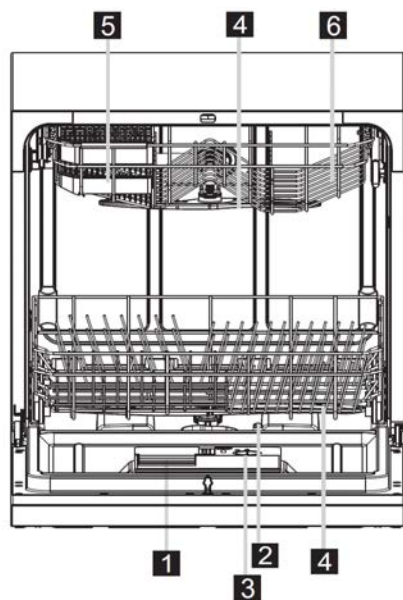

Back view

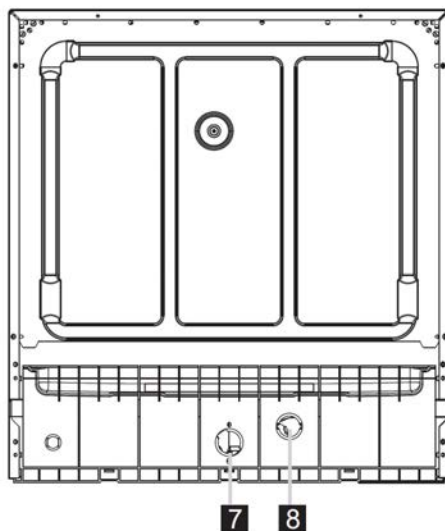

1 Detergent dispenser

2 Filter assembly

3 Rinse aid dispenser

4 Spray arms

5 Cup shelf

6 Basket

7 Inlet pipe connector


8 Drainpipe connector

INSTALLATION

Position the appliance in the desired location. The back should rest against the wall behind it and the sides, along the adjacent cabinets or wall. The dishwasher is equipped with water supply and drain hoses that can be positioned to the left or right to facilitate installation.


Cold water connection

Connect the cold-water supply hose to a threaded $\frac{3}{4}$ " connector and ensure that it is fastened tightly in place. If the water pipes are new or have not been used for an extended period of time, let the water run to make sure that the water is clear and free of impurities. If this precaution is not taken, there is a risk that the water inlet can get blocked and damage the appliance.

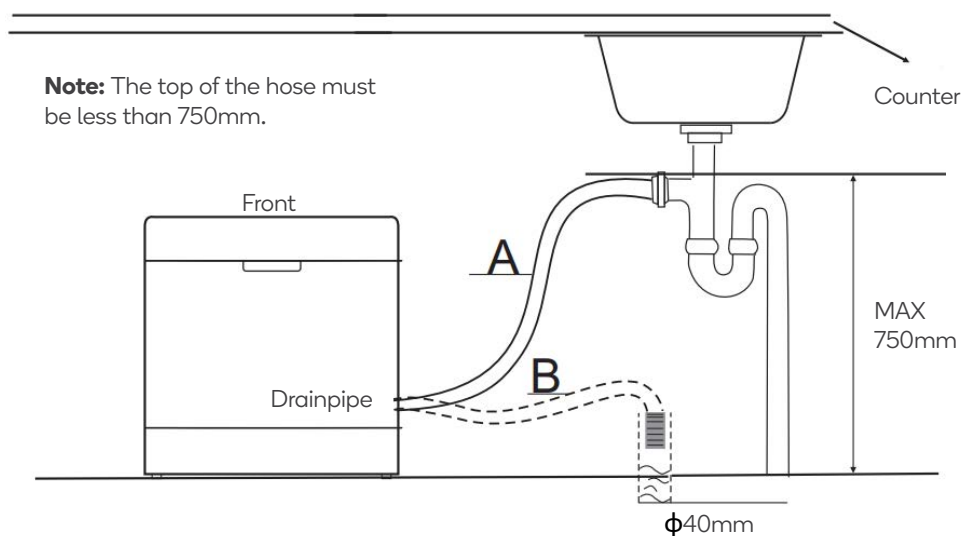

Note:

A and B in the image are alternate suitable positions for the drainage hose.

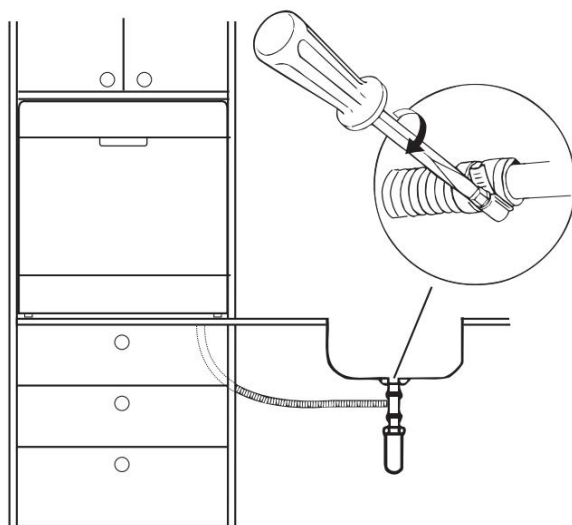

Drainage hose

Insert the drainage hose into a drainpipe with a minimum diameter of 4cm or let it run into the sink, making sure to avoid bending or crimping it. The free end of the hose must be at a height less than 75cm and must not be immersed in water to avoid backflow.

Pre-use checklist

- Dishwasher is level and fixed properly.
- Inlet valve is open.
- Inlet hose connections are fully tightened and not leaking.
- Wires are tightly connected.
- Power is switched on.
- Inlet and drain hoses are connected securely.
- All packing materials and printings are removed from the dishwasher.

OPERATION

Before use, add rinse aid and detergent.


Rinse aid dispenser

The rinse aid is released during the final rinse to prevent water from forming droplets on dishes, which can leave spots and streaks. It also improves drying by allowing water to roll off the dishes. The dishwasher is designed to use liquid rinse aids. The rinse aid dispenser is located inside the door next to the detergent dispenser. To fill the dispenser, open the cap and pour the rinse aid into the dispenser until the level indicator turns completely black. The capacity of the rinse aid container is about 110ml.

Rinse aid is automatically added during the last rinse, ensuring thorough rinsing and spot and streak free drying.

WARNING: Only use branded rinse aid for dishwasher. Never fill the rinse aid dispenser with any other substance (e.g. dishwasher cleaning agent and liquid detergent).

Fill gauge

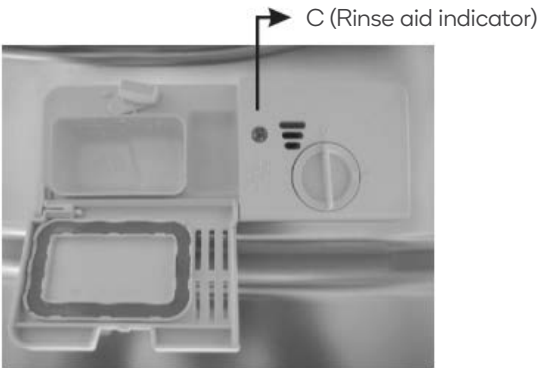

●	Full
◐	¾ full
◑	½ full
◒	¼ full - Should refill to eliminate spotting
○	Empty

How to fill



- To open the dispenser, turn the cap to the “open” (left) arrow and lift it out. Pour the rinse aid into the dispenser, do not overfill it.
- Replace the cap by inserting it aligned with “open” arrow and turning it to the position marked by the “close” (right) arrow.
- Be careful not to overfill the dispenser, because this could cause excessive foaming.

Note:

Clean up any rinse aid that is spilled during filling with an absorbent cloth to avoid excessive foaming during the next wash. Don't forget to replace the cap before you close the dishwasher door.

Adjusting rinse aid dispenser

The default setting of 4 is recommended, but the dial can be adjusted to use less rinse aid.

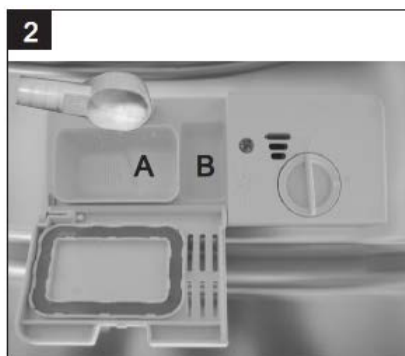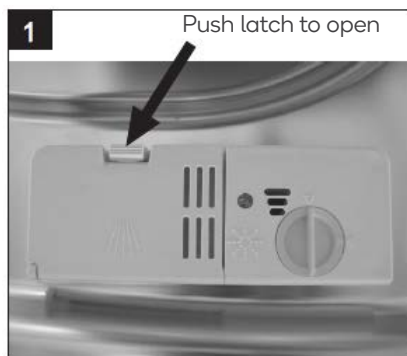

Detergent

One tablespoon of detergent is recommended in most cases, due to the dishwasher's efficient function.

Loading and usage recommendations

- Consider buying utensils which are identified as dishwasher-proof.
- To prevent damage, do not take glass and cutlery out of the dishwasher immediately after the programme has ended.
- Load hollow items such as glasses, pans, etc., upside down to avoid water-collection.
- Dishes and items of cutlery must not lie inside one over the other or cover each other. Glasses should not touch.
- Load large items which are most difficult to clean into the basket.
- Store knives blade-down and large knives horizontally.
- Avoid overloading for best results and energy consumption.
- Place objects in the dishwasher in following way:
- Items such as cups, glasses, pots/pans, etc., should face down.
- Curved items or those with recesses should be loaded at a slant so that water can run off.
- All utensils are stacked securely and cannot tip over.
- All utensils are properly placed, so that the spray arms can rotate freely during washing.

Not suitable	Limited suitability
<ul style="list-style-type: none">• Cutlery with wooden or mother-of-pearl handles• Plastic items which are not heat-resistant• Old cutlery with glued parts which are not heat-resistant• Bonded cutlery or dishes• Pewter or copper items• Crystal glassware• Steel items vulnerable to rusting• Wooden platters• Items made from synthetic fibres	<ul style="list-style-type: none">• Some types of glasses can become dull after a large number of washes• Silver and aluminium parts have a tendency to discolour during washing• Glazed patterns may fade if machine-washed frequently


Note:

Very small items should not be washed in the dishwasher, as they could easily fall out of the basket.

1. Upper basket



2. Lower basket

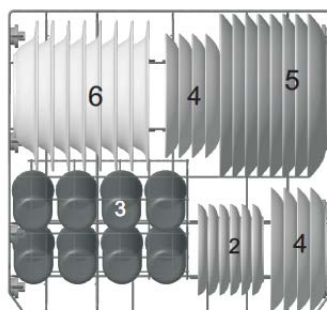

Cups



Saucers



Glasses




Dessert dishes



Dinner plates



Soup plates

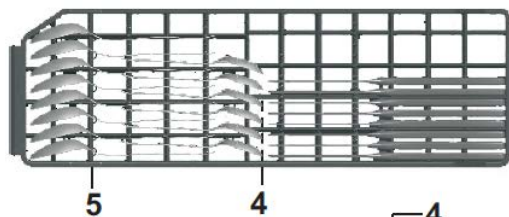

Up shelf

→ IN



Down shelf

→ IN

1 Soup spoons



4 Teaspoons



2 Forks



5 Dessert spoons






3 Knives



Wash programmes

Program	Cycle selection information	Description of cycle	Detergent pre/main	Running time (min)	Energy (kWh)	Water (l)	Rinse aid
 Intensive	For heaviest soiled crockery, soiled pots, pans, dishes, etc., with dried on soiling.	Pre-wash (50°C) Wash (65°C) Rinse Rinse Rinse (70°C) Drying	5/20g (or 1 piece)	155	1.25	12	Yes
 Heavy	For heavily soiled loads, such as pots, plates, glasses and lightly soiled pans.	Pre-wash(45°C) Wash (60°C) Rinse Rinse (68°C) Drying	5/20g	150	1.05	12	Yes
ECO	This is a standard program. It is suitable to clean normally soiled tableware and it is the most efficient programme in terms of its combined energy and water consumption for that type of tableware.	Pre-wash Wash (50°C) Rinse (50°C) Drying	5/20g	160	1.05	9.2	Yes

 Glass	For lightly soiled loads, such as glasses, crystals and fine china.	Pre-wash Wash (45°C) Rinse Rinse (60°C) Drying	5/20g	95	0.7	12	Yes
 90 min	For lightly soiled crockery and glass.	Wash(55°C) Wash(65°C) Rinse(68°C) Drying	25g	90	1.15	10	Yes
 Rapid	A short wash for lightly soiled loads and quick wash.	Wash (45°C) Rinse Rinse (55°C)	15g	35	0.52	7	No

To Turn On

- Remove the basket and add detergent.
- Insert the power plug into the socket. The power supply is 220-240VAC, 50 HZ and the specification of socket is 10A, 250VAC. Ensure that the water supply is turned on to full pressure.
- Use the programme button to set the desired programme.
- Press the Start/Pause button to begin the cycle.

NOTE:

- To add an item mid-cycle, press Start/Pause button and open the door slightly to interrupt the washing cycle.
- To modify the set programme, press Start/Pause button and then press and hold the Programme button for 3 seconds to put it into standby.
- If the cycle is paused, the programme indicator stops blinking and the dishwasher will beep every minute until it is restarted.


CLEANING & CARE

General Maintenance

- After every wash, turn off the water supply to the appliance and leave the door slightly open so that moisture and odours are not trapped inside.
- Before cleaning or performing maintenance, always remove the plug from the socket.
- To clean the exterior and rubber parts of the dishwasher, do not use solvents or abrasive cleaning products.
- Use only a cloth with warm soapy water.
- To remove spots or stains from the surface of the interior, use a cloth dampened with water with a little vinegar or a cleaning product made specifically for dishwashers.
- If the dishwasher will not be used for a long time, it is recommended to run a wash cycle with the dishwasher empty, remove the power plug, turn off the water supply and leave the door of the appliance slightly open. This will help the door seals to last long and prevent odours from forming within the appliance.
- If the dishwasher must be moved, try to keep it in the vertical position. If absolutely necessary, it can be positioned on its back.
- One of the factors that cause odours to form inside the dishwasher is food that remains trapped in the seals. Periodic cleaning with a damp sponge will prevent this from occurring.

Door

Clean with a soft, warm, damp cloth.

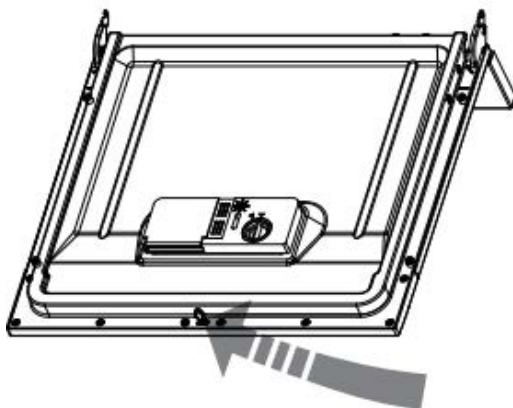


Filter

The filter assembly comprises the Main Filter (A), Fine Filter (B) and Coarse Filter (C).

To disassemble


Step 1

Rotate filter assembly and lift upwards.

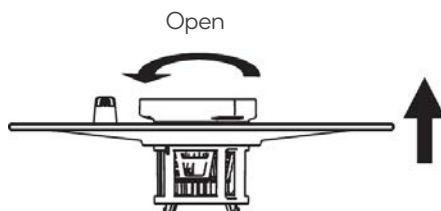


Step 2

Remove parts B and C from the filter assembly A.

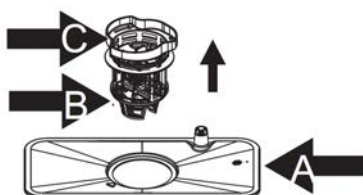

Step 3


With the filter is disassembled, clean gently using a cleaning brush.

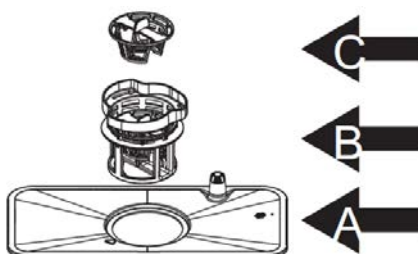

Note:

Follow the above steps in reverse to reassemble.

Spray arms

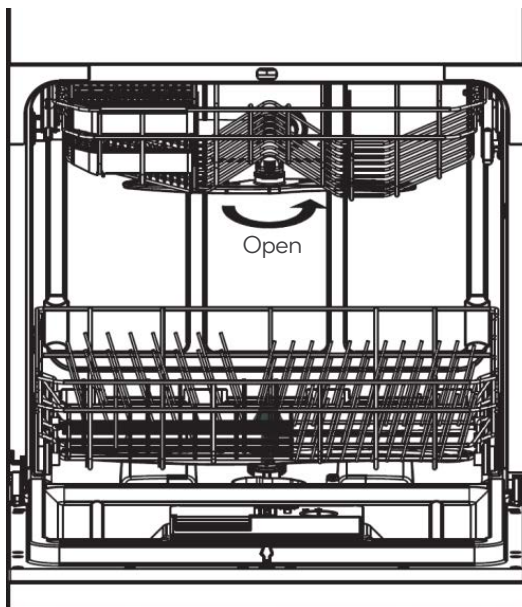

- To remove the upper spray arm, hold the nut; rotate the arm clockwise to remove it.
- To remove the lower spray arm, pull out the spray arm upward.
- Wash the arms in soapy and warm water and use a soft brush to clean the jets. Replace them after rinsing thoroughly.

TROUBLESHOOTING

Issue	Possible cause	Steps to resolve
Dishwasher not starting	Circuit breaker tripped.	Reset, remove other devices from circuit.
	Power supply not turned on.	Ensure power plug is inserted securely and dishwasher turned on.
	Door not firmly closed.	Close, ensure door latches.
Water not pumped from dishwasher	Kink in drain hose.	Check drain hose.
	Filter clogged.	Check coarse filter.
	Kitchen sink clogged.	Check kitchen sink plumbing supply.
Foaming/suds	Improper detergent.	Use dishwasher-appropriate detergent. If foaming occurs, open and allow suds to evaporate, add 3-4 litres of water, start any wash cycle to flush and drain.
	Rinse aid spilled.	Wipe up spilled rinse aid immediately.
Stained interior	Detergent with colorant used.	Change detergent.
White residue on inside surface	Hardwater minerals.	Wash dishwasher wearing rubber gloves and use damp sponge with dishwasher detergent.

Rust stains on cutlery	Affected items not rust-resistant.	Do not wash these in dishwasher.
	Dishwasher salt used; programme not run.	If using dishwasher salt, only run basic Quick Wash programme.
	Lid is loose.	Check and secure lid.
Knocking noise in wash cabinet	Spray arm knocking against basket.	Pause programme and readjust.
Rattling noise	Crockery items insecure.	Pause programme and readjust.
Knocking noise in water pipe	On-site installation or piping cross-section.	Contact plumber.
Dishes not clean	Dishes not loaded correctly	See notes on “Loading” in Operation.
	Cleaning programme insufficient.	Set more powerful programme.
	Insufficient detergent.	Use more detergent or change detergent used.
	Items are blocking the path of spray arms.	Rearrange items or reduce load.
	Filter in base of wash cabinet unclean or incorrectly fitted.	Clean/refit the filter combination.
	Spray arm blocked.	Clean spray arms.
Cloudiness on glassware	Soft water or too much detergent.	Use less detergent if you have soft water. Use a short cycle to clean glassware.
Black or grey marks on dishes	Aluminium utensils have rubbed against dishes.	Use mild abrasive cleaner to remove marks.

Detergent left in dispenser	Dishes blocking detergent cups.	Re-load dishes.
Dishes not drying	Loaded incorrectly.	Re-load dishes.
	Too little rinse aid.	Refill rinse aid dispenser or add more.
	Dishes removed too soon.	Allow dishes to cool after washing is finished. Open door slightly to allow steam to escape.
	Incorrect programme selection.	Make an alternate selection.
	Cutlery has low-quality coating.	Cutlery or dishes of this type are not suitable for dishwasher.

Codes	Meaning	Possible causes
“Rapid” light flickering	Water inlet malfunction.	Tap not opened, water intake restricted or water pressure is too low.
“Rapid” and “90min” light flickering	Not reaching required temperature.	Heating element malfunction.
“Glass” light flickering	Overflow.	Dishwasher leak.

NOTES

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

[illegible]

Need more information?

We hope that this user guide has given you the assistance needed for a simple set-up.

For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to **help.kogan.com**

kogan.com