


Installation Instructions Fat Gecko Mini

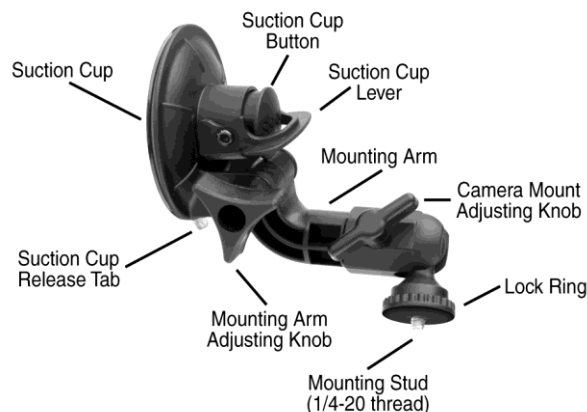

Caution - This mount is rated for cameras weighing 4 pounds or less. DO NOT OVERLOAD. Camera mounts that are improperly attached or overloaded may come loose and cause property damage or personal injury. Delkin Devices, Inc. is not responsible for lost equipment, property damage, or injury caused by use of this product. Use of the Fat Gecko camera mount is at your own risk! All surfaces must be tested prior to using.

1. Thoroughly clean the smooth, flat, non-porous mounting surface (windshield, window, mirror, etc.). The surface should be dry and free of any scratches.
2. Install the camera (weighing up to 4 pounds) onto the 1/4"-20 Mounting Stud. Hold the camera in place and tighten the Lock Ring firmly. Use the enclosed Extension if a longer reach is desired.
3. Loosen the Arm Adjusting Knob so the Mounting Arm moves up and down.
4. Position the Suction Cup Lever in the "down" position. (Note: photo shows lever in the "up" position.)

NOTE: The mounting surface and the Suction Cup should be clean and dry. Wipe with a clean, damp cloth and let dry completely. The Fat Gecko Mini Camera Mount should be installed at room temperature (avoid extremes of heat or cold). Do not moisten the Suction Cup.

5. Position the Suction Cup in your mounting area. In order to remove the mount easily, Delkin recommends that the Suction Cup Release Tab be at the bottom of the installation and that the Mounting Arm moves freely in a vertical line.
6. Push the Suction Cup firmly against the mounting surface (the Suction Cup Lever should be in the "down" position). Press the Suction Cup Button and pull the Suction Cup Lever up and over the Button. You will feel the Button move out during this procedure; this action locks the Suction Cup into place.
7. Move the Mounting Arm up and down to the desired position and lock into place with the Mounting Arm Adjusting Knob.
8. Loosen the Camera Mount Adjusting Knob, position the camera, and then tighten the Camera Mount Adjusting Knob.
9. Check the camera's position as required by loosening the Camera Mount Adjusting Knob. Tighten securely when in position.
10. To release the Suction Cup, move the Suction Cup Lever back into its "down" position. Lift the Suction Cup Release Tab to help break the hold.

(SEE BACK FOR EXTENSION INSTALLATION INSTRUCTIONS)


DELKIN DEVICES®

www.delkindevices.com | 800.637.8087

2 Year Warranty - Delkin Devices, Inc. warrants to its customers that the Fat Gecko camera mount is free from defects in materials and workmanship for a period of 2 years from the date of purchase. This warranty does not cover products damaged by mishandling or irregular use. We make no other warranty, expressed or implied, and will not assume any liability for damages, labor or delays incidental hereto.

All: 858.391.1234 | US: 800.637.8087 | EU: +44 (0)1922 636 250 | www.delkindevices.com | 13350 Kirkham Way | Poway, CA 92064-7117 © Delkin Devices, Inc. All rights reserved. Delkin Devices and logos are trademarks of Delkin Devices, Inc. All other logos and brand names are trademarks of their respective owners. 444-0005-00

Installation Instructions Fat Gecko Mini

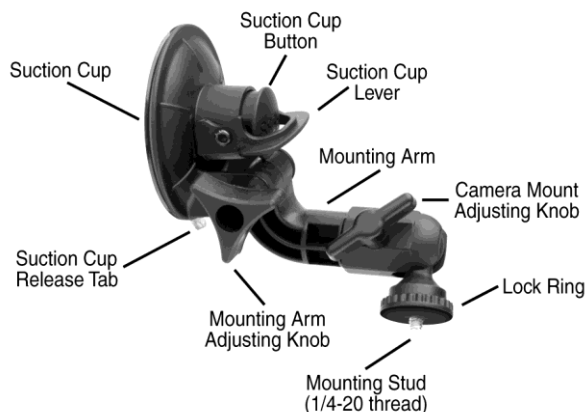

Caution - This mount is rated for cameras weighing 4 pounds or less. DO NOT OVERLOAD. Camera mounts that are improperly attached or overloaded may come loose and cause property damage or personal injury. Delkin Devices, Inc. is not responsible for lost equipment, property damage, or injury caused by use of this product. Use of the Fat Gecko camera mount is at your own risk! All surfaces must be tested prior to using.

1. Thoroughly clean the smooth, flat, non-porous mounting surface (windshield, window, mirror, etc.). The surface should be dry and free of any scratches.
2. Install the camera (weighing up to 4 pounds) onto the 1/4"-20 Mounting Stud. Hold the camera in place and tighten the Lock Ring firmly. Use the enclosed Extension if a longer reach is desired.
3. Loosen the Arm Adjusting Knob so the Mounting Arm moves up and down.
4. Position the Suction Cup Lever in the "down" position. (Note: photo shows lever in the "up" position.)

NOTE: The mounting surface and the Suction Cup should be clean and dry. Wipe with a clean, damp cloth and let dry completely. The Fat Gecko Mini Camera Mount should be installed at room temperature (avoid extremes of heat or cold). Do not moisten the Suction Cup.

5. Position the Suction Cup in your mounting area. In order to remove the mount easily, Delkin recommends that the Suction Cup Release Tab be at the bottom of the installation and that the Mounting Arm moves freely in a vertical line.
6. Push the Suction Cup firmly against the mounting surface (the Suction Cup Lever should be in the "down" position). Press the Suction Cup Button and pull the Suction Cup Lever up and over the Button. You will feel the Button move out during this procedure; this action locks the Suction Cup into place.
7. Move the Mounting Arm up and down to the desired position and lock into place with the Mounting Arm Adjusting Knob.
8. Loosen the Camera Mount Adjusting Knob, position the camera, and then tighten the Camera Mount Adjusting Knob.
9. Check the camera's position as required by loosening the Camera Mount Adjusting Knob. Tighten securely when in position.
10. To release the Suction Cup, move the Suction Cup Lever back into its "down" position. Lift the Suction Cup Release Tab to help break the hold.

(SEE BACK FOR EXTENSION INSTALLATION INSTRUCTIONS)

DELKIN DEVICES®

www.delkindevices.com | 800.637.8087

2 Year Warranty - Delkin Devices, Inc. warrants to its customers that the Fat Gecko camera mount is free from defects in materials and workmanship for a period of 2 years from the date of purchase. This warranty does not cover products damaged by mishandling or irregular use. We make no other warranty, expressed or implied, and will not assume any liability for damages, labor or delays incidental hereto.

All: 858.391.1234 | US: 800.637.8087 | EU: +44 (0)1922 636 250 | www.delkindevices.com | 13350 Kirkham Way | Poway, CA 92064-7117 © Delkin Devices, Inc. All rights reserved. Delkin Devices and logos are trademarks of Delkin Devices, Inc. All other logos and brand names are trademarks of their respective owners. 444-0005-00

Installation Instructions Fat Gecko Mini & Accessory Shoe

1. Remove the 1/4" x 20 Ball Mount and Adjusting Knob by turning the wing nut counter-clockwise. (NOTE: there is a small washer on the wing nut, keep these two parts together)



2. Using the 5/32" hex key (included), remove the screw that holds the two sections of the Extension together.

3. Place the end of the Gecko Mounting Arm into the larger half of the Extension. The Mounting Arm will nest into the Extension and the Extension will fit into the cavities below the Gecko Arm's dovetail.



4. Fit the remaining Extension section over the Gecko Arm's dovetail and install the screw using the hex key, tighten firmly.



5. Reassemble the Camera Mount Adjusting Knob by fitting it over the end and tightening the wing nut.



NOTE: you can attach any of the Gecko accessories at this step, including the Garmin 696 mount, antenna tree, quick release, and more.

The included Accessory Shoe can be attached to any Fat Gecko camera mount; enabling the connection of hot shoe accessories, such as flash units, remote triggers and more. To attach the accessory shoe to a Fat Gecko camera mount: (1) screw the accessory shoe onto the Fat Gecko's 1/4"-20 mounting stud, (2) hold the accessory shoe in place and tighten the Fat Gecko's lock ring firmly, creating a secure connection between the Fat Gecko and the Accessory Shoe, (3) attach any hot or cold shoe accessory by sliding the accessory's U-shaped shoe onto the Accessory Shoe from the back, pushing it forward until it sits firmly in place. The accessory can be adjusted to obtain the correct positioning by adjusting the joints on the Fat Gecko.

Installation Instructions Fat Gecko Mini & Accessory Shoe

1. Remove the 1/4" x 20 Ball Mount and Adjusting Knob by turning the wing nut counter-clockwise. (NOTE: there is a small washer on the wing nut, keep these two parts together)



2. Using the 5/32" hex key (included), remove the screw that holds the two sections of the Extension together.

3. Place the end of the Gecko Mounting Arm into the larger half of the Extension. The Mounting Arm will nest into the Extension and the Extension will fit into the cavities below the Gecko Arm's dovetail.



4. Fit the remaining Extension section over the Gecko Arm's dovetail and install the screw using the hex key, tighten firmly.



5. Reassemble the Camera Mount Adjusting Knob by fitting it over the end and tightening the wing nut.



NOTE: you can attach any of the Gecko accessories at this step, including the Garmin 696 mount, antenna tree, quick release, and more.

The included Accessory Shoe can be attached to any Fat Gecko camera mount; enabling the connection of hot shoe accessories, such as flash units, remote triggers and more. To attach the accessory shoe to a Fat Gecko camera mount: (1) screw the accessory shoe onto the Fat Gecko's 1/4"-20 mounting stud, (2) hold the accessory shoe in place and tighten the Fat Gecko's lock ring firmly, creating a secure connection between the Fat Gecko and the Accessory Shoe, (3) attach any hot or cold shoe accessory by sliding the accessory's U-shaped shoe onto the Accessory Shoe from the back, pushing it forward until it sits firmly in place. The accessory can be adjusted to obtain the correct positioning by adjusting the joints on the Fat Gecko.