

Breville®

Turn **on** your creativity®



**EliteTemp™ Handheld
Garment Steamer**

VIN432

Important Safety Information

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Keep the appliance and its cord out of reach of children less than 8 years old when it is switched on or cooling down.

The appliance must not be left unattended when it is connected to the mains supply.

The appliance must be unplugged from the mains supply socket before filling the water tank with water. Always use the appliance on a stable, secure, dry and level surface. When placing the appliance on its stand, ensure that the surface on which the stand is placed is stable.

 
Do not use the appliance if it has been dropped, if there are any visible signs of damage or if it is leaking. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Never use this appliance for anything other than its intended use. This appliance is for household use only. Do not use this appliance outdoors.

- ⚠ Always ensure that hands are dry before handling the plug or switching on the appliance.
- ⚠ Do not touch the metal parts of the appliance during use as they may become very hot.
- ⚠ This appliance must not be placed on or near any potentially hot surfaces (such as a gas or electric hob).
- ⚠ Always allow the appliance to cool before cleaning or storing.
- ⚠ Never immerse any part of the appliance or power cord and plug in water or any other liquid.
- ⚠ Do not reach for an appliance that has fallen into water. Unplug immediately.
- ⚠ Use only in a dry area.
- ⚠ Never let the power cord hang over the edge of a worktop, touch hot surfaces or become knotted, trapped or pinched.
- ⚠ Do not use an extension cord to operate the appliance.
- ⚠ Never drop or insert any object into any opening.

- ⚠ Do not place the steam nozzle directly on any surface or on the appliance power cord while it is hot or plugged in.
- ⚠ Always position the handheld garment steamer with the steam plate away from you and others when turning on the appliance and emitting steam.
- ⚠ Unplug this appliance before filling or emptying the water reservoir.
- ⚠ It is recommended to fill this appliance with distilled water to prevent mineral deposits in the boiler that can reduce performance or clog the water system.
- ⚠ Use caution when installing or removing an attachment. It may contain hot water from condensation. Ensure that the unit is «OFF» (O) and the attachment is dry or cool to avoid contact with hot water.
- ⚠ Never steam clothes you, or someone else, are wearing.

Parts

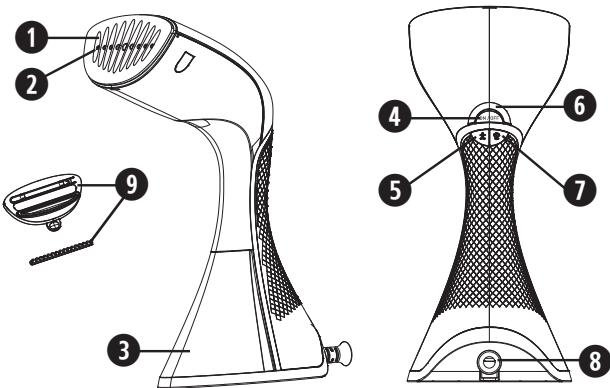

- 1. Ceramic press plate
- 2. Steam nozzle
- 3. Detachable water reservoir
- 4. «ON» (I) - «OFF» (O) button
- 5. Steam mode selection button
- 6. Steam mode indicator / Power indicator / Pre-heating indicator / Auto-off indicator / Descale indicator
- 7. Steam button
- 8. 3m power cord
- 9. Silicone band & Fabric brush

LED indicators on your handheld garment steamer

Your handheld garment steamer has LED indicators to alert you of the following states:

| State | LED Colour | Indication |
|------------------------|------------|--|
| Pre-heating | Blue | Flashes every second 35 times and illuminates solid when ready to use. |
| Auto-off | Blue | Breathes slowly on and off. |
| De-scale reminder | Red | Flashes every second. |
| Cleaning / drying mode | Red | Blinks quickly. |
| Steam mode | Red | Light(s) illuminates when steam mode is selected. |

Before using for the first time


⚠ Warning: Remove all packaging including any press plate protection before using your handheld garment steamer.

Before connecting your handheld garment steamer to the mains supply, make sure your supply voltage is the same as the one indicated on your appliance.

When you first use your handheld garment steamer, there may be a slight odour and it may smoke slightly for the first few minutes of operation. This is quite normal and will disappear.

Priming your handheld garment steamer before use

 
Follow these simple steps to remove any impurities or residues inside your handheld garment steamer that may be left over from the manufacturing process.

1. Follow the instructions under 'Filling instructions' and fill the water reservoir as described.
2. Empty the reservoir to rinse out any foreign particles then refill it.
3. Follow the instructions under 'Operating instructions' and select the 'Low' steam setting.
4. Press the steam button  once to release steam.
5. Steam an old piece of cloth (cotton or towelling is ideal) for a few minutes.
6. Any impurities will be flushed from your handheld garment steamer by the steam and absorbed by the cloth. Your handheld garment steamer is now ready for use.

Filling instructions

⚠ Warning: Never add fabric conditioner, starches or any other chemicals to the water in your handheld garment steamer.

1. Make sure the unit is unplugged.
2. Stand the unit on a flat, stable surface and grasp the handle.
3. Pull the water reservoir out away from the handheld garment steamer body.
4. The fill inlet is located on the top of the reservoir.
5. Remove the rubber inlet cover and fill the reservoir to the max line – we recommend using distilled water.
6. Close the inlet cover and wipe off any water on the reservoir surface.
7. Return the reservoir to the handheld garment steamer, making sure that it snaps securely into place.

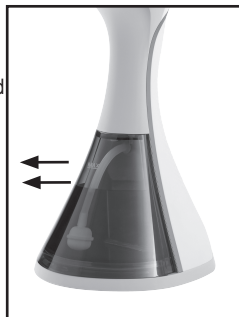




Operating instructions

⚠ Warning: Never use steam on silks or synthetics.

Note: Before first use or if the handheld garment steamer has not been used for a long period of time, it will be necessary to prime the appliance. See 'Cleaning your handheld garment steamer before use' for instructions.

1. Fill the water reservoir to the max line – we recommend using distilled water.
2. Plug the unit into the electrical mains outlet.
3. Press the «ON» (I) - «OFF» (O) button to turn the handheld garment steamer «ON» (I).
4. The power indicator will illuminate and will flash every second whilst the unit pre-heats.
5. Allow the handheld garment steamer to warm up. This can take up to 35 seconds. **Note:** You may hear a tapping noise during the heat-up cycle. This is normal.
6. When the power indicator stops flashing and illuminates solid, the appliance is ready to use.
7. This handheld garment steamer has 3 options for steam. To select a steam setting press the +/- button to cycle through the modes.
 - a. One light will illuminate to indicate 'Low' mode for delicate fabrics or freshening lightly wrinkled garments.

- b. Two lights indicate 'Normal' mode for everyday cottons and polyester fabrics with moderate wrinkles.
 - c. Three lights indicate 'Turbo' mode for thicker fabrics and heavily wrinkled fabrics.
8. Position the steam nozzle away from you and others. Press the steam button  once to release continuous vertical and horizontal steam. **Note:** Once the steam button  is pressed this will lock into steam mode.
 9. To stop the steam, press the steam button .
 10. To switch off the handheld garment steamer, press and hold the «ON» (I) - «OFF» (O) button for 2 seconds.
 11. Unplug the device when not in use. Empty the reservoir and allow the handheld garment steamer to cool down before storing.

Using the attachments

Your handheld garment steamer comes with a 2-in-1 silicone band and fabric brush.

- i. The silicone band pulls fabrics taut for easier steaming.
- ii. The fabric brush separates the fibres on thicker fabrics for better steam penetration.

⚠ Make sure the handheld garment steamer is unplugged and cool before applying attachments. If the unit has been in use, allow the unit to cool down completely first before changing attachments as the press plate will still be hot.

- 1) To affix an attachment, snap the silicone band attachment over the press plate.
- 2) The silicone band must be affixed to use the brush attachment. This is inserted into the slot on the top of the silicone band.

Note: Only one attachment can be used at a time.

Auto shut off feature

⚠ Warning: ALWAYS disconnect your handheld garment steamer from the mains supply socket after use. NEVER leave the appliance unattended with the auto shut off function in operation.

An electronic safety device will automatically switch the heating element off when the appliance has been powered on continuously for 15 minutes. To indicate that the heating element has been switched off, the power indicator light will illuminate and slowly breath on and off. To re-activate the handheld garment steamer:

1. Press the «ON» (I) - «OFF» (O) button to turn the handheld garment steamer «ON» (I).
2. The power indicator will illuminate and will flash every second whilst the unit pre-heats.
3. Allow the handheld garment steamer to warm up. This can take up to 35 seconds.
4. When the power indicator stops flashing and illuminates solid, the appliance is ready to use.


Descaling instructions

⚠ Warning: Do not use harsh abrasives, chemical cleaners or solvents to descale of your handheld garment steamer.

⚠ Warning: We advise you do this operation in a vented room.

After 5 hours of accumulative use, the steam mode indicator lights will flash to indicate that the handheld steamer requires descaling. Descaling helps to remove scale and impurities to prolong the life of your appliance. If the water in your area is very hard, the descaling should be performed more frequently.

- 1) Remove the water reservoir.
- 2) Remove the rubber inlet cover.
- 3) Fill the reservoir to the max line – we recommend using distilled water.
- 4) Close the inlet cover and wipe off any water on the reservoir surface.
- 5) Return the reservoir to the handheld garment steamer, making sure that it snaps securely into place.
- 6) Plug the unit into the electrical mains outlet.
- 7) Press the «ON» (I) - «OFF» (O) button to turn the handheld garment steamer «ON» (I).

- 8) The power indicator will illuminate and will flash every second whilst the unit pre-heats.
- 9) Allow the handheld garment steamer to warm up. This can take up to 35 seconds.
- 10) When the power indicator stops flashing and illuminates solid, the appliance is ready to use.
- 11) Stand the handheld garment steamer on its base on a flat, stable and heat-resistant surface.
- 12) Position the steam nozzle away from you and others.
- 13) Press and hold the +/- steam setting button and steam button  at the same time for 5 seconds.
- 14) The handheld garment steamer will enter a cleaning cycle for 1 minute. The steam mode indicator lights will blink quickly whilst in cleaning mode.
- 15) Once the cleaning cycle is complete, the unit will automatically enter drying mode for 20 seconds. The drying cycle is complete once the steam mode indicator lights stops blinking.
- 16) The steam setting will return to the previous selection.

Care & cleaning

⚠ Warning: Do not use harsh abrasives, chemical cleaners or solvents to clean the exterior of your handheld garment steamer. Do not immerse the appliance or power cord and plug in water or any other liquid.

Allow your handheld garment steamer to completely cool down and wipe the press plate and exterior with a soft damp cloth. Wipe dry before storing.

After sales service and replacement parts

In the case the appliance does not operate but is under warranty, return the product to the place it was purchased for a replacement. Please be aware that a valid form of proof of purchase will be required. For additional support, please contact our Consumer Service Department at **0800 028 7154** or email: **BrevilleEurope@newellco.com**.

Waste disposal

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. E-mail us at **BrevilleEurope@newellco.com** for further recycling and WEEE information.



Troubleshooting

For troubleshooting and FAQs visit www.breville.co.uk/faqs.

| Problems | Possible Causes | Solutions |
|--------------------|--|---|
| There is no steam. | The appliance is not plugged in, or not switched on. | Check that your appliance is correctly plugged in and switched on. |
| | The water level is too low. | Unplug your appliance and refill it. |
| | The steam pump has not been primed. | Refer to the ' Priming your handheld garment steamer before use ' section. |
| | You are using the appliance for the first time. | Refer to the ' Priming your handheld garment steamer before use ' section. |

| Problems | Possible Causes | Solutions |
|---|--|---|
| There is no steam. | The water tank is not fully in place. | Ensure that the fill inlet cover is closed and that the water tank snaps when put into place. |
| | The appliance is in auto-off mode. | Refer to the ' Auto shut off feature ' section. |
| There is noise emitting from the appliance. | The water level is too low and the pump is pulling air. | Unplug your appliance and refill it. |
| | The appliance is heating up. | This is normal when the appliance is heating up. |
| The appliance does not heat up. | The appliance is not plugged in, or not switched on. | Check that your appliance is correctly plugged in and switched on. |
| | The appliance is in auto-off mode. | Refer to the ' Auto shut off feature ' section. |
| The water tank is leaking. | The water tank is not fully in place or the fill inlet cover is not closed properly. | Ensure that the fill inlet cover is closed and that the water tank snaps when put into place. |
| Steam rate decreases. | Calc build up. | Refer to the ' Descaling instructions ' section. |
| The steam leaves stains on the fabric or the appliance spits. | You are using water with additives. | Never add any additive in the water tank. |
| | The appliance has not been cleaned enough after the descaling operation. | Refer to the ' Descaling instructions ' section. |
| | You are using liquids other than water to descale the product. | Use only water during descaling operation. We recommend using distilled water. |

 
Electrical safety

⚠ This appliance must be earthed.

If the plug is not suitable for the socket outlets in your home, it can be removed and replaced by a plug of the correct type. If the fuse in a moulded plug needs to be changed, the fuse cover must be refitted. The appliance must not be used without the fuse cover fitted.

If the plug fuse requires replacement, a fuse of the same rating as that fitted by the manufacturer must be used. In order to prevent a hazard do not fit a fuse of a lower or higher rating.

If the terminals in the plug are not marked or if you are unsure about the installation of the plug please contact a qualified electrician.

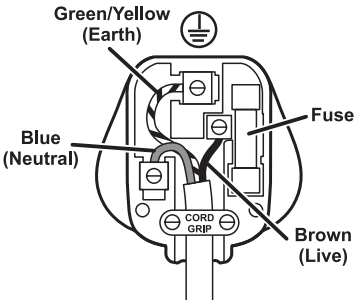



Jarden Consumer Solutions (Europe) Limited
5400 Lakeside, Cheadle Royal Business Park,
Cheadle, SK8 3GQ, United Kingdom

Newell Poland Services Sp. z o.o.,
Plac Andersa 7, Poznan, 61-894, Poland.

e-mail: BrevilleEurope@newellco.com

Telephone: 0800 028 7154



© 2022 Jarden Consumer Solutions (Europe) Limited. All rights reserved.

Jarden Consumer Solutions (Europe) Limited, 5400 Lakeside, Cheadle Royal Business Park,
Cheadle, Cheshire, SK8 3GQ, United Kingdom.

Newell Poland Services Sp. z o.o., Plac Andersa 7, Poznan, 61-894, Poland.

Jarden Consumer Solutions (Europe) Limited and Newell Poland Services Sp. z o.o. are
subsidiaries of Newell Brands Inc.

The product you buy may differ slightly from the one shown on this carton due to continuing
product development.

Made in China.

VIN432_21EM3 (UK)

GCDS-BRE-SL
P.N. NWL0001328709 Rev B