


材质：128g双铜，双面印，风琴折
SIZE：64x90mm

NOKIA

Nokia Bluetooth Headset
T2000
User Guide

Content

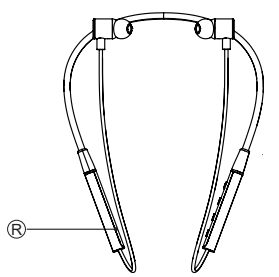

Charging Cable

Silicon Tips

 
L


M

S


Pairing

① Pairing Mode


Magnetic Type Power On/Off:
1) Earphone is automatically turned on when separated and automatically turned off when closed.
2) When you use the earphone, separate them then the blue light will flash, press  for 3s, earphone will enter pairing mode, red and blue lights will flash alternately, after connected, only blue light flash.
3) Please press "Nokia T2000" on phone per the steps as below to connect the earphone.

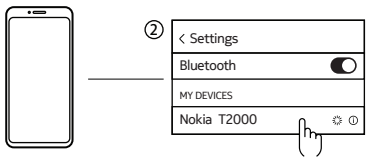

Charging



Red light indicator when charging
Blue light indicator when full charged

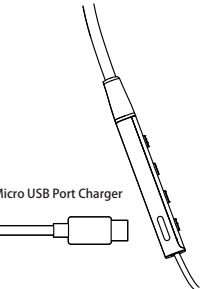



Troubleshooting

Problem	Reason	Solutions
Unable to turn on earphones	Battery is low	Charge the earphones
Not connected after pairing	Not pairing properly	Pair the earphones again
Power Off	(1) Battery is low (2) No pairing connection within 6 minutes	(1) Charge the earphones (2) Close then seprate the magnetic earbuds
Hearing echoes	Volume is too loud or the environment is too noisy	Adjust the volume or go to a quieter place
Having noise during a call / Sound skips frequently	Environment interference caused or distance between earphones and mobile is too far	Change locations or reduce the distance between the earphones and devices
Sound is too soft	Low volume	Increase the volume
Pairing unsuccessful / Only one side has sound / Cannot find the pairing name on the device /	Too many pairing records or not paired properly	Reset and reconnect the earphones
Unable to switch the phone	Maybe distance is beyond 10 meters or the bluetooth connection is fall	Make sure the distance is within 10 meters, or then re-connect the bluetooth for the 2 phones


Touch Controls


Music







Short Press: Increase the volume
Long Press: Next Song






Short Press: Play/Pause






Short Press: Reduce the volume
Long Press: Last Song

Hop Mode




To switch connection between two devices, quick press the play button 3 times, it will disconnect currently connected device and then connect to the last device previously connected in active status.

 
Enter Pair Mode

 


Long Press: 3S

Reset









Press Minus and Plus buttons together for 3 seconds


Call

 




Short Press: Answer / End call
Long Press: Refuse call

Voice Assistant





Double-Click: Activates voice assistant

Specifications

Nokia Bluetooth Headset T2000

Frequency response

: 20 Hz to 20kHz

Transducer principle

: Dynamic

Transducer size

: 11mm

Impedance

: 16Ω

Microphone principle

: MEMS x 1

Power supply

: Built-in Lithium rechargeable batteries, 3.85V, 125mAh


Playtime

: 14 hrs

Fast Charging time

: 10 minutes, 9 hours playtime

Magnetic Type Power On/Off

: 1) Earphone is automatically turned on when separated and automatically turned off when closed.
2) When you use the earphone, separate them then the blue light will flash, press  for 3s, earphone will enter pairing mode, red and blue lights will flash alternately, after connected, only blue light flash.

Ingress protection (earbuds)

: Splash proof (IPX4)

Weight

: Headset unit : approx. 30g

Volume Control

: Yes

Bluetooth

Version

: Bluetooth specification version 5.1

Profiles

: HSP, HFP, AVRCP, A2DP

Effective Range

: Line of sight approx. 30ft (10m)

Transmission frequency

: 2402 MHz to 2480 MHz

Output power

: 5mW (max.)

Supported Audio Format(s)

: SBC, AAC, aptX, aptX-HD

* Charging case that holds multiple charges for having the total play time. Battery life depends on device settings, environment, usage and many other factors.

Safety Guide

Important safety instructions

- Read the user guide & warranty manual (as supplied) carefully and completely before using the product.
- Always include this safety guide when passing the product on to third parties.
- Do not use an obviously defective product.
- Use only the product in environments where wireless Bluetooth transmission is permitted.

Preventing damage to health and accidents


 
 
 
- Do not listen at high volume levels for long periods of time to prevent hearing damage.
- The product generates stronger permanent magnetic fields that could cause interference to cardiac pacemakers, implanted defibrillators (ICDs) and other implants. Always maintain a distance of at least 3.94" (10cm) between the product component containing the magnet and the cardiac pacemaker, implanted defibrillator or other implant.
- Keep the product, accessories and packaging parts out of reach of children and pets to prevent accidents. Swallowing and choking hazard.
- Do not use the product in an environment that requires your special attention (e.g. in traffic).

Preventing damage to the product and malfunctions

- Always keep the product dry and do not expose it to extreme temperatures (hairdryer, heater, extended exposure to sunlight, etc.) to avoid corrosion or deformation. The normal operating temperature is from 0 ° C to 40 ° C/32 ° F to 104 ° F.
- Use only attachments, accessories, spare parts supplied or recommended by Flipkart.
- Only clean the product with a soft, dry cloth.

Safety instructions for lithium rechargeable batteries

WARNING

In extreme cases, rechargeable batteries may leak and may cause the following hazards if abused or misused:
 explosion  fire development  heat generation  smoke or gas development

Dispose of defective products with built-in rechargeable batteries at special collection points or return them to your specialist dealer.

Only use rechargeable batteries recommended by Flipkart and the appropriate chargers.

Only charge the product / rechargeable batteries at ambient temperatures between 10 ° C/50 ° F and 40 ° C/104 ° F.

Switch battery pack-powered products off after use.

When not using for extended periods of time, recharge the product / rechargeable batteries regularly (about every 3 months).


Do not heat the product / rechargeable batteries above 70 ° C/158 ° F. Avoid exposure to sunlight and do not throw the product / rechargeable batteries into fire.

Intended use/Liability

Flipkart will not be responsible for any indirect or consequential loss, loss of profits or loss of data. Warranty will be void under the following conditions, and manufacturer reserves the right to refuse to provide service and to demand charges for any costs of servicing from the customer.
There will be no warranty if the product has been modified or repaired by persons not authorized by manufacturer. Mishandling or wrong application of product, such as leaving batteries over an extended period in the product causing battery fluid leakage, or applying wrong voltage, manual destruction, damage caused by natural disaster or accident caused by impact sand or liquid damage, tampering, or operating fault, install and maintain product without following instructions provided by the manufacturer; if the model number or item code attached with the product has been erased or modified; Modify without authorization the contents of this warranty policy.
If the product have been used for commercial display, demonstration or rental purpose.
All parts replaced within the warranty period are properties of manufacturer. We have the right to handle those parts as necessary.
Warranty covers only the hardware of the product's mainbody. All other accessories are not covered within the warranty terms, such as external connection cable, power cable, computer cables, software, CD, external cover/cabinet and user manual. (For item description and accessories, please refer to the user manual/instruction manual/user guide)

Manufacturer Declarations

More information on legal compliance labels can be found at bottom.



Always return your used electronic products, batteries, and packaging materials to dedicated collection points. This way you help prevent uncontrolled waste disposal and promote the recycling of materials. Electrical and electronic products contain a lot of valuable materials, including metals (such as copper, aluminum, steel, and magnesium) and precious metals (such as gold, silver, and palladium). All materials of the device can be recovered as materials and energy. The crossed-out wheeled bin symbol on your product, battery, literature, or packaging reminds you that all electrical and electronic products and batteries must be taken to separate collection at the end of their working life. Do not dispose of these products as unsorted municipal waste; take them for recycling. For info on your nearest recycling point, check with your local waste authority.

NOKIA

Flipkart India Private Limited is a licensee of the Nokia brand in India. Nokia is a registered trademark of Nokia Corporation.
All trademarks are the property of their respective owners.