



Trolley DJ Speaker

ZEB **OCTANE 601**



User Manual

www.zebronics.com



Thank you for purchasing the **“ZEB-FESPK 101, ZEB-OCTANE 601”** Trolley DJ Speaker . Please read this user manual carefully before operation & save it for future reference.

Note:

- Avoid the use of this product at the high-temperature and high humidity environment.
- Avoid the self-disassembling of the product or it will result in voiding the Product's warranty.
- To know more about Terms and conditions for warranty policy, please visit

<https://zebronics.com/pages/warranty-policy>

Features:

- BT v5.0 | USB | mSD | SD | FM | AUX | MIC IN | Guitar IN
- Karaoke Function
- MIC Recording
- LED display
- Remote control
- Dual UHF wireless mic
- Volume, Bass & Treble Controls
- Mic Volume & Echo Controls
- Bass Boost
- TWS Function
- Retractable Handle with Wheels

- Supports external battery
- Tripod Mount

Specifications:

Output Power (RMS) : 120W

Driver Size

Full range : 46cm

Tweeter : 8 cm

Impedance

Full range : 4Ω

Tweeter : 6Ω

Frequency Response : 40Hz-20kHz

S/N Ratio : ≥86dB

Separation : ≥50db

File format support

(USB/mSD) : MP3,WMA,WAV,FLAC

Line input : 3.5mm

Max Supported

USB/mSD memory size : 32GB

FM frequency range : 87.5 MHz - 108 MHz

Charging time : 4 h

Playback time : 6h*

BT name : ZEB-OCTANE 601

BT version : v5.0

Product Dimension

(W x D x H) : 50 x 42.5 x 74 cm

Net. Weight : 18.8kg


Package Contents:

- Trolley DJ Speaker : 1 U
- Remote : 1 U
- Wireless Mic : 2 U
- Power Cord : 1 U
- Input cable : 1 U
- DC cable : 1 U
- QR Code Guide : 1 U

* at 50% volume(LED off)


Product Description:

Control Panel Description:

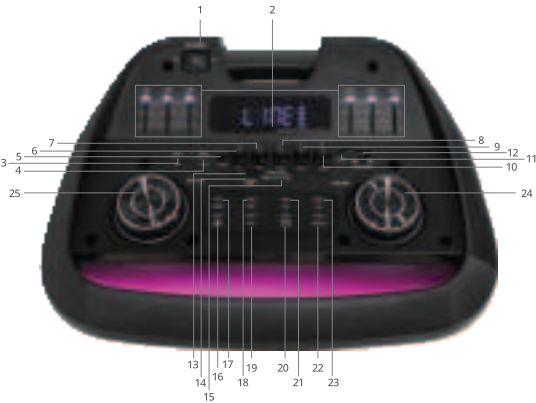

1. POWER: ON/OFF SWITCH
2. EQUALIZER
3. MIC INPUT JACK
4. GUITAR INPUT JACK
5. MIC PRIORITY SWITCH
6. M.HI: INCREASE/DECREASE MIC TREBLE
7. M.LO: INCREASE/DECREASE MIC BASS
8. ECHO ADJUST
9. GUITAR VOLUME ADJUST
10. BASS BOOST
11. AUX PORT
12. EXT DC 12V IN
13. mSD CARD SLOT
14. USB PORT
15. SD CARD SLOT
16. MODE
17. LED CONTROL
18. RECORD
19. DISCONNECT
20. PLAY/PAUSE/TWS/SCAN
21. PREVIOUS
22. REPEAT
23. NEXT
24. VOLUME CONTROL
25. MIC VOLUME CONTROL

BACK PANEL FUNCTION:

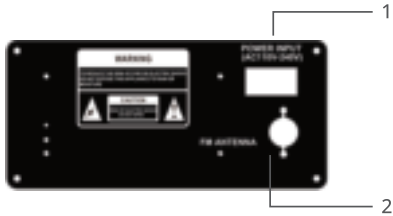

- 1. POWER INPUT (AC 110V-240V)
- 2. FM ANTENNA

REMOTE CONTROL:



- Standby
- MODE USB/SD/LINE/BLUETOOTH (Audio input)
- Prev/FM CH-
- Play/pause/FM tuner
- Next/FM CH+
- Repeat
- Stop
- Volume up
- Volume down
- Mute
- Equalizer
- Number

General Instructions

BT Connectivity:

- Switch the source to BT mode.
- Turn on BT on your mobile and scan for nearby BT devices.
- Tap on “ZEB-OCTANE 601” to connect.

USB/SD/mSD Mode:

- Insert the USB/SD/mSD card into the slot provided on the speaker.
- The speaker will automatically detect the USB/SD/mSD card and the supported audio content will be played from it.

Note:

The mSD card and SD card slots share the same circuit, so only the first inserted card can be read. The other card cannot be accessed because the circuit is designed to handle one card at a time.

This mode isn't selectable on the speaker or remote control unless a USB/SD flash card is connected.

FM Radio:

- Switch the speaker to FM mode
- Long press the Play/Pause button to scan the available FM channels.
- Once the scanning is done, the first scanned channel will start playing.

AUX-IN:

- The speaker can be connected to an audio source using a 3.5 to 3.5mm cable.
- Connect one end of the cable to the AUX-In port on the speaker and the other end an audio source.
- The audio from the source can be Played through the speaker.

TWS Function:

STEP 1: Push the Mode Button on both speakers until speakers are in Bluetooth Mode. Screen will display the word "BLUE"

STEP 2: When both speakers are in Bluetooth mode, push and hold the TWS button for 3 seconds. You will hear a beep & screen display "t-on". Next time you put both speakers in Bluetooth mode at the same time, speakers will connect automatically.

STEP 3: On your device, turn your Bluetooth settings "ON", you will then select the unit and pair. Enjoy TWS (True Wireless Stereo) sound from your phone via Bluetooth!

Charging Instruction:

- Connect the pre-included charger to the speaker & connect the other end to 230V power supply.

Charging Indication:

- Red LED Light will GLOW constant on the speaker LED Display.