

TABLE OF CONTENTS

IMPORTANT SAFETY INSTRUCTIONS

PRECAUTIONS AND REMINDERS

BUTTON CONTROL AND PERIPHERAL CONNECTION

 
OPERATING INSTRUCTIONS

SPECIFICATIONS


TROUBLESHOOTING

WARRANTY CARD


PRECAUTIONS AND REMINDERS

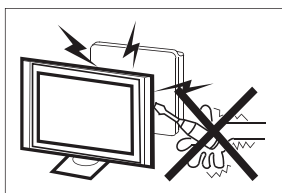

 
High voltages are used in the operation of this television receiver. Do not remove the cabinet back from your set. Refer servicing to qualified service personnel.

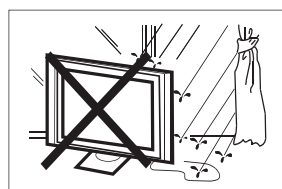

 
To prevent fire or electrical shock hazard, do not expose the television receiver to rain or moisture.

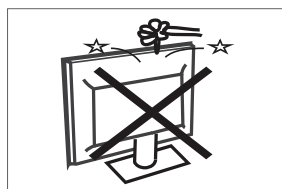

 Do not drop or push objects into the television cabinet slots or openings. Never spill any kind of liquid on the television receiver.

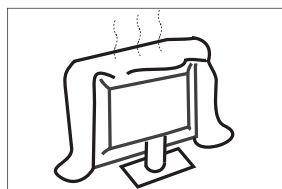

 
Do not block the ventilation holes in the back cover. Adequate ventilation is essential to prevent failure of electrical components.

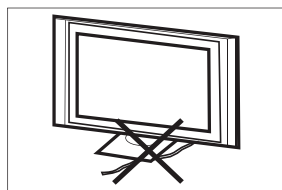


Do not trap the power supply cord under the television receiver.



 
If you are going to clean the product, Unplug the TV, use soft fabric, no water, never chemicals.

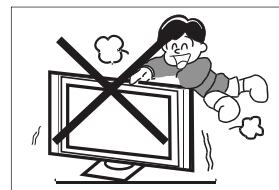

 
Never stand on, lean on, or suddenly push the television or its stand. You should pay special attention to children. Serious injury may result if it falls.

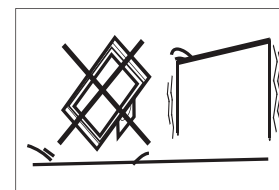

 
Do not place your television on an unstable cart, stand, shelf or table. Serious injury to an individual, and damage to the television, may result if it falls.

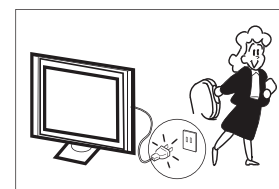

 When the television receiver is not used for an extended period of time, it is advisable to disconnect the AC power cord from the AC outlet.

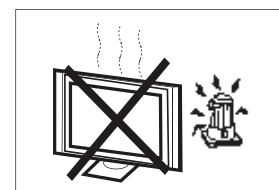

 
Avoid exposing the television receiver to direct sunlight and other sources of heat. Do not stand the television receiver directly on other products which give off heat, e.g. video cassette players and audio amplifiers. Do not place naked flame sources, such as lighted candles on the television.

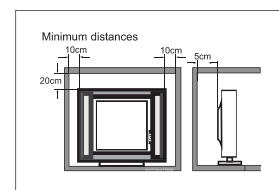

If the television is to be built into a compartment or similar enclosure, the minimum distances must be maintained. Heat build-up can reduce the service life of your television, and can also be dangerous.

Note: the use of apparatus in moderate climates.

 CONNECTION SUGGESTIONS

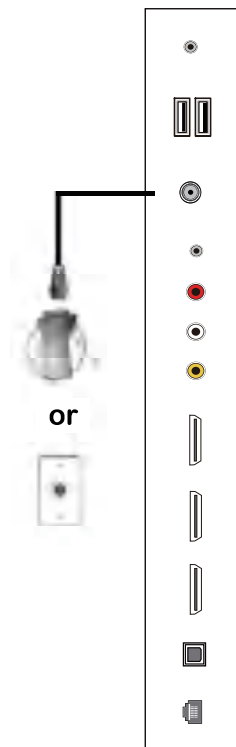

f HDTV is turned off.

2. Connect the RF cable from your antenna or digital cable to the TV port on the back of your HDTV.
3. Turn on the HDTV.
4. Follow the first time on screen instructions.

Please Note:

Not all broadcasts are in High Definition (HD). Please refer to your local broadcasting stations for more information.

The HDTV's tuner is designed for HDTV therefore requires a stronger signal than normal TVs. If you cannot achieve that signal level with your antenna or cable, your HDTV might lose picture or sound.

sure that you match the (+) and (-) symbols on the batteries with the (+) and (-) symbols inside the battery compartment. Afterwards, re-attach the battery cover.

Please note:

Only use AAA batteries.

Do not mix new and old batteries. This may result in cracking or leakage that may pose a fire risk or lead to personal injury.

Inserting the batteries incorrectly may also result in cracking or leakage that may pose a fire risk or lead to personal injury.

Dispose the batteries in accordance with local laws and regulations.

Keep the batteries away from children and pets.

If the remote control is not used for a long time, remove the batteries.

Keep the remote control away from moisture, sunlight, and high temperatures.

INITIAL SETUP

Please according to the Text Tip to First Time Setup. This function is used for the remote control pair code. After the code is successful, you can use the Bluetooth remote control to operate the TV. Press and hold "HOME" button and "Left" button simultaneously for 5 seconds. Then press "OK" button when the "TV_BLE_Remote" displays in the upper right corner of the screen.



HOME SCREEN

 
During initial setup, press EXIT to exit the initial setup, and enter the HOME screen.



- ① Open the google assistant or start a voice search.
- ② Among the applications installed on the TV, the icons for the favourite applications are shown inside here. (Favourite applications can be added / deleted / changed its order by users.)
- ③ **Apps:** Click to jump to Apps screen where all the installed applications are listed.
- ④ **Notification:** Display the notifications.
- Inputs:** Icon to select an input source.
- Network&Interent:** Icon to Set up Network, Such as wifi.
- Settings:** Various settings can be configured here. For details on the settings, see the next explanation.

INPUT SOURCE

1. In the HOME interface, press ▲/▼ ◀/▶ to select the "Inputs" icon, press **OK** to open the input source list, then press up to highlight an input and press **OK** to switch.

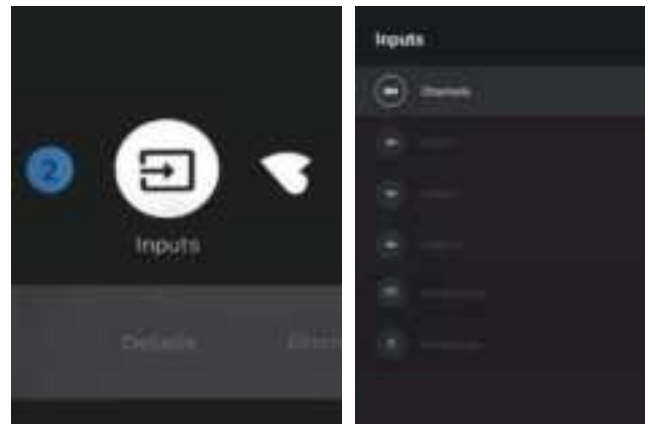


2. Under live TV, press the **SOURCE** button to display the list of input sources. You can select the desired source.



NAVIGATING THE ON-SCREEN MENU

 1. There are two ways to enter. First, in live TV, press the menu button to display TV options, press ▲/▼ ◀/▶ to select the settings menu and press **OK** to confirm. Second, in the HOME interface, press the ▶ key to select the icon of the circular settings menu, press **OK** to confirm.

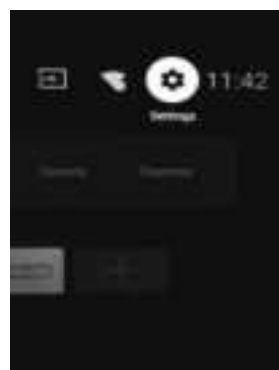

2. Press ▲/▼ button to select what you want set.

 
3. Press **OK** to enter setting.



Press **BACK** to return to the previous menu. If the main menu is displayed, pressing **BACK** will close the onscreen menu.

Network

1. Press **▼/▲** button to select what you want set .
2. Press **OK** button to adjust.
3. After finishing your adjustment **OK** button to save and return to the previous menu.

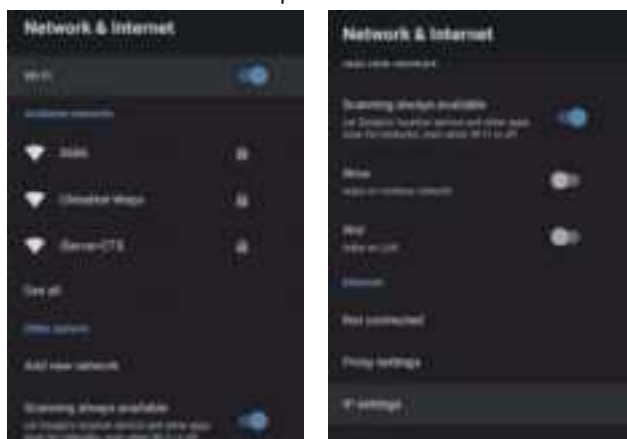

Channel



1. Press **▼ / ▲** button to select the option that you want to adjust in the **CHANNEL** menu.
2. Press **Enter** button to adjust.
3. After finishing your adjustment, Press **Enter** button to save and return to the previous menu.

Channel Sources: Press **▼/▲** button to select Channel Sources ,then press **Enter/►** button to enter.

 


Customize Channel List : Press **▼/▲** button to select Customize Channel List ,then press **Enter** button to enter .

Channel Installation Mode : Press **▼/▲** button to select Channel Installation Mode ,then press **Enter** button to enter . (Optional:Antenna/Cable)

Multi Audio:Press **▼/▲** button to select Multi Audio , then press **Enter** button to enter . (Optional:English/Espanol/Francais)

Parental Controls: Press **▼/▲** button to select Parental Controls, press the **Enter** button to enter.

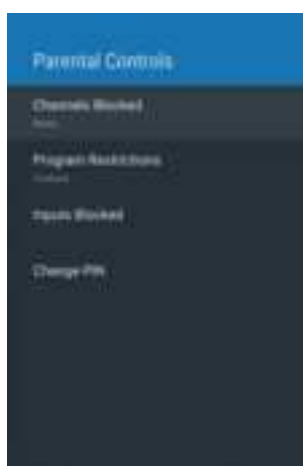

Channels Blocked: Press **▼/▲** button to select Channels Blocked.

 
Program Restrictions: Press **▼/▲** button to select Program Restrictions, press the button to enter **ON**

Rating Systems: Press **▼/▲** button to select Rating Systems, press **ENTER** button to enter.

Ratings: Press **▼/▲** button to select Ratings.

Inputs Blocked: Press **▼/▲** button to select Inputs Blocked. (Optional: TV/Composite/Component/HDMI1/HDMI2/HDMI3)

KEYBOARD

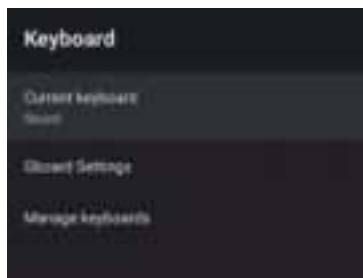


Current keyboard – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu.

Gboard Settings– Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu.

Manage keyboards– Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu.

 INPUTS

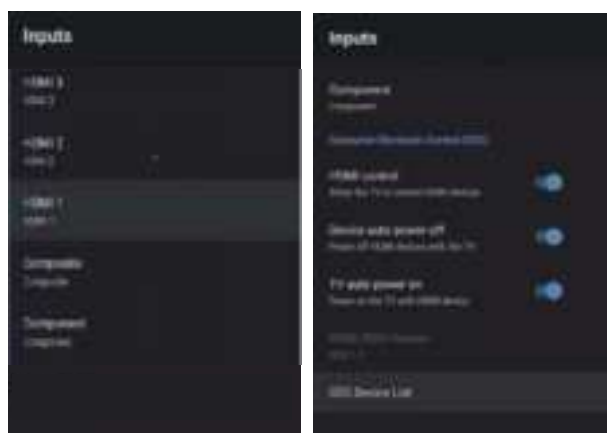

Inputs– Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu.

HDMI control – Press ▲/▼ button to select the option then press **OK** button to choose ON/OFF.

Device auto power off – Press ▲/▼ button to select the option then press **OK** button to choose ON/OFF.

TV auto power on – Press ▲/▼ button to select the option then press **OK** button to choose ON/OFF.

HDMI EDID Version – show EDID version.

CEC Device List – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu.

POWER



 
Sleep Timer – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu. (Optional: off, 10 minutes, 20 minutes, 30 minutes, 40 minutes, 50 minutes, 60 minutes, 90 minutes, 120 minutes).

Picture off – Press ▲/▼ button to select the option then press **OK** button to choose ON/OFF.

Switch off timer – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu. (Optional: off, 30 minutes, 60 minutes, 90 minutes, 120 minutes, 150 minutes, 180 minutes, 210 minutes, 240 minutes)

No Signal Auto Power Off – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu. (Optional: off, 5 minutes, 10 minutes, 15 minutes, 30 minutes, 60 minutes).

PICTURE

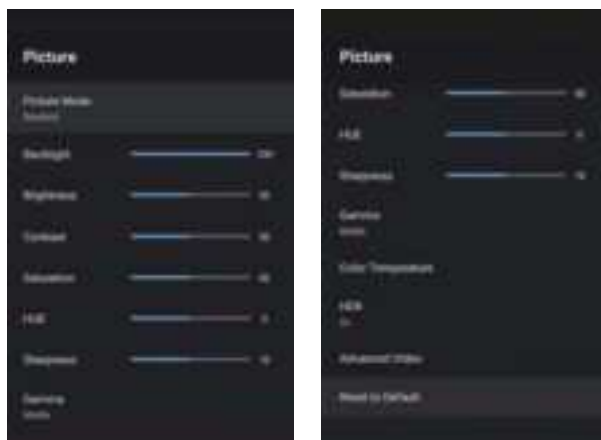

Picture Mode – Press ▲/▼ button to select the option button to enter the sub-menu. (Optional: user, Standard, Vivid, Sport, Movie, Game, Energy saving).

Backlight/Brightness/Contrast/Saturation/HUE/Sharpness– Press ▲/▼ button to select the option. Press ◀ to decrease the parameter. Press ▶ to increase the parameter.

Gamma – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu. (Optional: Dark, middle, Bright).

 
Color Temperature – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu.

HDR– Press ▲/▼ button to select the option the press **OK** button to enter the sub-menu. (Optional: on, off).

Advanced Video – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu.

Reset to Default – Reset all settings to the factory defaults.

REMOTE&ACCESSORIES

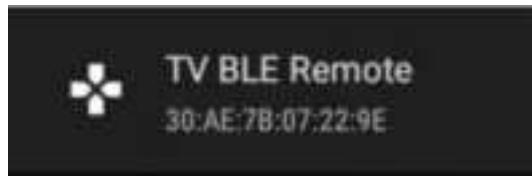

In this menu,you can pair Bluetooth devices.

- 1.Press the "**HOME**" and "**LEFT**" buttons at the bottom of the remote control for 5 seconds.
- 2.When the LED starts to flash, release it. The remote controller will send the pairing signal to the TV and display the information of the remote control on the right side of the screen.
- 3.Press the **OK** button to display the pairing. If the paired is displayed, the connection is successful.
- 4.If the couldn't pair appears, the connection fails. Wait 30 seconds and then press the "**HOME**" and "**LEFT**" buttons at the bottom of the remote control for 5 seconds to repeat the previous steps.
- 5.Press **BACK** or **EXIT** button return to the previous menu.

ADD AND USE OF MULTI MEDIA PLAYER



1. In the HOME interface, select the + icon in the APP column to add the application, and click OK. Press up and down to select the MultiMediaPlayer application, and click OK to add it to the HOME interface.



2. Select OK key to enter Multi Media Player and display Video, Photo, Audio, Text. After inserting the usb flash drive, you can view the corresponding files in the usb flash drive.

NOTE

The menu may be different depending on when you purchased the TV.

TROUBLESHOOTING

Please make these simple checks before calling service. These tips may save you time and money since charges for receiver installation and adjustments of customer controls are not covered under your warranty.

Symptoms	Items to Check and Actions to Follow
"Ghost" or double image	<ul style="list-style-type: none">• This may be caused by obstruction to the antenna due to high rise buildings or hills. Using a highly directional antenna may improve the picture.
No power	<ul style="list-style-type: none">• Check if the TV's AC power cord is plugged into the outlet.• Unplug the TV, wait for 60 seconds. Then reinsert plug into the outlet and turn on the TV again.
No picture	<ul style="list-style-type: none">• Check antenna connections at the rear of the TV to see if it is properly connected to the TV.• Possible broadcast station trouble. Try another channel.• Adjust the contrast and brightness settings.• Check the Closed Captions control. Some TEXT modes could block the screen.
Good picture but no sound	<ul style="list-style-type: none">• Increase the volume level by pressing the VOL+ button on the remote control or on the TV side control panel.• Press the MUTE button on the remote control to ensure mute is off.
Good sound but poor color	<ul style="list-style-type: none">• Adjust the contrast, color and brightness settings.
Poor picture	<ul style="list-style-type: none">• Poor picture quality may occur when an activated S-VHS camera or camcorder is connected to your TV and other peripherals at the same time. Switch off one of the peripherals.
Snowy picture and noise	<ul style="list-style-type: none">• Check the antenna connection.
Horizontal dotted line	<ul style="list-style-type: none">• This may be caused by electrical interference (e.g. hair dryer, nearby neon lights, etc.) Turn off the equipment.
Television not responding to remote control	<ul style="list-style-type: none">• Check whether the batteries are working. Replace if necessary.• Clean the remote control sensor lens on the TV.• You can still use the buttons on the side of your TV.
Pixels (dots) that are always dark or always lit	<ul style="list-style-type: none">• Your TV is precision-manufactured using an extremely high level of technology. However, sometimes pixels may not display correctly. These types of occurrences are inherent to this type of product and do not constitute a defective product.

