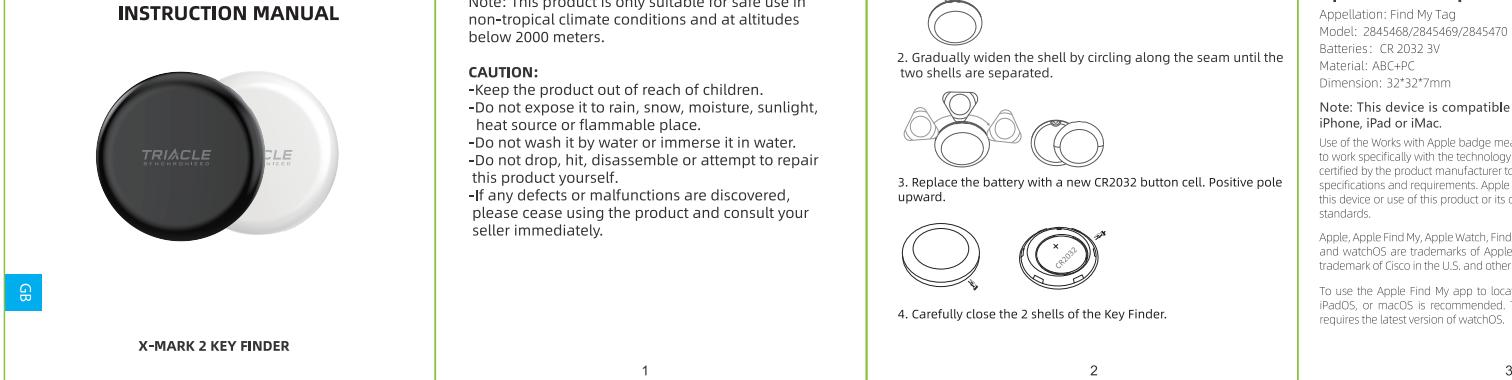
 INSTRUCTION MANUAL Thank you for choosing this X-Mark 2 Key Finder. Please read the following instructions carefully before using the product. Retain this manual for future reference. Note: This product is only suitable for safe use in non-tropical climate conditions and at altitudes below 2000 meters. CAUTION: - Keep the product out of reach of children. - Do not expose it to rain, snow, moisture, sunlight, heat source or flammable place. - Do not wash it with water or immerse it in water. - Do not drop, hit, disassemble or attempt to repair this product yourself. - If any defects or malfunctions are discovered, please cease usage with the product and consult your retailer immediately.  How to replace the battery 1. Insert the snap pin into the port and pry to loosen the buckle between the two shells, and get it open as needed. 2. Gradually widen the shell by circling along the seam until the two shells are separated. 3. Replace the battery with a new CR2032 button cell. Positive pole upward. 4. Carefully close the 2 shells of the Key Finder.	Product features 1. Power On 2. MFi certification product 3. Support Android location Find My network Specification parameter Application: Find My Tag Model: 2845460/2845469/2845470 Battery: CR 2032 3V Material: ABS+PC Dimensions: 32*32*7mm iPhone: iOS 14.5 or above Android: Android 10.0 or above Note: This device is compatible only with iOS 14.5 or above on iPhone, iPad or Mac. Use of the works with Apple logo means that a product has been designed and certified by Apple Inc. Apple is not responsible for the operation of the product. The product is not certified by Apple Inc. and is not certified by the product manufacturer to meet Apple Find My network product specifications and requirements for the operation of the product. Do not use this product or its components with safety and regulatory standards. Apple, Apple Find My, Apple Watch, iPhone, iPad, AirPods, Mac, macOS, iOS, Android, and the Apple logo are trademarks of Apple Inc., registered in the U.S. and other countries. All other trademarks are the property of their respective owners. To use the Apple Find My app to locate items, the latest version of iOS, Android, or macOS is recommended. The Find Items app on Apple Watch requires the latest version of watchOS. OPERATIONS 1. Power On Put out the insulation film then the product is powered on. 2. Pair The Device 1. Find My 2. Add New Item 3. Tap "Other Supported Item" 4. Select desired items and tap "Add Item"	OPERATIONS 1. Power On Put out the insulation film then the product is powered on. 2. Pair The Device 1. Find My 2. Add New Item 3. Tap "Other Supported Item" 4. Select desired items and tap "Add Item" OPERATIONS 1. Power On Put out the insulation film then the product is powered on. 2. Pair The Device 1. Find My 2. Add New Item 3. Tap "Other Supported Item" 4. Select desired items and tap "Add Item"	OPERATIONS 1. Power On Put out the insulation film then the product is powered on. 2. Pair The Device 1. Find My 2. Add New Item 3. Tap "Other Supported Item" 4. Select desired items and tap "Add Item" OPERATIONS 1. Power On Put out the insulation film then the product is powered on. 2. Pair The Device 1. Find My 2. Add New Item 3. Tap "Other Supported Item" 4. Select desired items and tap "Add Item"	OPERATIONS 1. Power On Put out the insulation film then the product is powered on. 2. Pair The Device 1. Find My 2. Add New Item 3. Tap "Other Supported Item" 4. Select desired items and tap "Add Item" OPERATIONS 1. Power On Put out the insulation film then the product is powered on. 2. Pair The Device 1. Find My 2. Add New Item 3. Tap "Other Supported Item" 4. Select desired items and tap "Add Item"	OPERATIONS 1. Power On Put out the insulation film then the product is powered on. 2. Pair The Device 1. Find My 2. Add New Item 3. Tap "Other Supported Item" 4. Select desired items and tap "Add Item" OPERATIONS 1. Power On Put out the insulation film then the product is powered on. 2. Pair The Device 1. Find My 2. Add New Item 3. Tap "Other Supported Item" 4. Select desired items and tap "Add Item"
 BRUGERVEJLEDNING Tak, for dit valg af denne X-Mark 2 Key Finder. Læs følgende instruktioner grundigt, før produktet tages i brug. Behold denne brugsvejledning til senere brug. Bemærk: Dette produkt er kun egnet til sikker brug i et ikke-tropisk klima og i højder under 2000 meter. FORSIGTIG: - Produktet skal holdes uden for børns rækkevidde. - Produktet må ikke udsættes for regn, sne, fugt, sollys eller varmekilder eller bruges på brændbare steder. - Produktet må ikke vaskes i vand eller nedskæres i vand. - Hvis produktet falder, støttes eller forsvares, skal du straks kontakte din forhandler.  Sådan skiftes batteriet 1. Sæt stiften ind i hullet, og træk den for at løse spærrelæddet mellem de to beslag, og indtil der kommer et mellemrum. 2. Åbn forsigtigt beslagene ved at føre stift langs rillen, indtil de to beslag er adskilt. 3. Sæt 3 stk. batterier med et nyt CR2032-nappabatteri. Med den positive pol vendt opad. 4. Luk forsigtigt de 2 beslag på din Key Finder.	BRUG 1. Tænd Træk stiftene ud af hullerne, og tænd produktet. 2. Sådan parer enheden 1. Find My 2. Add New Item 3. Tap "Other Supported Item" 4. Select desired items and tap "Add Item" BRUG 1. Tænd Træk stiftene ud af hullerne, og tænd produktet. 2. Sådan parer enheden 1. Find My 2. Add New Item 3. Tap "Other Supported Item" 4. Select desired items and tap "Add Item"	BRUG 1. Tænd Træk stiftene ud af hullerne, og tænd produktet. 2. Sådan parer enheden 1. Find My 2. Add New Item 3. Tap "Other Supported Item" 4. Select desired items and tap "Add Item" BRUG 1. Tænd Træk stiftene ud af hullerne, og tænd produktet. 2. Sådan parer enheden 1. Find My 2. Add New Item 3. Tap "Other Supported Item" 4. Select desired items and tap "Add Item"	BRUG 1. Tænd Træk stiftene ud af hullerne, og tænd produktet. 2. Sådan parer enheden 1. Find My 2. Add New Item 3. Tap "Other Supported Item" 4. Select desired items and tap "Add Item" BRUG 1. Tænd Træk stiftene ud af hullerne, og tænd produktet. 2. Sådan parer enheden 1. Find My 2. Add New Item 3. Tap "Other Supported Item" 4. Select desired items and tap "Add Item"	BRUG 1. Tænd Træk stiftene ud af hullerne, og tænd produktet. 2. Sådan parer enheden 1. Find My 2. Add New Item 3. Tap "Other Supported Item" 4. Select desired items and tap "Add Item" BRUG 1. Tænd Træk stiftene ud af hullerne, og tænd produktet. 2. Sådan parer enheden 1. Find My 2. Add New Item 3. Tap "Other Supported Item" 4. Select desired items and tap "Add Item"	BRUG 1. Tænd Træk stiftene ud af hullerne, og tænd produktet. 2. Sådan parer enheden