



IMPORTANT SAFETY PRECAUTIONS

When using your Orbit Bluetooth Radio Speaker, basic safety precautions should always be followed, including the following:

1. READ ALL INSTRUCTIONS BEFORE USING YOUR SPEAKER.
2. Do not use your speaker near water. Clean using a soft cloth or paper towel.
3. Do not place your speaker on any wet surfaces.
4. Do not allow children to play with your speaker without adult supervision.
5. Do not expose your speaker to excessive heat, flames or fire.
6. Always press all buttons or switches carefully. Do not mishandle your speaker.
7. Do not use in extremely dry environments, as this can lead to static discharge during usage.
8. Do not expose your speaker to temperatures above 40°C. Keep out of direct sunlight.
9. Do not attempt to repair this product yourself. Contact a qualified service center if your speaker is in need of service.
10. Do not drop, puncture or expose your speaker to excessive trauma.
11. Your speaker is not intended for commercial use.
12. Do not place near objects that generate a strong magnetic field.
13. Unplug your speaker when not in use for long periods of time or during lightning storms.
14. Use a soft cloth to clean your speaker. Never use any harsh chemicals or detergents. Make sure your speaker is dry before charging.
15. Please recycle or dispose of your speaker properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of your speaker for further information.

BATTERY WARNING:

- The device is equipped with an integrated lithium ion battery. The battery cannot be replaced. Do not attempt to remove the battery from the device.
- Do not dispose of in fire or expose to excessive heat.
- Do not crush, puncture, incinerate, or short circuit external contacts.
- Please recycle or dispose of the battery properly. Contact your local recycling facilities and/or the manufacturer for further information.

INTRODUCTION

Thank you for purchasing the Orbit Bluetooth Radio Speaker, item OR1086NS . You can use your speaker with most smartphones and Bluetooth devices to stream music. In order to get the best results, please read this manual first before using your speaker.

PACKAGE CONTENTS


- Orbit OR1086NS Bluetooth Speaker
- USB Charging Cable
- User's Manual with Warranty Information

SPECIFICATIONS

Bluetooth Version: 5.0
Bluetooth Range: Up to 33 feet (10 meters)
Input: DC5V/200-400MA
Frequency: 2.4G hz
Battery Type: 3.7V 300MA Lithium
Functions: Bluetooth, Hands Free Phone Answer
Charge Time: Approximately 1.5 Hours
Play Time: Approximately 2.5 Hours*


*Applicable at 50% of maximum volume. Results will be lower when volume is higher.

A QUICK LOOK AT YOUR DEVICE

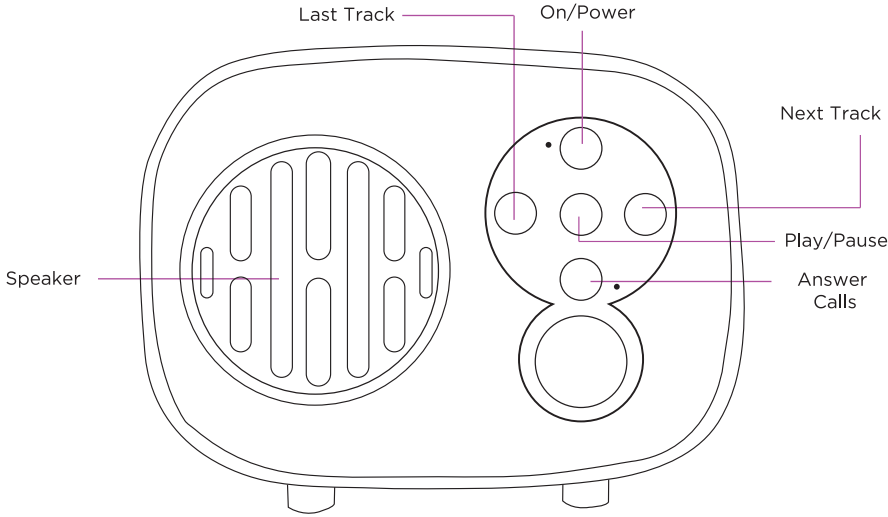

CHARGING YOUR SPEAKER

-
-
-
1. The USB charging cable has a Micro USB plug and a standard USB plug.
 2. Insert the USB charging cable's Micro USB plug into the charging port on your speaker.
 3. Insert the USB charging cable's standard USB plug into the USB port of a computer or suitable USB charging adapter.

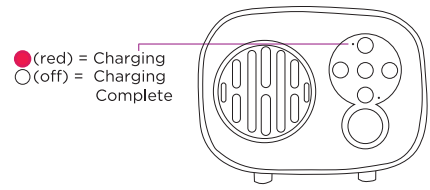

4. The Charging Indicator Light turns red while the speaker is charging then turns off once charging is complete.

NOTES:

- Remove the charging cable once charging is complete.
- Overcharging could reduce the life of the battery.
- A charged battery will lose its capacity if it is not used on a regular basis.

Important: To avoid a complete discharge of the battery, charge your speaker at least once every six months.

BLUETOOTH PAIRING

-
-
-
-
1. Press and hold the On/Mode button for 3-4 seconds to power on your speaker.
 2. The LED indicator light flash white rapidly to indicate that your speaker is in pairing mode.
 3. Go to the Bluetooth settings menu on your phone. Make sure that Bluetooth is turned on. Connect to the device listed as "Orbit1086."
 4. The LED indicator light will remain white and shine steadily to indicate that your speaker is paired with your phone. Note that the light may blink slowly anytime music is playing.

USING YOUR SPEAKER

-
-
-
1. Press and hold the On/Power button for 3-4 seconds to power on or power off your speaker.
 2. Tap the Last Track button to return to the last track in a playlist. Tap the Next Track button to advance to the next track in a playlist.
 3. Press the Play/Pause Button to play a track. Press it again to pause a track.

FCC STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



ORBIT INNOVATIONS LLC
755 NEW YORK AVENUE
HUNTINGTON, NEW YORK, 11743