

Micro Hi-Fi System

KM1961

BEDIENUNGSANLEITUNG

DE

OWNER'S MANUAL

EN

MANUEL DE L'UTILISATEUR

FR

HANDLEIDING

NL

INSTRUKCJA OBSŁUGI

PL

MANUAL DE UTILIZARE

RO

POUŽÍVATEĽSKÁ PRÍRUČKA

SK

4. To stop the track, press the play / pause button or the STOP button on the remote control.
5. To change track, press the previous / next track button.
6. To rewind a track, press and hold the backward / forward button.
7. To change album, press the next / previous track button.

Programming playback

The device can play only selected tracks on the disc.

1. To program playback, press the STOP button on the remote control.
2. Then press the PROG button on the remote control - the device screen will display the message 001 P-01.
3. Press the next / previous track button or use the numeric keypad to select a track number. The screen will show the number of the selected track.
4. To move to the possibility of programming the next track, press the PROG button.
5. Successive pieces should be programmed in the same way.
6. To start playback of the programmed tracks, press the play / pause button.
7. To disable the Programmed Playback function, press the STOP button.

SPECIFICATION

General information

Tube preamplifier
 CD disc player
 Radio: FM / DAB+
 Bluetooth + NFC
 Remote control
 Playback from USB
 Charging external devices

Technical data

DAB+ frequency range: 174,928 - 239,200 MHz
 FM frequency range: 87,5 - 108 MHz
 Profiles Bluetooth: A2DP
 Range: up to 8 meters
 Max. Bluetooth transmission power: 4 dBm
 NFC working frequency: 13,56 MHz
 Woofer: 4,3" (110 mm)
 Tweeter: 1,5" (38 mm)
 Output power (RMS): 2 x 30 W

Impedance: 6 Ohm
 THD: <1% (1 KHz, 1 W)
 Inputs / outputs:
 Headphone output Jack 3,5 mm
 2 x RCA speaker outputs
 Audio input Jack 3,5 mm
 AUX input
 USB port (5 V $\equiv$ 1 A)
 Antenna socket
 Power socket
 Power consumption: 35 W
 Power supply: AC 100 - 240 V~; 50 - 60 Hz

Dimensions:

Main unit: 250 x 276 x 146 mm
 Speaker: 160 x 202 x 244 mm

LEARN MORE

For more information on this device visit: www.krugermatz.com. Read owner's manual carefully before using. Visit www.krugermatz.com website for more products and accessories. In case of any doubts or questions reach out to our Frequently Asked Questions section.



English
Correct Disposal of This Product
(Waste Electrical & Electronic Equipment)



It is forbidden to place equipment waste marked with the symbol of a crossed-out trash bin together with other waste. This equipment is subject to collection and recycling. The harmful substances it contains can cause environmental pollution and pose a threat to human health.

Made in China for LECHPOL ELECTRONICS Sp. z o.o. Sp.k., ul. Garwolińska 1, 08-400 Miętne.



www.krugermatz.com

Krüger&Matz is a registered trademark