 


10 Litre Smart Air Cooler

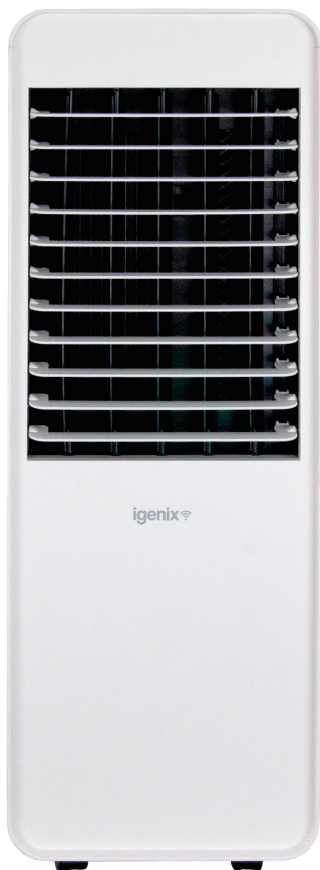

IGFD7010WIFI

Please read these instructions carefully before use and retain for future reference

**Before switching on your appliance,
always check for any damage which may have been caused in transit**

CONTENTS

Safety Instructions.....	3-4
Specification	5
Appliance Overview	5-6
Operating Instructions.....	7
Setting Up Wi-Fi Function.....	8
Cleaning and Maintenance	9
Trouble Shooting Guide.....	10
Fuse Replacement	11
Disposal Information.....	11
Igenix Warranty Information	12-13

SAFETY INSTRUCTIONS

Carefully read the instructions before operating the unit. Please retain this manual for future reference.

WARNINGS

- If the supply cord is damaged, it must be replaced by the manufacturer, a service agent or a similarly qualified person to avoid a hazard.
- Do not plug or unplug the device with wet hands.
- Household and indoor use only.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- This product must not be disassembled or repaired without an authorised service agent or a similarly qualified person to avoid a hazard. If abnormalities occur during use, the main power must be switched off immediately. Then contact one of the above.
- Unplug the appliance during filling and cleaning.
- Prior to cleaning or other maintenance, the appliance must be disconnected from the supply mains.
- When not in use, please unplug of the device from mains power supply.
- Do not block the air inlet and outlet.
- To prevent accidental injury or damage to the unit, please do not insert any foreign objects into the air inlet and outlet.
- This product will produce water vapor during operation, please keep it away from other electrical appliances.
- It is prohibited to use this unit in environments with flammable and explosive gases or where there is direct sunlight for a long period of time.

- When in use make sure the unit is stable to prevent it from falling over. If the unit falls over accidentally, and it contains water, unplug the power cord immediately and take it to a qualified service engineer.


NOTE

- Only use clean tap water or pure water for the product.
- Ensure the product is placed on a flat and stable surface before using.
- Please pour out all remaining water from the water tank after use.
- Please unplug the device if the product is not in use for a long time.
- The water pump will automatically stop working under the condition of water shortage when humidification is started.
- Do not place items on the unit or cover the unit in any way with cloth or similar materials.
- Move outer louvres up or down before turning on unit. Do not move whilst in operation.
- Check water pump is securely fastened before use.


SPECIFICATION

Model No.	IGFD7010WIFI
Size	L:264 x W:270 x H:777 mm
Voltage	220V
Power	60W
Volume	10L

 APPLIANCE OVERVIEW

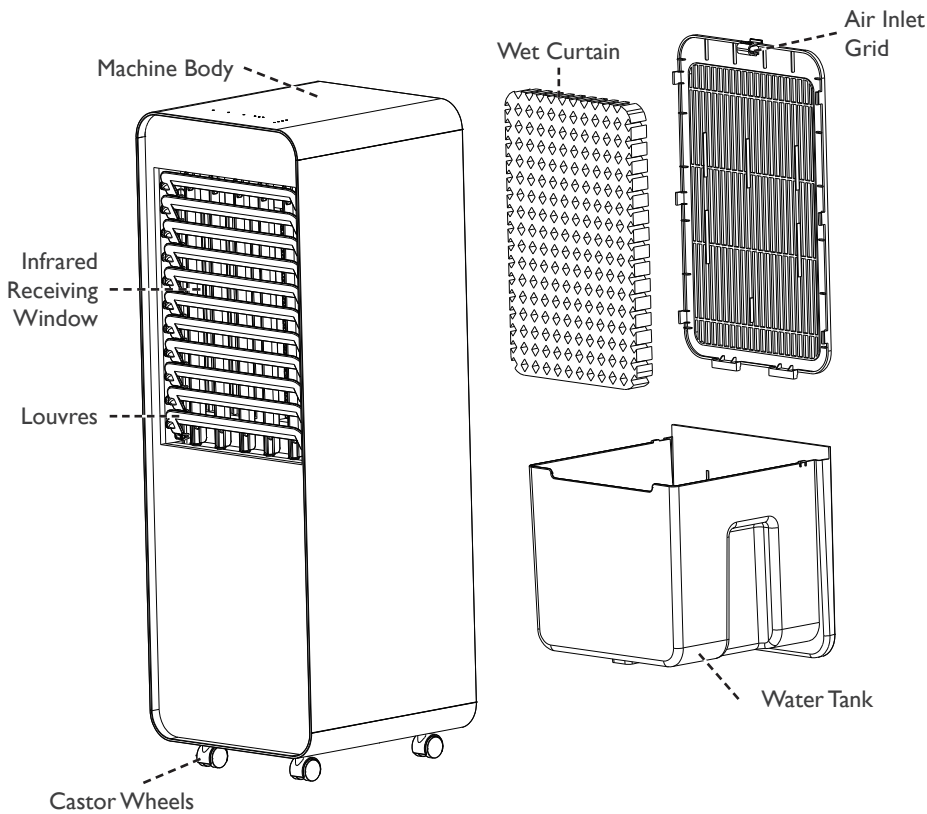

Remote Control:

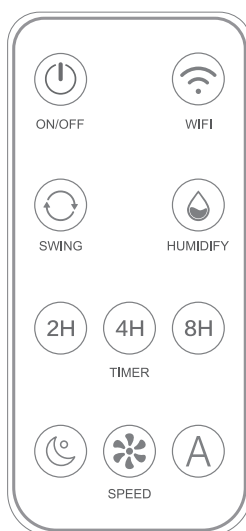 

Buttons:



Power



Humidification



Oscillation



Speed



Timer



2 h

4 h

8 h



Power button - Press the button to turn on/off the device



Humidification button - Press to turn on/off the humidification and cooling function.

Note: When the water level is too low or there is water shortage, the water pump will stop working.



Oscillation button – Press to turn on/off and fan with oscillate from left to right.



Wind speed button – Press to change the speed of the fan among Low-Mid-High. The light will indicate the current speed. Keep pressing until you reach the desired speed.



Low speed button – Press to change the speed of the fan into low speed.



Timer/Wi-Fi button - Short press to switch the timer duration on. The light will indicate the current duration set. Keep pressing until you reach the desired timer duration.

Press and hold down the timer button until the Wi-Fi light changes from a slow flash to a quicker flash. The device will now be in Wi-Fi network configuration mode.

OPERATING INSTRUCTIONS

Guidance on filling with water, disassembling and washing of the water tank

To Fill:

- A. Easily remove water tank from the back of the unit
- B. Separate water pump by turning clip anti-clockwise, then fully pull out the water tank, to fill with clean the water from tap. (Add pic or line drawing)
- C. Alternatively, you can leave the pump clip in place and fill with jug or with bottled water.
- D. Place in the ice packs and ensure not to go over the max level indicated on the window of the water tank
- E. For desired effect when in operation turn on the humidification function

NOTE:

- Always remove the power plug when filling with water and cleaning.
- Always make sure that the water pump is fixed securely in place before turning on the Air Cooler. If the water pump is not securely fastened it can affect the performance of the unit when in use.
- Ensure that the water tank is regularly emptied and cleaned when the Air Cooler is left unused for a prolonged period of time.
- Return ice pack to the freezer ahead of next use.

To Operate:

- A. Once water tank is filled, plug in to the main socket and switch on.
- B. The air cooler will beep, and all LED light will flash. The Air cooler is now in standby, and the Wi-Fi light will continuously flash slowly.
- C. To start press the power button (symbol) and the Air cooler will activate - it will default to the lowest wind speed setting.
- D. You can now select your required function from the list on page 2 in overview.

Delayed Timer Function:

Set a delay timer for the air cooler to automatically shut down after a selected period of time.

- Press the button repeatedly to cycle through delay shutdown time options ranging from 2-8 hours (the time chosen will be shown by the lights that are illuminated next to the time selected)

SETTING UP WI-FI FUNCTION

1. Setting up the Smart life app

- Download the Smart life app from Apple Store for IOS or from Google Play for android and install the app on your device. Alternatively scan the QR code and download this way



- After installing open and sign up by following the instructions on your phone. Once complete go into app.

NOTE: This product will only connect to 2.4GHz bandwidth. While most modern routers are dual bandwidth (both 5GHz and 2.4GHz) and will automatically select the correct one for individual Wi-Fi compatible appliances, please try manually adjusting your router to 2.4GHz if struggling to connect.

2. Pair the Air Cooler with the smart life app

- Plug your IGFD7010WIFI into a power socket and turn on the appliance by the power button. Check the Wi-Fi light is flashing slowly.
- Go into the app.
- Press and hold the Delay Timer button until it beeps, and the Wi-Fi light symbol starts to flash quicker.
- Please then follow instructions on the screen.
- From the Smart life app choose 'add device.'
- Choose auto scan to look for the Air Cooler IGFD7010WIFI
- Select the device found and press next. You may have to enter your Wi-Fi password and confirm
- Device should now be connecting
- Once connected select 'done' and you will be able to control the appliance via your phone.

Adding to Alexa for voice control

- Ensure the Air Cooler is turned on and go to the Alexa app
- Click on 'device settings' and add device
- It will ask you what device you would like to set up, scroll through to fans and select your brand of fan – if it is not there press other
- Press 'discover devices' it will then look for your device and could take up to a minute (Remember to have your device turned on beforehand)
- Once the fan has been found set up device (skip any parts not needed). It will then confirm the IGFD7010WIFI is set up ready press done.

CLEANING & MAINTENANCE

- Turn off the power of the device, unplug the power plug; pull out the water tank slightly.
- Remove the pump by unclipping anti clockwise.
- Pour out the remaining water in the water box and the body respectively, then use a clean cloth to clean the inside of the device and the water tank (it is recommended to clean once every 2 days. If you do not use the product, please clean and dry it after use.
- For the outside of the unit, wipe with a damp cloth.
- Be careful not to rinse the device directly with water, otherwise it will cause the danger of leakage and short circuit
- It is recommended to replace the wet curtain when the colour of wet curtain turns to yellow in a large area.

TROUBLE SHOOTING GUIDE

If you experience difficulties with the appliance, please check the suggestions below before contacting customer services:

Problem	Solution
The unit will not switch on	Check Trip Switch / Fuse
	Check if the plug is connected to mains socket correctly
	Check Main power is switched on at the socket
	Check batteries in the remote control
Runs for a short while then switches off	Check if air outlet is blocked, if so remove obstacle
	Check if Delay Timer function has been activated
Runs without cooling in Air Conditioning mode	The water tank is empty and needs to be re-filled
	Ice Packs need to go back to freezer to re freeze
	Ensure Humidity function is on
Water is leaking from unit	Check water tank is properly installed
	Check the unit is on a flat surface and is not tilted
	Check the water is not over the max window
	If moved when full water may have spilt out of the water tray on to main unit. Check and wipe clean

MAINS PLUG FUSE REPLACEMENT

Fuse Replacement (Class II)

Remove the fuse cover with a small flat head screw driver. Take out the fuse and replace with a new fuse of the same Amp. Replace the fuse cover and push back into place.



DISPOSAL INFORMATION

The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in normal unsorted municipal waste.

Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The crossed out “wheeled bin” symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.





Igenix Warranty Terms & Conditions

This product is guaranteed for a period of 12 months as standard from the date of purchase against mechanical and electrical defects. You can extend your warranty for a further 12 months by registering your product.

Upon registration we will cover your product for a period of 24 months from the original purchase date against any mechanical or electrical defects.

To qualify for the warranty, the product must be used for domestic household use only and in accordance with the instructions in the user manual. Any misuse of the product will result in the warranty being void.

The warranty does not cover accidental damage, misuse, neglect, tampering or incorrect adjustment or installation.

The warranty will be rendered invalid if the product is resold, has had its serial number removed (or has an invalid serial number), or if an unauthorised person has carried out any repairs or alterations.

The warranty does not cover accessories or consumable parts that require replacement under normal use. This includes shelving, dials, filters, belts and trays etc.

In the unlikely event of a breakdown please refer to the Troubleshooting guide in your user manual and check all plugs, fuses and the electricity supply.

If you still require assistance please contact our Customer Service department on **01473 271 272** or write to us at the following address:

**Customer Service Department
38 Bluestem Road, Ransomes Europark
Ipswich, IP3 9RR**

Please quote the Product Code which begins 'IG' or 'DF' and the PO Number on the rating label, and give details of the exact fault. We will then decide whether to repair or replace the item.

Before we arrange the repair or replacement you will be required to return a copy of your proof of purchase. Please retain your original.

If an item is replaced within the agreed warranty period, the warranty for the replacement item will be calculated from the purchase date of the original.

In the event that the product is inspected and no fault is found or the product is not within the warranty period you will be charged for the repair and any carriage costs.



Thank you for choosing Igenix

As a valued customer we would like to offer you a FREE 2 year warranty to cover your product against any electrical or mechanical defects.

This means that in the unlikely event you develop a fault or problem with your product we will happily repair or replace the item free of charge.

To qualify for the 2 year warranty you must register your product within 30 days of purchase. The full Terms & Conditions of our warranty policy are shown on the opposite page. They are also available on our website. **www.igenix.co.uk**



38 Bluestem Road, Ransomes Europark, Ipswich, IP3 9RR
EU: Castle Electrical Factors Ltd., Dundalk, A91 KA9R, IR
Tel. 01473 271 272

Disclaimer: Igenix operate a policy of continual improvement and development.
We therefore reserve the right to change/alter the specification and appearance of our appliances without prior notice.
All diagrams and images shown in this manual are for illustration purposes only.