




(5) Bluetooth connection

Press  to enter into Bluetooth Control connection page, then click "Speaker Pro BLE" to connect to the speaker.

(6) Line In input- mute

Press  to enter into Line IN input page, press  to mute music, press  to insert a line continue play. Press "Back" to main page.

(7) Equalizer, volume adjustment for Microphone and Music


Press  to enter into Sound Set page to adjust the volume for Music and Microphone.

Press Microphone button, and then turn Volume or Bass or Treble button to adjust the volume;

press Music button, and then turn ECHO or Microphone Volume or Delay to adjust the volume. There are 4 pre-set EQ modes: Pop, Classical, Jazz and Rock. You can also press G-Eq to access the graphic equalizer to set up your preferred equalize specification.

(8) MIC DSP selection

(9) Click SPEAKER PRO on the top left corner to exit from APPLE MUSIC PLAYER.

During  Sound Field Mode: DSP MODE has 5 choices: KTV, HALL, CAVE, CONCERT, STAOIUM; MIX VOLUME has 2 choices: BYPASS, EFFECT, swipe left and right to adjust the volume; press ECHO to adjust the volume of ATTENUATION or DELAY mode; press REVBER to adjust the volume of 5 choices: DRY, WET, WIDTH, ROOM, DAMPING; press VOICEC HANGE to adjust the volume of PITCH or FORMANT mode; press PITCH SHIFTER to adjust the volume of KEY mode; HOWLING CONTROL has 4 choices: FREQUENCY SHIFTER, HOWLING, PRECISE, MASSIVE.



(5)

(6)

(7)

(8)

(9)



PORTABLE BATTERY SPEAKER

User Manual PBX-115



Specifications:

Power:	20W
Frequency Response for main speaker:	45Hz-20KHz
Power Supply:	DC 9V

1.MIC VOLUME/MENU: Mic volume adjust. Push knob enter menu to adjust microphone bass (1b) & treble(1t)

2.ECHO: Microphone karaoke echo adjust

3.DELAY: Microphone karaoke delay adjust

4.LED display

5.TREBLE: Music treble adjust

6.BASS: Music bass adjust

7.VOLUME/EQ PUSH: Music volume adjust. Push knob enter to adjust music EQ

8.MIC1: Microphone input

9.MIC2: Microphone input

10.TF card input

11.USB: USB Player/Power Bank 5V 1A output

12.POWER/INPUT short time press button power on/input change long time press button power off

13.LIGHT/MODE (Light flash mode selection & Light witch on/off button)

14.PRIORITY Microphone priority on/off button

15.VOCAL Voice Cancel

16.Previous song


17.Play/Pause/FM: Click change Play and pause, Press 3 seconds enter FM scan

18.Next song

19.LINE input

20.DC 9V input

21.LED CHARGE STATUS: RED = Charging GREEN = Fully charged

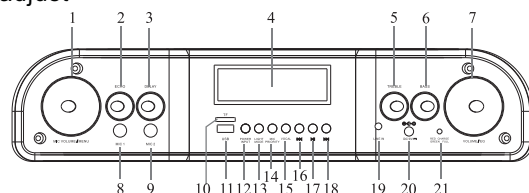

BASIC OPERATION

1. POWER/INPUT: long press (for above 2 seconds) to turn on the machine; during working state, short press to select mode: BT/LINE/FM (circulating); during working status, long press (for above 2 seconds) to turn off the machine.

2. PLAY/PAUSE: during playing status, short press to pause/mute; during FM mode, long press to automatically scan radio station.

3. MIC VOLUME-/+ & MENU PUSH: adjust volume; PUSH knob enter menu.

4. PREVIOUS/NEXT: during playing status, press to get back to a previous or next song.

5. MIC PRIORITY: insert microphone, then press MIC PRIORITY button, when you speak to microphone, audio signal turns weak; when you do not speak to microphone, audio signal turns normal.

6. VOLUME-/+ & EQ PUSH: adjust volume: PUSH knob enter menu: BA/tb/EQ mode/ JAZZ/ROCK etc (circulating).

7. USB: USB Player/Power Bank 5V 1A output.

FM Operation

A. Lightly press Power/Input button to switch to FM mode, long press PLAY/PAUSE button to automatically scan radio station, by pressing PREVIOUS or NEXT you can select a previous or next song.

B. When scanning radio programs, adjust the antenna to obtain the best reception.

Bluetooth:

Press the POWER/INPUT button on the panel control to select Bluetooth mode. Simultaneously open the Bluetooth setting on your phone, tablet or any other Bluetooth enabled audio device and select "PBX-115". The unit and device will then connect via Bluetooth to control the device via your phone, tablet etc please download the App "Speaker Pro".

Once the unit and device are connected via Bluetooth, open the "Speaker Pro" App on your phone. You can control Music, Light, USB Card, Bluetooth and Equalizer etc.

To control the device via your phone, please find and install the app "Speaker Pro". Open the App "Speaker Pro" on your phone, there are 7 function icons on the main page :

1. Bluetooth Music play

2. USB card play

3. Light control colour, brightness and light flash mode


4. FM Radio

5. Control Bluetooth connect

6. Line In input- mute

7. Equalizer, volume adjustment for music, Microphone and guitar input.

8. TF CARD PLAYER

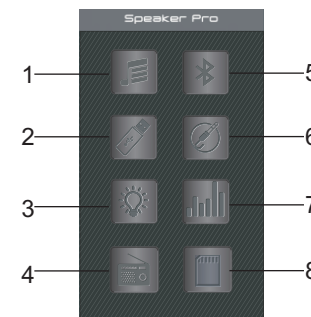

(1) Bluetooth Music play

Press to enter into Bluetooth Music play page, Press "Pick song to play" to Pick Song page to choose the song you want to play, press "Done" to return to Bluetooth Music play page, also you can operate pause, play, backward, forward & volume adjustment, repeat, random play. Press "Back" to return to the main page.

(2) USB card play

When inserting a USB into the speaker, press to enter the USB Card play page. To choose a song and play music on the USB card, press "Play" to enter into the play control page, where you can operate pause, play, backward, forward & volume adjustment. Press "List" to return to USB list page, press "Back" to return to the main page.

(3) Light control colours, brightness and colour change mode

Press to enter into Light Control page, you can select any colour to show the light colour on the speaker, as well as adjust the brightness of the light. To go back to main page, press "<" in the left corner.

Press "Profiles" to enter into Light Effect mode page, you can choose from a total of 12 pre-set light effect modes. To return to Light Control page, press "Light" in the left corner.

(4) FM Radio

Press to enter into FM radio mode, press SCAN to enter into radio program automatic scan. Press ◀▶ for radio program manual scan, ▲▼ Top and bottom trimming, Turn the TUNER button radio station can be adjusted. Slide around to adjust radio frequency between 87.5MHz~108.0MHz.



(1)

(2)

(3)

(4)